

CONFIDENTIAL

ADSP Reference Renderer/Capture Plugin RCG3AHPLN0101ZNO

User's Manual

RCG3AHPLN0101ZNOE

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

Rev. 1.00 Jun, 2017

CONFIDENTIAL

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other disputes involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawing, chart, program, algorithm, application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copy or otherwise misappropriation of Renesas Electronics products.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots etc.
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.
Renesas Electronics products are neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (space and undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for which the product is not intended by Renesas Electronics.
6. When using the Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat radiation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions or failure or accident arising out of the use of Renesas Electronics products beyond such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please ensure to implement safety measures to guard them against the possibility of bodily injury, injury or damage caused by fire, and social damage in the event of failure or malfunction of Renesas Electronics products, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures by your own responsibility as warranty for your products/system. Because the evaluation of microcomputer software alone is very difficult and not practical, please evaluate the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please investigate applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive carefully and sufficiently and use Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall not use Renesas Electronics products or technologies for (1) any purpose relating to the development, design, manufacture, use, stockpiling, etc., of weapons of mass destruction, such as nuclear weapons, chemical weapons, or biological weapons, or missiles (including unmanned aerial vehicles (UAVs)) for delivering such weapons, (2) any purpose relating to the development, design, manufacture, or use of conventional weapons, or (3) any other purpose of disturbing international peace and security, and you shall not sell, export, lease, transfer, or release Renesas Electronics products or technologies to any third party whether directly or indirectly with knowledge or reason to know that the third party or any other party will engage in the activities described above. When exporting, selling, transferring, etc., Renesas Electronics products or technologies, you shall comply with any applicable export control laws and regulations promulgated and administered by the governments of the countries asserting jurisdiction over the parties or transactions.
10. Please acknowledge and agree that you shall bear all the losses and damages which are incurred from the misuse or violation of the terms and conditions described in this document, including this notice, and hold Renesas Electronics harmless, if such misuse or violation results from your resale or making Renesas Electronics products available any third party.
11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

Trademarks

- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.
- ARM® is a registered trademark of ARM Limited (or its subsidiaries) in the EU and/or elsewhere.
All rights reserved.
- Windows and Windows Media are registered trademarks of Microsoft Corporation in the United States and other countries.
- Android is a trademark of Google Inc. Use of this trademark is subject to Google permissions.
- All other company names and product names mentioned in this manual are registered trademarks or trademarks of their respective companies.
- The registered trademark symbol (®) and trademark symbol (™) are omitted in this manual.

How to Use This Manual

1. Purpose and Target Reader

This manual is designed to provide the user with an understanding of the interface specifications of the Software product. It is intended for users designing application systems incorporating the Software product. Please refer to the related documents with this product.

Use this Software after carefully reading the precautions. The precautions are stated in the main text of each section, at the end of each section, and in the usage precaution section.

The revision history summarizes major corrections and additions to the previous version. It does not cover all the changes. For details, refer to this manual.

2. Restrictions on the Use of this Software

This software is MIT license. The certificates from the licensor do not provide any assurances to users that the product performs reliably, intellectual property rights are protected, disputes are resolved by contract, and specifications are not subject to major changes. The user should use this software at his or her own risk.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

3. Related Manuals

4. Technical Terms and Abbreviation

- Table of Contents -

1. OVERVIEW	3
1.1 Specifications Outline	3
1.2 Configuration	5
2. SOFTWARE SPECIFICATIONS	8
2.1 API specifications	8
2.2 Command	9
2.2.1 Command list	10
2.2.2 Detail of Command Specifications	20
2.3 Structures	81
2.3.1 XARelldr type structure	82
2.3.2 XARelcap type structure	83
2.4 Memory Specifications	84
2.4.1 Persistent Area	84
2.4.2 Stack Area	85
2.4.3 Heap Area	85
2.4.4 Input Buffer	86
2.4.5 Output Buffer	86
2.5 Error Processing	89
2.5.1 Error codes	90
3. PROCESSING FLOW	94

- List of Figures -

Figure 1-1 Example of the ADSP System Configuration for renderer function	5
Figure 1-2 Example of the ADSP System Configuration for capture function	6
Figure 2-1 Command sequence overview	9
Figure 2-2 PCM 16-bit Data Access (Little Endian Mode)	87
Figure 2-3 PCM 24-bit Data Access (Little Endian Mode)	87
Figure 2-4 Output Formats	88
Figure 3-1 Example of the Application Processing Flow	95

- List of Tables -

Table 1-1 Basic Specification	3
Table 1-2 Supported Specifications	3
Table 1-3 Memory Size Requirements	4
Table 1-4 Version Information	4
Table 2-1 API Functions of renderer	8
Table 2-2 API Functions of capture	8
Table 2-3 List of supported none supported command, subcommand	10
Table 2-4 List of Initialization Commands	12
Table 2-5 List of Set Commands for renderer	13
Table 2-6 List of Set Commands for capture	14
Table 2-7 List of Memory allocation Commands	15
Table 2-8 List of initialize commands	16
Table 2-9 List of Get commands for renderer	17
Table 2-10 List of Get commands for capture	18
Table 2-11 List of execution commands	19

Table 2-12	Structures	81
Table 2-13	XARelrdr type structure information	82
Table 2-14	XARelcap type structure information.....	83
Table 2-15	Persistent Area Description.....	84
Table 2-16	Stack Area Description.....	85
Table 2-17	Input Buffer Description.....	86
Table 2-18	Output Buffer Description.....	86
Table 2-19	Error Codes for Renderer	90
Table 2-20	Error Codes for Capture	92

1. Overview

This section provides an overview of the Renderer plugin. It contains renderer and capture function.

1.1 Specifications Outline

Renderer function plays the audio signal based on the parameter that was set.

Capture function capture/record the audio signal based on the parameter that was set.

Table 1-1 Basic Specification

Item	Description
DSP	Cadence Design Systems, Inc. HiFi2
Compiler	Xtensa C and C++ Compiler (version 12.0.4)
Endian	Little Endian

Table 1-2 Supported Specifications

Item	Description
Input data format	16-bit/24-bit linear PCM (fixed point)
Output data format	16-bit/24-bit linear PCM (fixed point)
Sampling frequency (Hz) supported	48000 / 44100 / 32000
Number of channels supported	Max 2 channels
Reentrant	Supported
Other	
Restrictions	

Table 1-3 Memory Size Requirements

Memory type	Location	Memory area name		Size (in bytes)	
Instruction	ROM	Instruction area		59041	
Data		Constant table area			
		Other area(Depended on the compiler)			
	Software work area Area breakdown	Persistent area	Size breakdown	30388	
		Scratch area		13972	
		D-TCM area		0	
		Built-in descriptor area		16384	
	User work area Area breakdown	Input buffer	Size breakdown	32	
		Output buffer		7536	
		Structure		0	
				6144	
	Stack area		1392		
	Stack area		464		
	Other area(Depended on the compiler)		0		
	RAM Capture	Software work area		Size breakdown	30376
		Area breakdown	Persistent area		13960
			Scratch area		0
			D-TCM area		16384
Built-in descriptor area			32		
User work area		Size breakdown	7552		
Area breakdown			Input buffer	6144	
			Output buffer	0	
			Structure	1408	
Stack area		480			
Other area(Depended on the compiler)		0			
RAM Renderer	Software work area		Size breakdown	30376	
	Area breakdown	Persistent area		13960	
		Scratch area		0	
		D-TCM area		16384	
		Built-in descriptor area		32	
	User work area		Size breakdown	7552	
	Area breakdown	Input buffer		6144	
		Output buffer		0	
		Structure		1408	
	Stack area		480		
Other area(Depended on the compiler)		0			

[Note] Area whose location is shown as ROM in the location column can be included in RAM or ROM.

[Note] Area whose location is shown as RAM in the location column can be included in RAM only.

[Note] Built-in is a memory area to allocate descriptor memory, which need in the DMAC transfer type of plugin.

Table 1-4 Version Information

Item	Description
Library Version information	Version 1.0.4
API Version information	Version 1.0.0

1.2 Configuration

Figure 1-1 shows an example of the ADSP system configuration which uses renderer function.

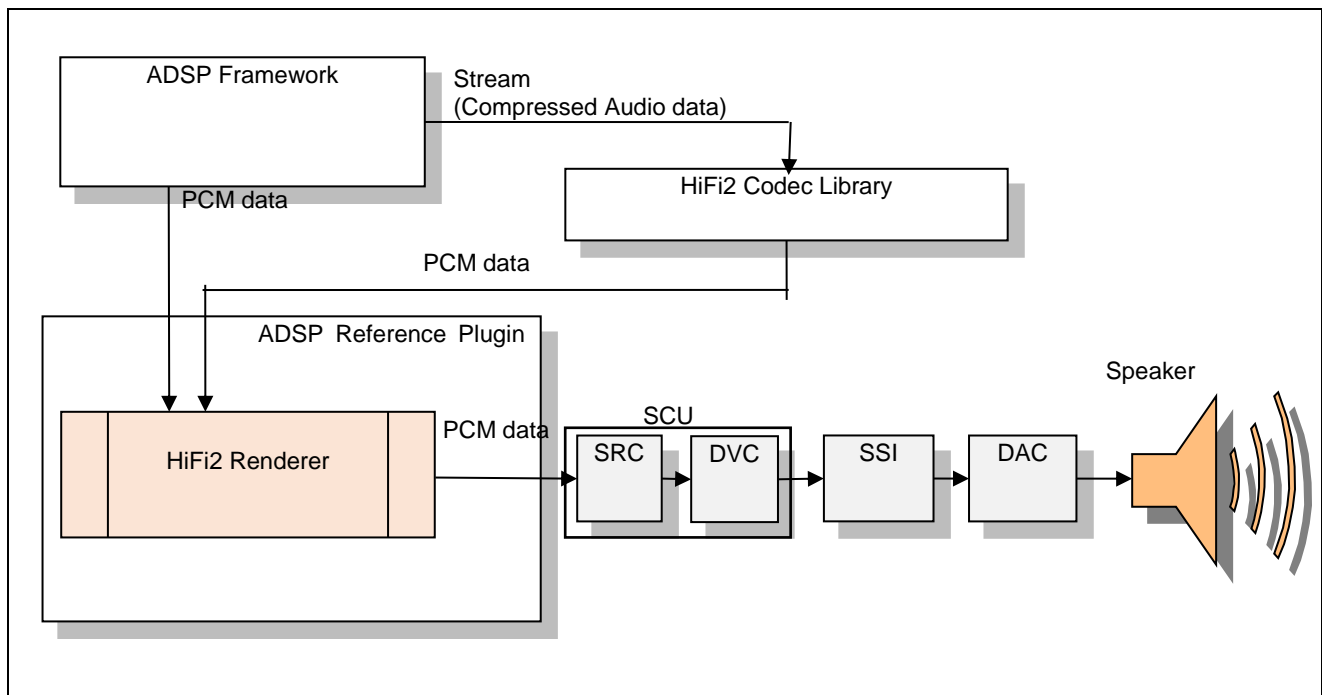


Figure 1-1 Example of the ADSP System Configuration for renderer function

Figure 1-1 shows an example of the ADSP system configuration which uses capture function.

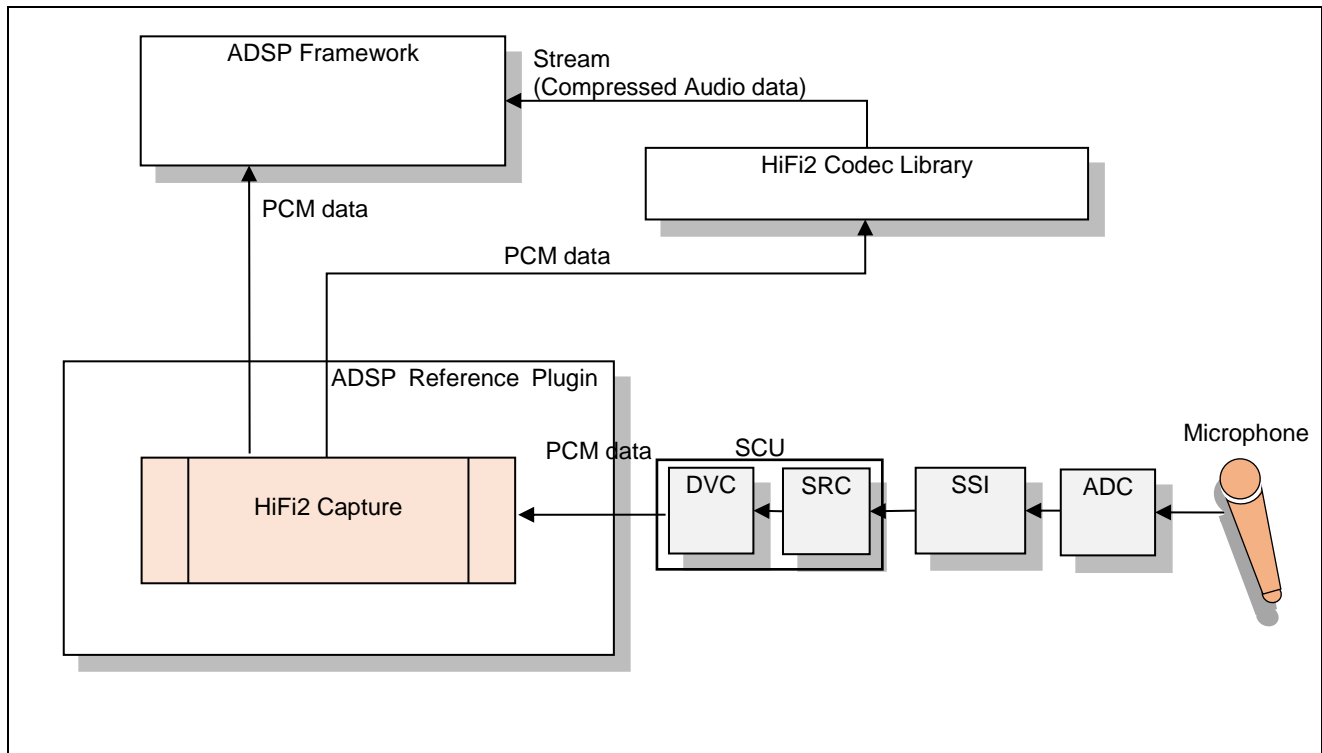


Figure 1-2 Example of the ADSP System Configuration for capture function

1. Stream (Compressed Audio data)
Compressed Audio data is a linear PCM data sample compressed according to the compression Audio specifications. For these specifications, depends on HiFi2 Codec Library.
2. HiFi2 Codec Library
It is Codec Library for HiFi2. It decodes the compression Audio in renderer case and encodes in capture case. The user should procure to suit the target system.
3. ADSP Framework
It controls ADSP Plugin. It is software provided separately as Framework.
4. HiFi2 Renderer (ADSP Reference Plugin)
It performs output handling of PCM data to other Audio device. It is this software set up as ADSP Reference Plugin.
5. HiFi2 Capture (ADSP Reference Plugin)
It performs input handling of PCM data from other Audio device. It is this software set up as ADSP Reference Plugin.
6. PCM data
16-bit linear PCM data which is a processing by this software.
7. SCU
It performs sampling rate converters (SRC) and volume control (DVC).

8. SSI

Send or receive audio data interfacing with a variety of devices offering I2C format.

9. ADC

The ADC converts an analog signal into 16-bit linear PCM data.

2. Software Specifications

2.1 API specifications

Because one interface function accesses the procedure that was appointed by a command in renderer plugin, it is used.

In renderer case

Table 2-1 API Functions of renderer

xa_rel_rdr	
Description	This API is the only access function to the renderer.
Syntax	XA_ERRORCODE xa_rel_rdr(xa_codec_handle_t p_xa_module_obj, WORD32 i_cmd, WORD32 i_idx, pVOID pv_value);
Parameters	p_xa_module_obj : Pointer to opaque API structure. i_cmd : Command. (defined in the supplied header files as) i_idx : Command subtype or index. (defined in the supplied header files as) pv_value : Pointer to the variable used to pass in, or get out properties, from state structure.
Returns	Error Code based on the success or failure of API command (defined in the supplied header files as)

In capture case

Table 2-2 API Functions of capture

xa_rel_cap	
Description	This API is the only access function to the capture.
Syntax	XA_ERRORCODE xa_rel_cap(xa_codec_handle_t p_xa_module_obj, WORD32 i_cmd, WORD32 i_idx, pVOID pv_value);
Parameters	p_xa_module_obj : Pointer to opaque API structure. i_cmd : Command. (defined in the supplied header files as) i_idx : Command subtype or index. (defined in the supplied header files as) pv_value : Pointer to the variable used to pass in, or get out properties, from state structure.
Returns	Error Code based on the success or failure of API command (defined in the supplied header files as)

2.2 Command

, it performs each processing by a combination of Command/Subcommand.

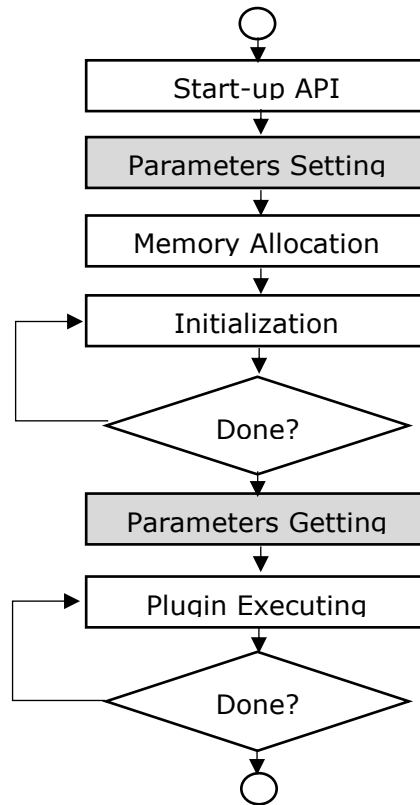


Figure 2-1 Command sequence overview

2.2.1 Command list

Below table presents commands used in renderer and capture case.

Table 2-3 List of supported none supported command, subcommand

Command	Sub command	Ren	Cap
XA_API_CMD_GET_LIB_ID_STRINGS	XA_CMD_TYPE_LIB_VERSION	Y	Y
	XA_CMD_TYPE_API_VERSION	Y	Y
XA_API_CMD_GET_API_SIZE	-	Y	Y
XA_API_CMD_INIT	XA_CMD_TYPE_INIT_API_PRE_CONFIG_PARAMS	Y	Y
	XA_CMD_TYPE_INIT_API_POST_CONFIG_PARAMS	Y	Y
	XA_CMD_TYPE_INIT_PROCESS	Y	Y
	XA_CMD_TYPE_INIT_DONE_QUERY	Y	Y
XA_API_CMD_SET_CONFIG_PARAM	XA_CAP_CONFIG_PARAM_PCM_WIDTH	N	Y
	XA_CAP_CONFIG_PARAM_CHANNELS	N	Y
	XA_CAP_CONFIG_PARAM_SAMPLE_RATE	N	Y
	XA_CAP_CONFIG_PARAM_FRAME_SIZE	N	Y
	XA_CAP_CONFIG_PARAM_INPUT1	N	Y
	XA_CAP_CONFIG_PARAM_DMACHANNEL1	N	Y
	XA_CAP_CONFIG_PARAM_INPUT2	N	Y
	XA_CAP_CONFIG_PARAM_DMACHANNEL2	N	Y
	XA_CAP_CONFIG_PARAM_OUT_SAMPLE_RATE	N	Y
	XA_CAP_CONFIG_PARAM_VOLUME_RATE	N	Y
	XA_RDR_CONFIG_PARAM_PCM_WIDTH	Y	N
	XA_RDR_CONFIG_PARAM_CHANNELS	Y	N
	XA_RDR_CONFIG_PARAM_SAMPLE_RATE	Y	N
	XA_RDR_CONFIG_PARAM_FRAME_SIZE	Y	N
	XA_RDR_CONFIG_PARAM_OUTPUT1	Y	N
	XA_RDR_CONFIG_PARAM_DMACHANNEL1	Y	N
	XA_RDR_CONFIG_PARAM_OUTPUT2	Y	N
	XA_RDR_CONFIG_PARAM_DMACHANNEL2	Y	N
	XA_RDR_CONFIG_PARAM_OUT_SAMPLE_RATE	Y	N
	XA_RDR_CONFIG_PARAM_VOLUME_RATE	Y	N
XA_API_CMD_GET_CONFIG_PARAM	XA_CAP_CONFIG_PARAM_PCM_WIDTH	N	Y
	XA_CAP_CONFIG_PARAM_CHANNELS	N	Y
	XA_CAP_CONFIG_PARAM_SAMPLE_RATE	N	Y
	XA_CAP_CONFIG_PARAM_FRAME_SIZE	N	Y
	XA_CAP_CONFIG_PARAM_INPUT1	N	Y
	XA_CAP_CONFIG_PARAM_DMACHANNEL1	N	Y
	XA_CAP_CONFIG_PARAM_INPUT2	N	Y
	XA_CAP_CONFIG_PARAM_DMACHANNEL2	N	Y
	XA_CAP_CONFIG_PARAM_OUT_SAMPLE_RATE	N	Y
	XA_CAP_CONFIG_PARAM_VOLUME_RATE	N	Y
	XA_RDR_CONFIG_PARAM_PCM_WIDTH	Y	N
	XA_RDR_CONFIG_PARAM_CHANNELS	Y	N
	XA_RDR_CONFIG_PARAM_SAMPLE_RATE	Y	N
	XA_RDR_CONFIG_PARAM_FRAME_SIZE	Y	N
	XA_RDR_CONFIG_PARAM_OUTPUT1	Y	N
	XA_RDR_CONFIG_PARAM_DMACHANNEL1	Y	N
	XA_RDR_CONFIG_PARAM_OUTPUT2	Y	N
	XA_RDR_CONFIG_PARAM_DMACHANNEL2	Y	N
	XA_RDR_CONFIG_PARAM_OUT_SAMPLE_RATE	Y	N
	XA_RDR_CONFIG_PARAM_VOLUME_RATE	Y	N
XA_API_CMD_GET_MEMTABS_SIZE	-	Y	Y
XA_API_CMD_SET_MEMTABS_PTR	-	Y	Y
XA_API_CMD_GET_N_MEMTABS	-	Y	Y
XA_API_CMD_GET_MEM_INFO_SIZE	-	Y	Y
XA_API_CMD_GET_MEM_INFO_ALIGNME	-	Y	Y

NT			
XA_API_CMD_GET_MEM_INFO_TYPE	-	Y	Y
XA_API_CMD_SET_MEM_PTR	-	Y	Y
XA_API_CMD_SET_INPUT_BYTES	-	Y	N
XA_API_CMD_INPUT_OVER	-	N	Y
XA_API_CMD_GET_CURIDX_INPUT_BUF	-	Y	N
XA_API_CMD_EXECUTE	XA_CMD_TYPE_DO_EXECUTE	N	Y
	XA_CMD_TYPE_DONE_QUERY	Y	N
XA_API_CMD_GET_OUTPUT_BYTES		N	Y

Ren: Renderer Cap: Capture

Y: command or sub command is used by renderer or capture.

N: command or sub command is not used by renderer or capture. They are presented in detailed command part to refer. Actually, they are not implemented.

-: None sub command

2.2.1.1 Start-up API

Table 2-4 List of Initialization Commands

upper stage : Command / lower step : Subcommand		Description
1	XA_API_CMD_GET_LIB_ID_STRINGS	Get the version of the library.
	XA_CMD_TYPE_LIB_VERSION	
2	XA_API_CMD_GET_LIB_ID_STRINGS	Get the version of the API.
	XA_CMD_TYPE_API_VERSION	
3	XA_API_CMD_GET_API_SIZE	Get the size of the API structure
	(NULL)	
4	XA_API_CMD_INIT	Set the default values of all the configuration parameters
	XA_CMD_TYPE_INIT_API_PRE_CONFIG_PARAMS	

2.2.1.2 Setting parameters

Table 2-5 List of Set Commands for renderer

upper stage : Command / lower step : Subcommand		Description
1	XA_API_CMD_SET_CONFIG_PARAM	Set the input PCM sample bit width to 16 or 24 bits
	XA_RDR_CONFIG_PARAM_PCM_WIDTH	
2	XA_API_CMD_SET_CONFIG_PARAM	Set the input PCM channels (Maximum is 2 channels)
	XA_RDR_CONFIG_PARAM_CHANNELS	
3	XA_API_CMD_SET_CONFIG_PARAM	Set the input PCM sampling frequency (supported 32000/44100/48000 kHz)
	XA_RDR_CONFIG_PARAM_SAMPLE_RATE	
4	XA_API_CMD_SET_CONFIG_PARAM	Set the input/output frame size
	XA_RDR_CONFIG_PARAM_FRAME_SIZE	
5	XA_API_CMD_SET_CONFIG_PARAM	Set the output destination Audio device 1 st for Renderer
	XA_RDR_CONFIG_PARAM_OUTPUT1	
6	XA_API_CMD_SET_CONFIG_PARAM	Set ADMA channel number usage for Audio device 1 st (supported Audio-DMAC, Audio-DMAC-pp)
	XA_RDR_CONFIG_PARAM_DMACHANNEL1	
7	XA_API_CMD_SET_CONFIG_PARAM	Set the output destination Audio device 2 nd for Renderer
	XA_RDR_CONFIG_PARAM_OUTPUT2	
8	XA_API_CMD_SET_CONFIG_PARAM	Set ADMA channel number usage for Audio device 2 nd (supported Audio-DMAC, Audio-DMAC-pp)
	XA_RDR_CONFIG_PARAM_DMACHANNEL2	
9	XA_API_CMD_SET_CONFIG_PARAM	Set the output PCM sampling frequency (supported 32000/44100/48000 kHz)
	XA_RDR_CONFIG_PARAM_OUT_SAMPLE_RATE	
10	XA_API_CMD_SET_CONFIG_PARAM	Set the output PCM volume rate compare with input PCM (supported from 0 – 8 times)
	XA_RDR_CONFIG_PARAM_VOLUME_RATE	

Table 2-6 List of Set Commands for capture

upper stage : Command / lower step : Subcommand		Description
1	XA_API_CMD_SET_CONFIG_PARAM	Set the input PCM sample bit width to 16 or 24 bits
	XA_CAP_CONFIG_PARAM_PCM_WIDTH	
2	XA_API_CMD_SET_CONFIG_PARAM	Set the input PCM channels (Maximum is 2 channels)
	XA_CAP_CONFIG_PARAM_CHANNELS	
3	XA_API_CMD_SET_CONFIG_PARAM	Set the input PCM sampling frequency (supported 32000/44100/48000 kHz)
	XA_CAP_CONFIG_PARAM_SAMPLE_RATE	
4	XA_API_CMD_SET_CONFIG_PARAM	Set the input/output frame size
	XA_CAP_CONFIG_PARAM_FRAME_SIZE	
5	XA_API_CMD_SET_CONFIG_PARAM	Set the input source Audio device 1 st for Capture
	XA_CAP_CONFIG_PARAM_INPUT1	
6	XA_API_CMD_SET_CONFIG_PARAM	Set ADMA channel number usage for Audio device 1 st (supported Audio-DMAC, Audio-DMAC-pp)
	XA_CAP_CONFIG_PARAM_DMACHANNEL1	
7	XA_API_CMD_SET_CONFIG_PARAM	Set the input source Audio device 2 nd for Capture
	XA_CAP_CONFIG_PARAM_INPUT2	
8	XA_API_CMD_SET_CONFIG_PARAM	Set ADMA channel number usage for Audio device 2 nd (supported Audio-DMAC, Audio-DMAC-pp)
	XA_CAP_CONFIG_PARAM_DMACHANNEL2	
9	XA_API_CMD_SET_CONFIG_PARAM	Set the output PCM sampling frequency (supported 32000/44100/48000 kHz)
	XA_CAP_CONFIG_PARAM_OUT_SAMPLE_RATE	
10	XA_API_CMD_SET_CONFIG_PARAM	Set the output PCM volume rate compare with input PCM (supported from 0 – 8 times)
	XA_CAP_CONFIG_PARAM_VOLUME_RATE	

2.2.1.3 Memory allocation

Table 2-7 List of Memory allocation Commands

upper stage : Command / lower step : Subcommand		Description
1	XA_API_CMD_GET_MEMTABS_SIZE	Get the size of the memory structures to be allocated for the plugin tables.
	(NULL)	
2	XA_API_CMD_SET_MEMTABS_PTR	Pass the memory structure pointer allocated for the tables.
	(NULL)	
3	XA_API_CMD_INIT	Calculate the required sizes for all the memory blocks based on the setting specific parameters.
	XA_CMD_TYPE_INIT_API_POST_CONFIG_PARAMETERS	
4	XA_API_CMD_GET_N_MEMTABS	Obtain the number of memory blocks required by plugin.
	(NULL)	
5	XA_API_CMD_GET_MEM_INFO_SIZE	Get the size of the memory type being referred to by the index.
	(NULL)	
6	XA_API_CMD_GET_MEM_INFO_ALIGNMENT	Get the alignment information of the memory type being referred to by the index.
	(NULL)	
7	XA_API_CMD_GET_MEM_INFO_TYPE	Get the type of memory being referred to by the index.
	(NULL)	
8	XA_API_CMD_SET_MEM_PTR	Set the pointer to the memory allocated for the referred index to the input value.
	(NULL)	

2.2.1.4 Initialize plugin

Table 2-8 List of initialize commands

upper stage : Command / lower step : Subcommand		Description
1	XA_API_CMD_SET_INPUT_BYTES	Set the number of bytes available in the input buffer.
	(NULL)	
2	XA_API_CMD_INPUT_OVER	Signal to the plugin the end of the bit stream in renderer case.
	(NULL)	
3	XA_API_CMD_INIT	Setup for the HW operation, and initialize state and configuration structure.
	XA_CMD_TYPE_INIT_PROCESS	
4	XA_API_CMD_INIT	Check if the initialization process has completed.
	XA_CMD_TYPE_INIT_DONE_QUERY	
5	XA_API_CMD_GET_CURIDX_INPUT_BUF	Get the number of input buffer bytes consumed.
	(NULL)	

2.2.1.5 Getting parameters

Table 2-9 List of Get commands for renderer

upper stage : Command / lower step : Subcommand		Description
1	XA_API_CMD_GET_CONFIG_PARAM	Get the output PCM sample bit width to 16 or 24 bits
	XA_RDR_CONFIG_PARAM_PCM_WIDTH	
2	XA_API_CMD_GET_CONFIG_PARAM	Get the output PCM channels (Maximum is 2 channels)
	XA_RDR_CONFIG_PARAM_CHANNELS	
3	XA_API_CMD_GET_CONFIG_PARAM	Get the output PCM sampling frequency (supported 32000/44100/48000 kHz)
	XA_RDR_CONFIG_PARAM_SAMPLE_RATE	
4	XA_API_CMD_GET_CONFIG_PARAM	Get the output PCM frame size
	XA_RDR_CONFIG_PARAM_FRAME_SIZE	
5	XA_API_CMD_GET_CONFIG_PARAM	Get Renderer output destination Audio device 1 st
	XA_RDR_CONFIG_PARAM_OUTPUT1	
6	XA_API_CMD_GET_CONFIG_PARAM	Get ADMA channel number usage for Audio device 1 st
	XA_RDR_CONFIG_PARAM_DMACHANNEL1	
7	XA_API_CMD_GET_CONFIG_PARAM	Get Renderer output destination Audio device 2 nd
	XA_RDR_CONFIG_PARAM_OUTPUT2	
8	XA_API_CMD_GET_CONFIG_PARAM	Get ADMA channel number usage for Audio device 2 nd
	XA_RDR_CONFIG_PARAM_DMACHANNEL2	
9	XA_API_CMD_GET_CONFIG_PARAM	Get the output PCM sampling frequency
	XA_RDR_CONFIG_PARAM_OUT_SAMPLE_RATE	
10	XA_API_CMD_GET_CONFIG_PARAM	Get the output PCM volume rate compare with input PCM
	XA_RDR_CONFIG_PARAM_VOLUME_RATE	

Table 2-10 List of Get commands for capture

upper stage : Command / lower step : Subcommand		Description
1	XA_API_CMD_GET_CONFIG_PARAM	Get the output PCM sample bit width to 16 or 24 bits
	XA_CAP_CONFIG_PARAM_PCM_WIDTH	
2	XA_API_CMD_GET_CONFIG_PARAM	Get the output PCM channels (Maximum is 2 channels)
	XA_CAP_CONFIG_PARAM_CHANNELS	
3	XA_API_CMD_GET_CONFIG_PARAM	Get the output PCM sampling frequency (supported 32000/44100/48000 kHz)
	XA_CAP_CONFIG_PARAM_SAMPLE_RATE	
4	XA_API_CMD_GET_CONFIG_PARAM	Get the output PCM frame size
	XA_CAP_CONFIG_PARAM_FRAME_SIZE	
5	XA_API_CMD_GET_CONFIG_PARAM	Get Capture input source Audio device 1 st
	XA_CAP_CONFIG_PARAM_INPUT1	
6	XA_API_CMD_GET_CONFIG_PARAM	Get ADMA channel number usage for Audio device 1 st
	XA_CAP_CONFIG_PARAM_DMACHANNEL1	
7	XA_API_CMD_GET_CONFIG_PARAM	Get Capture input destination Audio device 2 nd
	XA_CAP_CONFIG_PARAM_INPUT2	
8	XA_API_CMD_GET_CONFIG_PARAM	Get ADMA channel number usage for Audio device 2 nd
	XA_CAP_CONFIG_PARAM_DMACHANNEL2	
9	XA_API_CMD_GET_CONFIG_PARAM	Get the output PCM sampling frequency
	XA_CAP_CONFIG_PARAM_OUT_SAMPLE_RATE	
10	XA_API_CMD_GET_CONFIG_PARAM	Get the output PCM volume rate compare with input PCM
	XA_CAP_CONFIG_PARAM_VOLUME_RATE	

2.2.1.6 Execution

Table 2-11 List of execution commands

upper stage : Command / lower step : Subcommand		Description
1	XA_API_CMD_INPUT_OVER	Stop capture in capture case.
	(NULL)	
2	XA_API_CMD_SET_INPUT_BYTES	Set the number of bytes available in the input buffer.
	(NULL)	
3	XA_API_CMD_EXECUTE	Execute the capture
	XA_CMD_TYPE_DO_EXECUTE	
4	XA_API_CMD_EXECUTE	Check if the execution process has completed.
	XA_CMD_TYPE_DONE_QUERY	
5	XA_API_CMD_GET_OUTPUT_BYTES	Get the number of bytes output by the plugin in the last frame.
	(NULL)	
6	XA_API_CMD_GET_CURIDX_INPUT_BUF	Get the number of input buffer bytes consumed.
	(NULL)	

2.2.2 Detail of Command Specifications

The next sections describe this library command functions by using the description format below.

Subcommand	Name of subcommand
Synopsis	Outlines the function.
Arguments	Describes the arguments for the function.
Restrictions	Provides information such as precautions in using the function.

[Note] This syntax format complies with ANSI-C.

2.2.2.1 XA_API_CMD_GET_LIB_ID_STRINGS command

Subcommand	XA_CMD_TYPE_LIB_VERSION	
Description	This command obtains the version of the library in the form of a string. The maximum length of the string that the library will provide is 30 bytes. Therefore the application shall pass a pointer to a buffer of a minimum size of 30 bytes. This command is optional	
Arguments	p_xa_module_obj	
	NULL	
	i_cmd	
	XA_API_CMD_GET_LIB_ID_STRINGS	
	i_idx	
	XA_CMD_TYPE_LIB_VERSION	
	pv_value	
	Pointer to a character buffer in which the version of the library is returned.	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	pv_value is NULL.
Restrictions	-	

Example

```
char lib_version[30];  
res = (*api_func)(NULL,  
                  XA_API_CMD_GET_LIB_ID_STRINGS,  
                  XA_CMD_TYPE_LIB_VERSION,  
                  (pVOID) lib_version);
```

Subcommand	XA_CMD_TYPE_API_VERSION	
Description	This command obtains the version of the API in the form of a string. The maximum length of the string that the library will provide is 30 bytes. Therefore the application shall pass a pointer to a buffer of a minimum size of 30 bytes. This command is optional.	
Arguments	p_xa_module_obj	
	NULL	
	i_cmd	
	XA_API_CMD_GET_LIB_ID_STRINGS	
	i_idx	
	XA_CMD_TYPE_API_VERSION	
	pv_value	
	Pointer to a character buffer in which the version of the API is returned.	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	pv_value is NULL.
Restrictions	-	

Example

```
char api_version[30];
res = (*api_func)(NULL,
                  XA_API_CMD_GET_LIB_ID_STRINGS,
                  XA_CMD_TYPE_API_VERSION,
                  (pVOID) api_version);
```

2.2.2.2 XA_API_CMD_GET_API_SIZE command

Subcommand	(None)	
Description	This command is used to obtain the size of the API structure, in order to allocate memory for the API structure.	
Arguments	p_xa_module_obj	
	NULL	
	i_cmd	
	XA_API_CMD_GET_API_SIZE	
	i_idx	
	NULL	
	pv_value	
	Pointer to API size variable.	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	pv_value is NULL.
Restrictions	The application shall allocate memory with an alignment of 4 bytes.	

Example

```
WORD32 api_size;
res = (*api_func)(api_obj,
                  XA_CMD_TYPE_API_SIZE,
                  0,
                  &api_size);
```

2.2.2.3 XA_API_CMD_INIT command

Subcommand	XA_CMD_TYPE_INIT_API_PRE_CONFIG_PARAMS	
Description	This command is used to set the default value of the configuration parameters.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_INIT	
	i_idx	
	XA_CMD_TYPE_INIT_API_PRE_CONFIG_PARAMS	
	pv_value	
	NULL	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
Restrictions	-	

Example

```
res = (*api_func)(api_obj,
                  XA_API_CMD_INIT,
                  XA_CMD_TYPE_INIT_API_PRE_CONFIG_PARAMS,
                  NULL);
```

Subcommand	XA_CMD_TYPE_INIT_API_POST_CONFIG_PARAMS	
Description	This command is used to calculate the sizes of all the memory blocks required by the application. It should occur after the plugin specific parameters have been set.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_INIT	
	i_idx	
	XA_CMD_TYPE_INIT_API_POST_CONFIG_PARAMS	
	pv_value	
	NULL	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE (in Capture case) XA_RDR_CONFIG_FATAL_STATE (in Renderer case)	Incorrect sequence call (i.e. call before set memory table step)
	XA_CAP_EXEC_FATAL_INTERNAL (in Capture case) XA_RDR_EXEC_FATAL_INTERNAL (in Renderer case)	Invalid connection device setting path (I.e. setting SRC module for both device1 and device2).
Restrictions	-	

Example

```
res = (*api_func)(api_obj,
                  XA_API_CMD_INIT,
                  XA_CMD_TYPE_INIT_API_POST_CONFIG_PARAMS,
                  NULL);
```

Subcommand	XA_CMD_TYPE_INIT_PROCESS	
Description	Setup for the HW operation, and initialize state and configuration structure. No output data is created during initialization. In this state, plugin will check all hardware modules. If a module is busy, plugin will try to establish connection with next available one. If all module are busy, plugin will return error code.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_INIT	
	i_idx	
	XA_CMD_TYPE_INIT_PROCESS	
	pv_value	
	NULL	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_EXEC_FATAL_STATE (in Capture case) XA_RDR_EXEC_FATAL_STATE (in Renderer case)	Incorrect sequence call (i.e. call before post-configuration step or run pos-configuration without persistent buffer allocation)
	XA_CAP_EXEC_FATAL_HW (in Capture case) XA_RDR_EXEC_FATAL_HW (in Renderer case)	All hardware resource are not available.
Restrictions	-	

Example

```
res = (*api_func)(api_obj,
                  XA_API_CMD_INIT,
                  XA_CMD_TYPE_INIT_PROCESS,
                  NULL);
```

Subcommand	XA_CMD_TYPE_INIT_DONE_QUERY	
Description	This command checks to see if the initialization process has completed. If it has, the flag value is set to 1; else, it is set to zero. A pointer to the flag variable is passed as an argument.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_INIT	
	i_idx	
	XA_CMD_TYPE_INIT_DONE_QUERY	
	pv_value	
	Pointer to flag that indicates the completion of initialization process	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj or pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_EXEC_FATAL_STATE (in Capture case) (XA_RDR_EXEC_FATAL_STATE (in Renderer case)	Incorrect sequence call (i.e. call before post-configuration step)
Restrictions	-	

Example

```
WORD32 done;
res = (*api_func)(api_obj,
                  XA_API_CMD_INIT,
                  XA_CMD_TYPE_INIT_DONE_QUERY,
                  &done);
```


2.2.2.4 XA_API_CMD_GET_MEMTABS_SIZE command

Subcommand	None	
Description	This command is used to obtain the size of the table used to hold the memory blocks required for the plugin operation. The API returns the total size of the required table. A pointer to the size variable is sent with this API command and the plugin writes the value to the variable.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_MEMTABS_SIZE	
	i_idx	
	NULL	
	pv_value	
	Pointer to memory size variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj or pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE (in Capture case) XA_RDR_CONFIG_FATAL_STATE (in Renderer case)	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 memtab_size;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_MEMTABS_SIZE,
                  0,
                  &memtab_size);
```

2.2.2.5 XA_API_CMD_SET_MEMTABS_PTR command

Subcommand	None	
Description	This command is used to set the memory structure pointer in the library to the allocated value.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_MEMTABS_PTR	
	i_idx	
	NULL	
	pv_value	
	Allocated pointer	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj or pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj or pv_value is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE (in Capture case) XA_RDR_CONFIG_FATAL_STATE (in Renderer case)	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
pVOID memtab_ptr;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_MEMTABS_PTR,
                  0,
                  memtab_ptr);
```

2.2.2.6 XA_API_CMD_GET_N_MEMTABS command

Subcommand	None	
Description	This command is used to obtain the number of memory blocks needed by the plugin. This value is used as the iteration counter for the allocation of the memory blocks. A pointer to each memory block will be placed in the previously allocated memory tables. The pointer to the variable is passed to the API and the plugin writes the value to this variable.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_N_MEMTABS	
	i_idx	
	NULL	
	pv_value	
	Pointer to variable of number of memory blocks required to be allocated	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj or pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
Restrictions	-	

Example
WORD32 n_memtab;
res = (*api_func)(api_obj,
 XA_API_CMD_GET_N_MEMTABS,
 0,
 &n_memtab);

2.2.2.7 XA_API_CMD_GET_MEM_INFO_SIZE command

Subcommand	Memory index	
Description	This command obtains the size of the memory type being referred to by the index. The size in bytes is returned in the variable pointed to by the final argument.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_MEM_INFO_SIZE	
	i_idx	
	Index of the memory 0 - Persistent Area 1 - Input Buffer (in Renderer case) 1 - Output Buffer (in Capture case) 2 - D-TCM buffer 3 - Built-in memory	
	pv_value	
	Pointer to memory size.	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj or pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned 4 bytes
	XA_API_FATAL_INVALID_CMD_TYPE	Incorrect index
	XA_CAP_CONFIG_FATAL_STATE (in Capture case) XA_RDR_CONFIG_FATAL_STATE (in Renderer case)	Incorrect sequence call (i.e. call before post-configuration step)
Restrictions	-	

```
WORD32 mem_size;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_MEM_INFO_SIZE,
                  index,
                  &mem_size);
```

2.2.2.8 XA_API_CMD_GET_MEM_INFO_ALIGNMENT command

Subcommand	Memory index	
Description	This command gets the alignment information of the memory-type being referred to by the index. The alignment required in bytes is returned to the application.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_MEM_INFO_ALIGNMENT	
	i_idx	
	Index of the memory 0 - Persistent Area 1 - Input Buffer (in Renderer case) 1 - Output Buffer (in Capture case)] 2 - D-TCM buffer 3 - Built-in memory	
	pv_value	
	Pointer to the alignment info variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj or pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned 4 bytes
	XA_API_FATAL_INVALID_CMD_TYPE	Incorrect index
	XA_CAP_CONFIG_FATAL_STATE (in Capture case) XA_RDR_CONFIG_FATAL_STATE (in Renderer case)	Incorrect sequence call (i.e. call before post-configuration step)
Restrictions	-	

Example

```
WORD32 mem_align;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_MEM_INFO_ALIGNMENT,
                  index,
                  &mem_align);
```

2.2.2.9 XA_API_CMD_GET_MEM_INFO_TYPE command

Subcommand	Memory index	
Description	This command gets the alignment information of the memory-type being referred to by the index. The alignment required in bytes is returned to the application.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_MEM_INFO_TYPE	
	i_idx	
	Index of the memory 0 - Persistent Area 1 - Input Buffer (in renderer case) 1 - Output Buffer (in capture case) 2 - D-TCM buffer 3 - Built-in memory	
	pv_value	
	Pointer to the memory type variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj or pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned 4 bytes
	XA_API_FATAL_INVALID_CMD_TYPE	Incorrect index
	XA_CAP_CONFIG_FATAL_STATE (in Capture case) XA_RDR_CONFIG_FATAL_STATE (in Renderer case)	Incorrect sequence call (i.e. call before post-configuration step)
Restrictions	-	

Example

```
WORD32 mem_type;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_MEM_INFO_TYPE,
                  index,
                  &mem_type);
```

2.2.2.10 XA_API_CMD_SET_MEM_PTR command

Subcommand	Memory index	
Description	This command passes to the plugin the pointer to the allocated memory. This is then stored in the memory tables structure allocated earlier. For the input and output buffers, it is legitimate to execute this command during the main plugin loop.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_MEM_PTR	
	i_idx	
	Index of the memory 0 - Persistent Area 1 - Input Buffer (renderer case) 1 - Output Buffer (capture case) 2 - D-TCM buffer 3 - Built-in memory	
	pv_value	
	Pointer to the memory block	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj or pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes. pv_value is not aligned to required alignment for the requested memory block.
	XA_API_FATAL_INVALID_CMD_TYPE	Incorrect index
	XA_CAP_CONFIG_FATAL_STATE (in Capture case) XA_RDR_CONFIG_FATAL_STATE (in Renderer case)	Incorrect sequence call (i.e. call before post-configuration step)
Restrictions	The pointer must be correctly aligned to the requirements.	

Example

```
pVOID addr;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_MEM_PTR,
                  index,
                  addr);
```

2.2.2.11 XA_API_CMD_INPUT_OVER command

Subcommand	None	
Description	This command is used to tell the plugin that the input signal is over. The execution or initialization step will continue in loop until it all the remaining input data is processed.	
Arguments	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_INPUT_OVER
	i_idx	NULL
	pv_value	NULL
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj or pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_EXEC_FATAL_STATE (only for Capture)	Incorrect sequence call (i.e. call before initialization step – init process)
Restrictions	-	

Example

```
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_INPUT_OVER,
                  0,
                  NULL);
```


2.2.2.12 XA_API_CMD_SET_INPUT_BYTES command

Subcommand	None	
Description	In capture this command will do nothing. The purpose of this command is filled the full list of standard API. In renderer this command will set number of bytes available in the input buffer.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_INPUT_BYTES	
	i_idx	
	NULL	
	pv_value	
	Pointer to the input byte variable (Any value is OK with Capture case)	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj or pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes in renderer case.
	XA_RDR_EXEC_FATAL_INPUT	Invalid input buffer size (i.e. minus buffer size or buffer size is not align with sample size)
	XA_RDR_EXEC_FATAL_STATE (only for Renderer)	Input memory is not allocated before or Incorrect sequence call
Restrictions	-	

Example

```
WORD32 filled;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_INPUT_BYTES,
                  0,
                  &filled);
```

2.2.2.13 XA_API_CMD_GET_CURIDX_INPUT_BUF command

Subcommand	None	
Description	In capture, this command will return value 0 each time it's called In renderer, this command will return number of input buffer bytes consumed	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CURIDX_INPUT_BUF	
	i_idx	
	NULL	
	pv_value	
	Pointer to number variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj or pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_EXEC_FATAL_STATE (only for Renderer)	Input memory is not allocated before
Restrictions	-	

Example

```
WORD32 consumed;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CURIDX_INPUT_BUF,
                  0,
                  &consumed);
```

2.2.2.14 XA_API_CMD_EXECUTE command

Subcommand	XA_CMD_TYPE_DO_EXECUTE	
Description	This command executes the capture.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_EXECUTE	
	i_idx	
	XA_CMD_TYPE_DO_EXECUTE	
	pv_value	
	NULL	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj or pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_EXEC_FATAL_STATE (only implement in Capture case)	Incorrect sequence call (i.e. call before initialization step) Or output memory is not allocated before
Restrictions	-	

Example

```
res = (*api_func)(api_obj,
                  XA_API_CMD_EXECUTE,
                  XA_CMD_TYPE_DO_EXECUTE,
                  NULL);
```

Subcommand	XA_CMD_TYPE_DONE_QUERY	
Description	This command checks to see if the end of processing has been reached. If it is, the flag value is set to 1; else, it is set to zero. The pointer to the flag is passed as an argument. Processing by the plugin can continue for several invocations of the DO_EXECUTE command after the last input data has been passed to the plugin, so the application should not assume that the plugin has finished generating all its output until so indicated by this command.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_EXECUTE	
	i_idx	
	XA_CMD_TYPE_DONE_QUERY	
	pv_value	
	Pointer to the flag variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj or pv_value is NULL.
	XA_RDR_EXEC_FATAL_STATE (only implement in Renderer)	Incorrect sequence call (i.e. call before initialization step)
Restrictions	-	

Example

```
WORD32 done;
res = (*api_func)(api_obj,
                  XA_API_CMD_EXECUTE,
                  XA_CMD_TYPE_DONE_QUERY,
                  &done);
```

2.2.2.15 XA_API_CMD_GET_OUTPUT_BYTES command

Subcommand	None	
Description	This command obtains the number of bytes output by the plugin during the last execution.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_OUTPUT_BYTES	
	i_idx	
	NULL	
	pv_value	
	Pointer to the flag variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj or pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_EXEC_FATAL_STATE (only Capture)	Incorrect sequence call (i.e. call before initialization step) Or output memory is not allocated before
Restrictions	-	

Example

```
WORD32 produced;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_OUTPUT_BYTES,
                  0,
                  &produced);
```

2.2.2.16 XA_API_CMD_SET_CONFIG_PARAM command

2.2.2.16.1 Set command for renderer

Subcommand	XA_RDR_CONFIG_PARAM_PCM_WIDTH	
Description	Set the PCM sample bit width to 16 or 24 bits	
Arguments	p_xa_module_obj	Pointer to API Structure.
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_PCM_WIDTH	
	pv_value	
	Pointer to the sample bit width variable (valid value: 16 or 24)	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_RDR_CONFIG_NONFATAL_ERR_PCM_WIDTH	PCM sample width size is not valid
	XA_RDR_CONFIG_FATAL_ERR_MONO_24BIT	Setting is invalid
Restrictions	-	

Example
WORD32 pcm_width;
res = (*api_func)(api_obj,
 XA_API_CMD_SET_CONFIG_PARAM,
 XA_RDR_CONFIG_PARAM_PCM_WIDTH,
 &pcm_width);

Subcommand	XA_RDR_CONFIG_PARAM_CHANNELS	
Description	Set the PCM channels number	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_CHANNELS	
	pv_value	
	Pointer to the output channels variable (valid value: 1 or 2)	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_RDR_CONFIG_NONFATAL_ERR_CHANNELS	PCM input channels is invalid
	XA_RDR_CONFIG_FATAL_ERR_MONO_24BIT	Setting is invalid
Restrictions	Currently, there is no support for other channels mode other than monaural and stereo. Other setting format value is invalid.	

Example

```
WORD32 ch;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_CHANNELS,
                  &ch);
```

Subcommand	XA_RDR_CONFIG_PARAM_SAMPLE_RATE	
Description	Set the PCM sampling frequency	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_SAMPLE_RATE	
	pv_value	
	Pointer to the input sampling frequency variable (valid value: 32,000 / 44,100 / 48,000 Hz)	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_RDR_CONFIG_NONFATAL_ERR_SAMPLE_RATE	PCM input sampling frequency is invalid
Restrictions	-	

Example

```
WORD32 sample_rate;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_SAMPLE_RATE,
                  &sample_rate);
```


Subcommand	XA_RDR_CONFIG_PARAM_FRAME_SIZE	
Description	Set the PCM frame size	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_FRAME_SIZE	
	pv_value	
	Pointer to the input frame size variable (valid value: frame size is power of two value)	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_RDR_CONFIG_NONFATAL_ERR_FRAME_SIZE	PCM frame size value is not the power of two.
Restrictions	-	

Example

```
WORD32 frame_size;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_FRAME_SIZE,
                  &frame_size);
```

Subcommand	XA_RDR_CONFIG_PARAM_OUTPUT1	
Description	Set 1 st output destination device for Renderer	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_OUTPUT1	
	pv_value	
	Pointer to the output device	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_RDR_CONFIG_NONFATAL_ERR_SOURCE	PCM output source is invalid
Restrictions	-	

[Note] Value range of output source relates to the PDMA and ADMAC source destination enum. It is presented below:

SSI module index: DMAC_SSI_MODULE_MIN <= output_source <= DMAC_SSI_MODULE_MAX

SCU SRC output module index: DMAC_SCU_SRC_INPUT_MODULE_MIN <= output_source <= DMAC_SCU_SRC_INPUT_MODULE_MAX

SCU CMD module index: DMAC_SCU_CMD_MODULE_MIN <= output_source <= DMAC_SCU_CMD_MODULE_MAX

Other index: reserved, not used.

The output source information is necessary. Default value is 140 means that it is fault if output source is not set by user.

Example

```
WORD32 output_source;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_OUTPUT1,
                  &output_source);
```

Subcommand	XA_RDR_CONFIG_PARAM_DMACHANNEL1	
Description	Set ADMA channel number usage for 1 st Audio device.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_DMACHANNEL1	
	pv_value	
	Pointer to the Audio-DMAC / Audio-DMAC-peripheral-peripheral channels number XA_RDR_ADMAC_CH[29-60] : Use Audio-DMAC to transfer XA_RDR_ADMACPP_CH[0-28] : Use Audio-DMAC-pp extended to transfer	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_RDR_CONFIG_NONFATAL_ERR_DMACHANNEL	PCM DMA channel is invalid
Restrictions	-	

Example

```
WORD32 dma_channel;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_DMACHANNEL1,
                  &dma_channel);
```

Subcommand	XA_RDR_CONFIG_PARAM_OUTPUT2	
Description	Set 2 nd output destination device for Renderer	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_OUTPUT2	
	pv_value	
	Pointer to the output device	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_RDR_CONFIG_NONFATAL_ERR_SOURCE	PCM output source is invalid
Restrictions	-	

[Note] Value range of output source relates to the PDMA and ADMAC source destination enum. It is presented below:

SSI module index: DMAC_SSI_MODULE_MIN <= output_source <= DMAC_SSI_MODULE_MAX

SCU SRC module index: DMAC_SCU_SRC_INPUT_MODULE_MIN <= output_source <= DMAC_SCU_SRC_INPUT_MODULE_MAX

SCU CMD module index: DMAC_SCU_CMD_MODULE_MIN <= output_source <= DMAC_SCU_CMD_MODULE_MAX

Other index: reserved, not used.

The output source information is necessary. Default value is 140 means that it is fault if output source is not set by user.

Example

```
WORD32 output_source;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_OUTPUT2,
                  &output_source);
```

Subcommand	XA_RDR_CONFIG_PARAM_DMACHANNEL2	
Description	Set ADMA channel number usage for 2 nd Audio device.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_DMACHANNEL2	
	pv_value	
	Pointer to the Audio-DMAC / Audio-DMAC-peripheral-peripheral channels number XA_RDR_ADMAC_CH[29-60] : Use Audio-DMAC to transfer XA_RDR_ADMACPP_CH[0-28] : Use Audio-DMAC-pp extended to transfer	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_RDR_CONFIG_NONFATAL_ERR_DMACHANNEL	PCM DMA channel is invalid
Restrictions	-	

Example

```
WORD32 dma_channel;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_DMACHANNEL2,
                  &dma_channel);
```

Subcommand	XA_RDR_CONFIG_PARAM_OUT_SAMPLE_RATE	
Description	Set output sample rate in Sampling Rate Converter (SRC) of Sampling Rate Converter Unit (SCU). If this setting value is different from input sample rate of PCM, SRC connection will be enabled even without setting connection device path. And the connection will automatically use the available Audio-DMAC channel.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_OUT_SAMPLE_RATE	
	pv_value	
	Pointer to the output sampling frequency variable (valid value: 32,000 / 44,100 / 48,000 Hz)	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_RDR_CONFIG_NONFATAL_ERR_SAMPLE_RATE	PCM output sample rate is invalid
Restrictions	-	

Example:

```
WORD32 sample_rate;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_OUT_SAMPLE_RATE,
                  &sample_rate);
```

Subcommand	XA_RDR_CONFIG_PARAM_VOLUME_RATE	
Description	Set the output PCM volume rate in Digital Volume and Mute Function (DVC) of Sampling Rate Converter Unit (SCU). Any setting values except 0xFFFF FFFF (disable) will enabled DVC of SCU module and the connection will be established even without setting connection path.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_VOLUME_RATE	
	pv_value	
	Pointer to the volume ratio number (using Fix-point Q3.20): 0xFFFF FFFF : disable DVC module [0, 0x7F FFFF] : setting volume rate value	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_RDR_CONFIG_NONFATAL_VOLUME_RATE	PCM volume rate value is invalid
Restrictions	-	

Example:

```
WORD32 vol_rate;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_VOLUME_RATE,
                  &vol_rate);
```

2.2.2.16.2 Set command for capture

Subcommand	XA_CAP_CONFIG_PARAM_PCM_WIDTH	
Description	Set the PCM sample bit width to 16 or 24 bits	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_PCM_WIDTH	
	pv_value	
	Pointer to the sample bit width variable (valid value: 16 or 24)	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_CAP_CONFIG_NONFATAL_ERR_PCM_WIDTH	PCM sample width size is not valid
	XA_CAP_CONFIG_FATAL_ERR_MONO_24BIT	Setting is invalid
Restrictions	-	

Example

```
WORD32 pcm_width;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_PCM_WIDTH,
                  &pcm_width);
```


Subcommand	XA_CAP_CONFIG_PARAM_CHANNELS	
Description	Set the PCM channels number	
Arguments	p_xa_module_obj	Pointer to API Structure.
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_CHANNELS	
	pv_value	
	Pointer to the input channels variable (valid value: 1 or 2)	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_CAP_CONFIG_NONFATAL_ERR_CHANNELS	PCM input channels is invalid
	XA_CAP_CONFIG_FATAL_ERR_MONO_24BIT	Setting is invalid
Restrictions	Currently, there is no support for other channels mode other than monaural and stereo. Other setting format value is invalid.	

Example
WORD32 ch;
res = (*api_func)(api_obj,
 XA_API_CMD_SET_CONFIG_PARAM,
 XA_CAP_CONFIG_PARAM_CHANNELS,
 &ch);

Subcommand	XA_CAP_CONFIG_PARAM_SAMPLE_RATE	
Description	Set the PCM sampling frequency	
Arguments	p_xa_module_obj	Pointer to API Structure.
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_SAMPLE_RATE	
	pv_value	
	Pointer to the input sampling frequency variable (valid value: 32,000 / 44,100 / 48,000 Hz)	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_CAP_CONFIG_NONFATAL_ERR_SAMPLE_RATE	PCM input sampling frequency is invalid
Restrictions	-	

Example

```
WORD32 sample_rate;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_SAMPLE_RATE,
                  &sample_rate);
```

Subcommand	XA_CAP_CONFIG_PARAM_FRAME_SIZE	
Description	Set the PCM frame size	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_FRAME_SIZE	
	pv_value	
	Pointer to the input frame size variable (valid value: frame size is power of two value)	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_CAP_CONFIG_NONFATAL_ERR_FRAME_SIZE	PCM frame size value is not the power of two.
Restrictions	-	

Example

```
WORD32 frame_size;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_FRAME_SIZE,
                  &frame_size);
```

Subcommand	XA_CAP_CONFIG_PARAM_INPUT1	
Description	Set 1 st input device for Capture	
Arguments	p_xa_module_obj	Pointer to API Structure.
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_INPUT1	
	pv_value	
	Pointer to the input source value	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_CAP_CONFIG_NONFATAL_ERR_SOURCE	PCM input source is invalid
Restrictions	-	

[Note] Value range of input source relates to the PDMA and ADMAC source destination enum. It is presented below:

SSI module index: DMAC_SSI_MODULE_MIN <= output_source <= DMAC_SSI_MODULE_MAX

SCU SRC module index: DMAC_SCU_SRC_INPUT_MODULE_MIN <= output_source <= DMAC_SCU_SRC_INPUT_MODULE_MAX

SCU CMD module index: DMAC_SCU_CMD_MODULE_MIN <= output_source <= DMAC_SCU_CMD_MODULE_MAX

Other index: reserved, not used.

The output source information is necessary. Default value is 140 means that it is fault if output source is not set by user.

Example

```
WORD32 input_source;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_INPUT1,
                  &input_source);
```

Subcommand	XA_CAP_CONFIG_PARAM_DMACHANNEL1	
Description	Set ADMA channel number usage for 1 st Audio device.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_DMACHANNEL1	
	pv_value	
Return value	Pointer to the ADMA channels number XA_CAP_ADMAC_CH[29-60] : Use Audio-DMAC to transfer XA_CAP_ADMACPP_CH[0-28] : Use Audio-DMAC-pp extended to transfer	
	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_CAP_CONFIG_NONFATAL_ERR_DMACHANNEL	PCM DMA channel is invalid
Restrictions	-	

Example

```
WORD32 dma_channel;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_DMACHANNEL1,
                  &dma_channel);
```

Subcommand	XA_CAP_CONFIG_PARAM_INPUT2	
Description	Set 2 nd input device for Capture	
Arguments	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_SET_CONFIG_PARAM
	i_idx	XA_CAP_CONFIG_PARAM_INPUT2
	pv_value	Pointer to the input source value
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_CAP_CONFIG_NONFATAL_ERR_SOURCE	PCM input source is invalid
Restrictions	-	

[Note] Value range of input source relates to the PDMA and ADMAC source destination enum. It is presented below:

SSI module index: DMAC_SSI_MODULE_MIN <= output_source <= DMAC_SSI_MODULE_MAX

SCU SRC output module index: DMAC_SCU_SRC_INPUT_MODULE_MIN <= output_source <= DMAC_SCU_SRC_INPUT_MODULE_MAX

SCU CMD module index: DMAC_SCU_CMD_MODULE_MIN <= output_source <= DMAC_SCU_CMD_MODULE_MAX

Other index: reserved, not used.

The output source information is necessary. Default value is 140 means that it is fault if output source is not set by user.

Example

```
WORD32 input_source;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_INPUT2,
                  &input_source);
```

Subcommand	XA_CAP_CONFIG_PARAM_DMACHANNEL2	
Description	Set ADMA channel number usage for 2 nd Audio device.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_DMACHANNEL2	
	pv_value	
	Pointer to the ADMA channels number XA_CAP_ADMAC_CH[0-31] : Audio-DMAC usage channel 0 -31 XA_CAP_ADMACPP_CH[0-28] : Audio-DMAC-pp extended usage channel 0-28	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_CAP_CONFIG_NONFATAL_ERR_DMACHANNEL	PCM DMA channel is invalid
Restrictions	-	

Example

```
WORD32 dma_channel;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_DMACHANNEL2,
                  &dma_channel);
```

Subcommand	XA_CAP_CONFIG_PARAM_OUT_SAMPLE_RATE	
Description	Set output sample rate in Sampling Rate Converter (SRC) of Sampling Rate Converter Unit (SCU). If this setting value is different from input sample rate of PCM, SRC connection will be enabled even without setting connection device path. And the connection will automatically use the available Audio-DMAC channel.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_OUT_SAMPLE_RATE	
	pv_value	
	Pointer to the output sampling frequency variable (valid value: 32,000 / 44,100 / 48,000 Hz)	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_CAP_CONFIG_NONFATAL_ERR_SAMPLE_RATE	PCM output sample rate is invalid
Restrictions	-	

Example:

```
WORD32 sample_rate;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_OUT_SAMPLE_RATE,
                  &sample_rate);
```


Subcommand	XA_CAP_CONFIG_PARAM_VOLUME_RATE	
Description	Set the output PCM volume rate in Digital Volume and Mute Function (DVC) of Sampling Rate Converter Unit (SCU). Any setting values except 0xFFFF FFFF (disable) will enabled DVC of SCU module and the connection will be established even without setting connection path.	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_SET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_VOLUME_RATE	
	pv_value	
	Pointer to the volume ratio number (using Fix-point Q3.20): 0xFFFF FFFF : disable DVC module [0, 0x7F FFFF] : setting volume rate value	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
	XA_CAP_CONFIG_NONFATAL_VOLUME_RATE	PCM volume rate value is invalid
Restrictions	-	

Example:

```
WORD32 vol_rate;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_VOLUME_RATE,
                  &vol_rate);
```

2.2.2.17 XA_API_CMD_GET_CONFIG_PARAM command

2.2.2.17.1 Get command for renderer

Subcommand	XA_RDR_CONFIG_PARAM_PCM_WIDTH	
Description	Get the PCM sample bit width settings	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_PCM_WIDTH	
	pv_value	
	Pointer to the sample bit width variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 pcm_width;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_PCM_WIDTH,
                  &pcm_width);
```

Subcommand	XA_RDR_CONFIG_PARAM_CHANNELS	
Description	Get the PCM channels number setting	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_CHANNELS	
	pv_value	
	Pointer to channels variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 ch;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_CHANNELS,
                  &ch);
```

Subcommand	XA_RDR_CONFIG_PARAM_SAMPLE_RATE	
Description	Get the PCM sampling frequency setting	
Arguments	p_xa_module_obj	Pointer to API Structure.
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_SAMPLE_RATE	
	pv_value	
	Pointer to sampling frequency variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 sample_rate;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_SAMPLE_RATE,
                  &sample_rate);
```

Subcommand	XA_RDR_CONFIG_PARAM_FRAME_SIZE	
Description	Get the PCM frame size setting	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_FRAME_SIZE	
	pv_value	
	Pointer to frame size variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 frame_size;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_FRAME_SIZE,
                  &frame_size);
```

Subcommand	XA_RDR_CONFIG_PARAM_OUTPUT1	
Description	Get 1 st output destination device for Renderer info	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_OUTPUT1	
	pv_value	
	Pointer to the 1 st output destination device value	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 output_source;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_OUTPUT1,
                  &output_source);
```

Subcommand	XA_RDR_CONFIG_PARAM_DMACHANNEL1	
Description	Get ADMA channel number usage for 1 st Audio device info	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_DMACHANNEL1	
	pv_value	
	Pointer to the 1 st Audio-DMAC / Audio-DMAC-peripheral-peripheral channel variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 dma_channel;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_DMACHANNEL1,
                  &dma_channel);
```

Subcommand	XA_RDR_CONFIG_PARAM_OUTPUT2	
Description	Get 2 nd output destination device for Renderer info	
Arguments	p_xa_module_obj	Pointer to API Structure.
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_OUTPUT2	
	pv_value	
	Pointer to the 2 nd output destination device value	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 output_source;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_OUTPUT2,
                  &output_source);
```


Subcommand	XA_RDR_CONFIG_PARAM_DMACHANNEL2	
Description	Get ADMA channel number usage for 2 nd Audio device info	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_DMACHANNEL2	
	pv_value	
	Pointer to the 2 nd Audio-DMAC / Audio-DMAC-peripheral-peripheral channel variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 dma_channel;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_DMACHANNEL2,
                  &dma_channel);
```

Subcommand	XA_RDR_CONFIG_PARAM_OUT_SAMPLE_RATE	
Description	Get output sample rate setting	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_OUT_SAMPLE_RATE	
	pv_value	
	Pointer to the output sampling frequency variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example:

```
WORD32 sample_rate;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_OUT_SAMPLE_RATE,
                  &sample_rate);
```

Subcommand	XA_RDR_CONFIG_PARAM_VOLUME_RATE	
Description	Get the output PCM volume rate setting value	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_RDR_CONFIG_PARAM_VOLUME_RATE	
	pv_value	
	Pointer to the volume ratio number (using Fix-point Q3.20)	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_RDR_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example:

```
WORD32 vol_rate;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_RDR_CONFIG_PARAM_VOLUME_RATE,
                  &vol_rate);
```

2.2.2.17.2 Get command for capture

Subcommand	XA_CAP_CONFIG_PARAM_PCM_WIDTH	
Description	Get the PCM sample bit width settings	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_PCM_WIDTH	
	pv_value	
	Pointer to the sample bit width variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 pcm_width;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_PCM_WIDTH,
                  &pcm_width);
```

Subcommand	XA_CAP_CONFIG_PARAM_CHANNELS	
Description	Get the PCM channels number setting	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_CHANNELS	
	pv_value	
	Pointer to channels variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 ch;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_CHANNELS,
                  &ch);
```

Subcommand	XA_CAP_CONFIG_PARAM_SAMPLE_RATE	
Description	Get the PCM sampling frequency setting	
Arguments	p_xa_module_obj	Pointer to API Structure.
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_SAMPLE_RATE	
	pv_value	
	Pointer to sampling frequency variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 sample_rate;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_SAMPLE_RATE,
                  &sample_rate);
```

Subcommand	XA_CAP_CONFIG_PARAM_FRAME_SIZE	
Description	Get the PCM frame size setting	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_FRAME_SIZE	
	pv_value	
	Pointer to frame size variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 frame_size;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_FRAME_SIZE,
                  &frame_size);
```

Subcommand	XA_CAP_CONFIG_PARAM_INPUT1	
Description	Get 1 st input source device for Capture info	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_INPUT1	
	pv_value	
	Pointer to the 1 st input device value	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 input_source;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_INPUT1,
                  &input_source);
```


Subcommand	XA_CAP_CONFIG_PARAM_DMACHANNEL1	
Description	Get ADMA channel number usage for 1 st Audio device info	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_DMACHANNEL1	
	pv_value	
	Pointer to the 1 st Audio-DMAC channel	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 dma_channel;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_DMACHANNEL1,
                  &dma_channel);
```

Subcommand	XA_CAP_CONFIG_PARAM_INPUT2	
Description	Get 2 nd input source device for Capture info	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_INPUT2	
	pv_value	
	Pointer to the 2 nd input source device value	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 input_source;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_INPUT2,
                  &input_source);
```

Subcommand	XA_CAP_CONFIG_PARAM_DMACHANNEL2	
Description	Get ADMA channel number usage for 2 nd Audio device info	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_DMACHANNEL2	
	pv_value	
	Pointer to the 2 nd Audio-DMAC channel	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example

```
WORD32 dma_channel;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_DMACHANNEL2,
                  &dma_channel);
```

Subcommand	XA_CAP_CONFIG_PARAM_OUT_SAMPLE_RATE	
Description	Get output sample rate setting value	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_OUT_SAMPLE_RATE	
	pv_value	
	Pointer to the output sampling frequency variable	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example:

```
WORD32 sample_rate;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_OUT_SAMPLE_RATE,
                  &sample_rate);
```

Subcommand	XA_CAP_CONFIG_PARAM_VOLUME_RATE	
Description	Get the output PCM volume rate setting value	
Arguments	p_xa_module_obj	
	Pointer to API Structure.	
	i_cmd	
	XA_API_CMD_GET_CONFIG_PARAM	
	i_idx	
	XA_CAP_CONFIG_PARAM_VOLUME_RATE	
	pv_value	
	Pointer to the volume ratio number (using Fix-point Q3.20)	
Return value	XA_NO_ERROR	Normally ends.
	XA_API_FATAL_MEM_ALLOC	p_xa_module_obj / pv_value is NULL.
	XA_API_FATAL_MEM_ALIGN	p_xa_module_obj is not aligned to 4 bytes.
	XA_CAP_CONFIG_FATAL_STATE	Incorrect sequence call (i.e. call before pre-configuration step)
Restrictions	-	

Example:

```
WORD32 vol_rate;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_CAP_CONFIG_PARAM_VOLUME_RATE,
                  &vol_rate);
```

2.3 Structures

Table 2-12 lists the structures for this software. The user should reserve areas required for these structures. For detailed specifications of these input structures, refer to Section 2.3.1.

Table 2-12 Structures

Structure name	Size	Outline
XARelrdr	1408 (bytes)	API's structure to stores the information of API
XARelcap	1392 (bytes)	API's structure to stores the information of API

2.3.1 XARelrdr type structure

The XARelrdr type structure is the work area used by the renderer of Renderer plugin. When using this plugin, secure the area with the application program. It's not necessary to refer to this area because it only contains the internal variables and working buffers of the plugin. Make sure not to change the value of this area with the application program.

Table 2-13 XARelrdr type structure information

Member name	Outline
pVOID pMem_tabs	Memory table controller
UWORD32 ring_num	Number of ring buffer
UWORD32 ring_size	Total size of ring-buffer in sample
UWORD32 buffer_size	Total size of ring-buffer in bytes
UWORD32 sample_size	Size of PCM sample
UWORD32 write_idx	Software writing position
UWORD32 read_idx	FIFO reading position
UWORD32 filled	Number of samples present in the buffer
UWORD32 submitted	Total number of submitted samples
UWORD32 core	Identifier of the core we are running on
UWORD32 state	Component state
xa_renderer_cb_t *cdata	Notification callback pointer
UWORD32 consumed	Number of samples consumed to framework
XosEvent relrdr_event	Renderer polling event
XosThread relrdr_thread	Renderer polling thread
UWORD32 frame_size	Number of sample in each frame
UWORD32 channels	Number of channels
UWORD32 in_rate	Input sampling rate
UWORD32 out_rate	Output sampling rate
UWORD32 pcm_width	Sample width
UWORD32 stage_flag	Present current stage used in ADMAC
UWORD32 stage_size	Stage memory block size when using DMAC
UWORD32 stg_num	Stage number when using ADMAC
UWORD32 trans_num	Transfer number time when using ADMAC
relren_Device dev[2]	Output device info array after setting param
relren_Enable_Module enable_module	Module list is used
WORD32 volume	Volume value
SSIU_SSI_MODULE ssi_module	SSI module information

2.3.2 XARelcap type structure

The XARelcap type structure is the work area used by the capture of Renderer plugin. When using this plugin, secure the area with the application program. It's not necessary to refer to this area because it only contains the internal variables and working buffers of the plugin. Make sure not to change the value of this area with the application program.

Table 2-14 XARelcap type structure information

Member name	Outline
pVOID pMem_tabs	Memory table controller
UWORD32 sample_size	Size of PCM sample
UWORD32 core	Identifier of the core we are running on
UWORD32 state	Component state
UWORD32 transfered	Number of samples have been transferred
XosEvent relcap_event	Capture polling event
XosThread relcap_thread	Capture polling thread
UWORD32 frame_size	Number of sample in each frame
UWORD32 channels	Number of channels
UWORD32 in_rate	Input sampling rate
UWORD32 out_rate	Output sample rate
UWORD32 pcm_width	Sample width
UWORD32 ring_num	Number of ring buffer
UWORD32 SSI0_setting_flag	Mark SSI0 setting
UWORD32 stage_flag	Present current stage used in ADMAC
UWORD32 stage_size	Stage memory block size when using DMAC
UWORD32 stage_num	Stage number when using DMAC
UWORD32 trans_num	Transfer number time when using DMAC
UWORD32 ring_size	Total size of ring-buffer in samples
UWORD32 buffer_size	Total size of ring-buffer in bytes
relcap_Device dev[2]	Output device info array after set param
relcap_Enable_module enable_module	Module list is used
WORD32 volume	Volume value
SSIU_SSI_MODULE ssi_module	SSI module information

2.4 Memory Specifications

This section describes the memory areas used by this software.

2.4.1 Persistent Area

Table 2-15 Persistent Area Description

Item	Area which always holds values when this software is used. If the user manipulates this area after initialization, the correct execution of this software is not ensured.
Symbol name	- (freely defined by the user)
Size	Obtain the actually required size with 2.2.2.7
Area reservation	The user should reserve this area.
Allocation	This area is included in RAM.
Alignment	Align this area on a 4-byte boundary.

2.4.2 Stack Area

Table 2-16 Stack Area Description

Item	Stack area used by this software
Symbol name	- (freely defined by the user)
Size	Obtain the actually required size with 2.2.2.7
Area reservation	The user should reserve this area. To use this software, reserve a software stack area which exceeds the size above.
Allocation	This area is included in RAM.
Alignment	-

2.4.3 Heap Area

This software does not use a heap area.

2.4.4 Input Buffer

Input buffer only is used in the renderer case.

Table 2-17 Input Buffer Description

Item	Area which stores inputs from this software. The input buffer contains 16-bit linear PCM data (hereinafter called PCM data). If the user manipulates this area during rendering processing, the normal execution of the program cannot be ensured.
Symbol name	- (freely defined by the user)
Size	Please secure more than size with 2.2.2.7 (a multiple of 2.2.2.7).
Area reservation	The user should reserve this area. The user can freely use this area after the rendering of one block.
Allocation	This area is included in RAM.
Alignment	Align this area on a 4-byte boundary.

2.4.5 Output Buffer

Output buffer only is used in the capture case.

Table 2-18 Output Buffer Description

Item	Area which stores outputs from this software. The output buffer contains 16-bit linear PCM data (hereinafter called PCM data). If the user manipulates this area during rendering processing, the normal execution of the program cannot be ensured.
Symbol name	- (freely defined by the user)
Size	Please secure more than size with 2.2.2.7 (a multiple of 2.2.2.7).
Area reservation	The user should reserve this area. The user can freely use this area after the rendering of one block.
Allocation	This area is included in RAM.
Alignment	Align this area on a 4-byte boundary.

(1) Input/ Output data storage method

Data is input/ output in the formats as shown in Figure 2-4(consecutive buffers are specified for the channels). The input/output buffer (memory) stores data in 2-byte (16-bit) units. The byte order for accessing the buffer is little endian (see Figure 2-2).

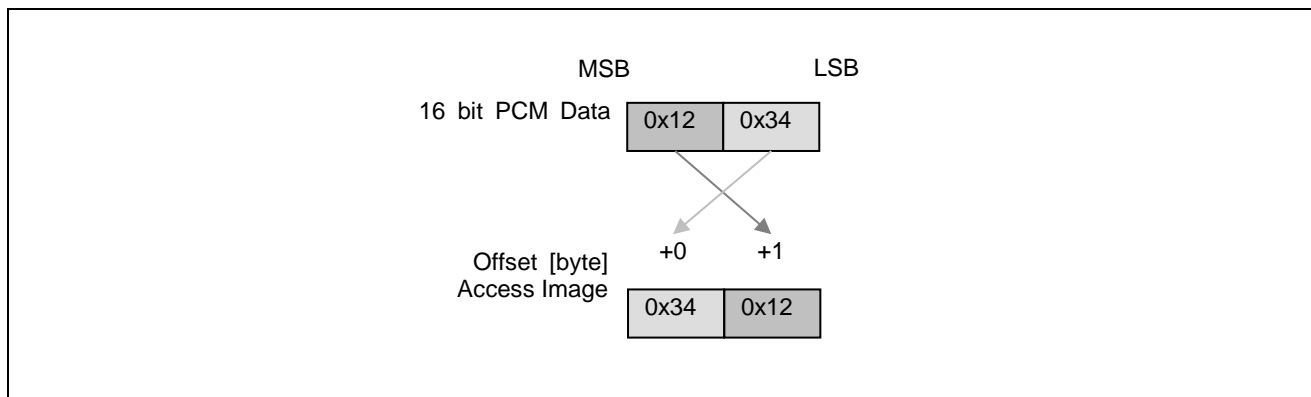


Figure 2-2 PCM 16-bit Data Access (Little Endian Mode)

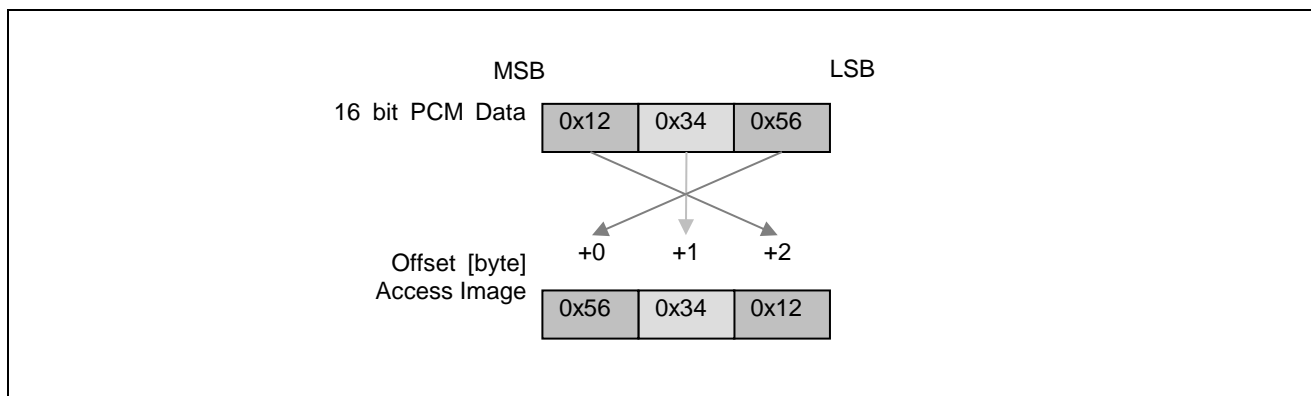


Figure 2-3 PCM 24-bit Data Access (Little Endian Mode)

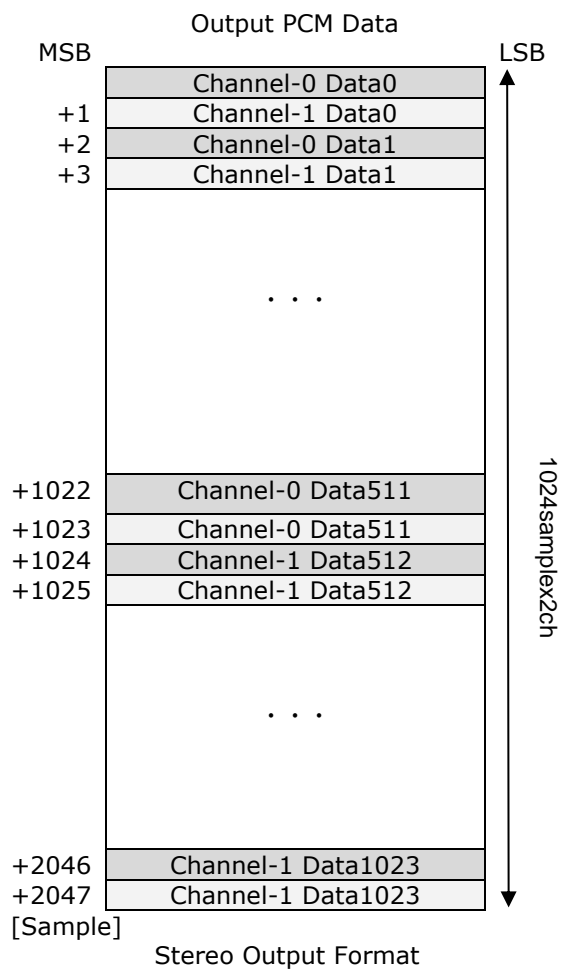


Figure 2-4 Output Formats

2.5 Error Processing

This software's functions return the error codes listed in Table 2-20.

2.5.1 Error codes

Below are the error codes for this software.

Table 2-19 Error Codes for Renderer

Error code (32bit)	Value	Description
[1] XA_NO_ERROR	0x00000000	The processing results are normal. The process has terminated normally.
[2] XA_API_FATAL_MEM_ALLOC	0xFFFF8000	Abnormality has occurred, which disables process continuation. An address of API structure was specified at the argument is NULL, the program execution is incorrect. Because it becomes the common API error, please check the correct procedure.
[3] XA_API_FATAL_MEM_ALIGN	0xFFFF8001	Abnormality has occurred, which disables process continuation. An address of API structure was specified at the argument does not 4 byte align. Because it becomes the common API error, please check the correct procedure.
[4] XA_API_FATAL_INVALID_CMD	0xFFFF8002	Abnormality has occurred, which disables process continuation. The command was specified at the argument does not support. Because it becomes the common API error, please check the correct procedure.
[5] XA_API_FATAL_INVALID_CMD_TYPE	0xFFFF8003	Abnormality has occurred, which disables process continuation. The subcommand was specified at the argument does not support. Because it becomes the common API error, please check the correct procedure.
[6] XA_RDR_CONFIG_FATAL_STATE	0xFFFF8881	Abnormality has occurred, which disables process continuation. The subcommand was specified at the argument does not support. Because it becomes the common API error, please check the correct procedure.
[7] XA_RDR_CONFIG_FATAL_ERR_MONO_24BIT	0xFFFF8883	It is an error for invalid setting, 24 bit mono channel case.
[8] XA_RDR_EXEC_FATAL_STATE	0xFFFF9081	Abnormality has occurred, which disables process continuation. The subcommand was specified at the argument does not support. Because it becomes the common API error, please check the correct procedure.
[7] XA_RDR_EXEC_FATAL_INPUT	0xFFFF9082	Abnormality has occurred, which disables process continuation. The input size is not align with sample size. Because it becomes the common API error, please check the correct size of input buffers.

[9] XA_RDR_EXEC_FATAL_INTERNAL	0xFFFF9083	Abnormality has occurred, which disables process continuation. Some of setting becomes incorrect after combination. Because it becomes the common API error, please check the correct parameters.
[10] XA_RDR_EXEC_FATAL_HW	0xFFFF9080	Abnormality has occurred, which disables process continuation. Hardware modules are not available... Because it becomes the common API error, please check the correct parameters and make sure the resource is validity.
[11] XA_RDR_CONFIG_NONFATAL_ERR_PCM_WIDTH	0x00000880	It is an error for renderer specifications out of the range. The PCM width was specified at the argument does not support. Please set an appropriate value.(Refer to 2.2.2.16)
[12] XA_RDR_CONFIG_NONFATAL_ERR_CHANNELS	0x00000881	It is an error for renderer specifications out of the range. The channel numbers was specified at the argument does not support. Please set an appropriate value.(Refer to 2.2.2.16)
[13] XA_RDR_CONFIG_NONFATAL_ERR_SAMPLE_RATE	0x00000882	It is an error for renderer specifications out of the range. The sample rate was specified at the argument does not support. Please set an appropriate value.(Refer to 2.2.2.16)
[14] XA_RDR_CONFIG_NONFATAL_ERR_FRAME_SIZE	0x00000883	It is an error for renderer specifications out of the range. The Input buffer size was specified at the argument does not support. Please set an appropriate value.(Refer to 2.2.2.16)
[15] XA_RDR_CONFIG_NONFATAL_ERR_SOURCE	0x00000884	It is an error for renderer specifications out of the range. The input buffer size was specified at the argument does not support. Please set an appropriate value.(Refer to 2.2.2.16)
[16] XA_RDR_CONFIG_NONFATAL_ERR_DMACHANNEL	0x00000885	It is an error for renderer specifications out of the range. The input buffer size was specified at the argument does not support. Please set an appropriate value.(Refer to 2.2.2.16)
[17] XA_RDR_CONFIG_NONFATAL_VOLUME_RATE	0x00000886	It is an error for renderer specification out of range. The volume rate value was specified at the argument does not support.
[18]	Others	Reserved

Table 2-20 Error Codes for Capture

Error code (32bit)	Value	Description
[1] XA_NO_ERROR	0x00000000	The processing results are normal. The process has terminated normally.
[2] XA_API_FATAL_MEM_ALLOC	0xFFFF8000	Abnormality has occurred, which disables process continuation. An address of API structure was specified at the argument is NULL, the program execution is incorrect. Because it becomes the common API error, please check the correct procedure.
[3] XA_API_FATAL_MEM_ALIGN	0xFFFF8001	Abnormality has occurred, which disables process continuation. An address of API structure was specified at the argument does not 4 byte align. Because it becomes the common API error, please check the correct procedure.
[4] XA_API_FATAL_INVALID_CMD	0xFFFF8002	Abnormality has occurred, which disables process continuation. The command was specified at the argument does not support. Because it becomes the common API error, please check the correct procedure.
[5] XA_API_FATAL_INVALID_CMD_TYPE	0xFFFF8003	Abnormality has occurred, which disables process continuation. The subcommand was specified at the argument does not support. Because it becomes the common API error, please check the correct procedure.
[6] XA_CAP_CONFIG_FATAL_STATE	0xFFFF88C0	Abnormality has occurred, which disables process continuation. The subcommand was specified at the argument does not support. Because it becomes the common API error, please check the correct procedure.
[7] XA_CAP_CONFIG_FATAL_ERR_MONO_24BIT	0xFFFF88C2	It is an error for invalid setting, 24 bit mono channel case.
[8] XA_CAP_EXEC_FATAL_STATE	0xFFFF90C0	Abnormality has occurred, which disables process continuation. The subcommand was specified at the argument does not support. Because it becomes the common API error, please check the correct procedure.
[9] XA_CAP_EXEC_FATAL_INTERNAL	0xFFFF90C2	Abnormality has occurred, which disables process continuation. Some of setting becomes incorrect after combination (hardware modules are not available...). Because it becomes the common API error, please check the correct parameters.

[10] XA_CAP_EXEC_FATAL_HW	0xFFFF90C1	Abnormality has occurred, which disables process continuation. Hardware modules are not available... Because it becomes the common API error, please make sure the resource is validity.
[11] XA_CAP_CONFIG_NONFATAL_ERR_PCM_WIDTH	0x000008C0	It is an error for Capture specifications out of the range. The output buffer size was specified at the argument does not support. Please set an appropriate value.(Refer to 2.2.2.16)
[12] XA_CAP_CONFIG_NONFATAL_ERR_CHANNELS	0x000008C1	It is an error for Capture specifications out of the range. The output buffer size was specified at the argument does not support. Please set an appropriate value.(Refer to 2.2.2.16)
[13] XA_CAP_CONFIG_NONFATAL_ERR_SAMPLE_RATE	0x000008C2	It is an error for Capture specifications out of the range. The output buffer size was specified at the argument does not support. Please set an appropriate value.(Refer to 2.2.2.16)
[14] XA_CAP_CONFIG_NONFATAL_ERR_FRAME_SIZE	0x000008C3	It is an error for Capture specifications out of the range. The output buffer size was specified at the argument does not support. Please set an appropriate value.(Refer to 2.2.2.16)
[15] XA_CAP_CONFIG_NONFATAL_ERR_SOURCE	0x000008C4	It is an error for Capture specifications out of the range. The output buffer size was specified at the argument does not support. Please set an appropriate value.(Refer to 2.2.2.16)
[16] XA_CAP_CONFIG_NONFATAL_ERR_DMACHANNEL	0x000008C5	It is an error for Capture specifications out of the range. The output buffer size was specified at the argument does not support. Please set an appropriate value.(Refer to 2.2.2.16)
[17] XA_CAP_CONFIG_NONFATAL_VOLUME_RATE	0x000008C6	It is an error for Capture specification out of range. The volume rate value was specified at the argument does not support.
[18]	Others	Reserved

3. Processing Flow

Figure 3-1 shows a flow diagram of processing performed by an application which uses this software. It applies for both case: renderer and capture.

The basic steps executed by the framework are shaded. The steps defined by the user framework are white. Design the process to suit the target system.

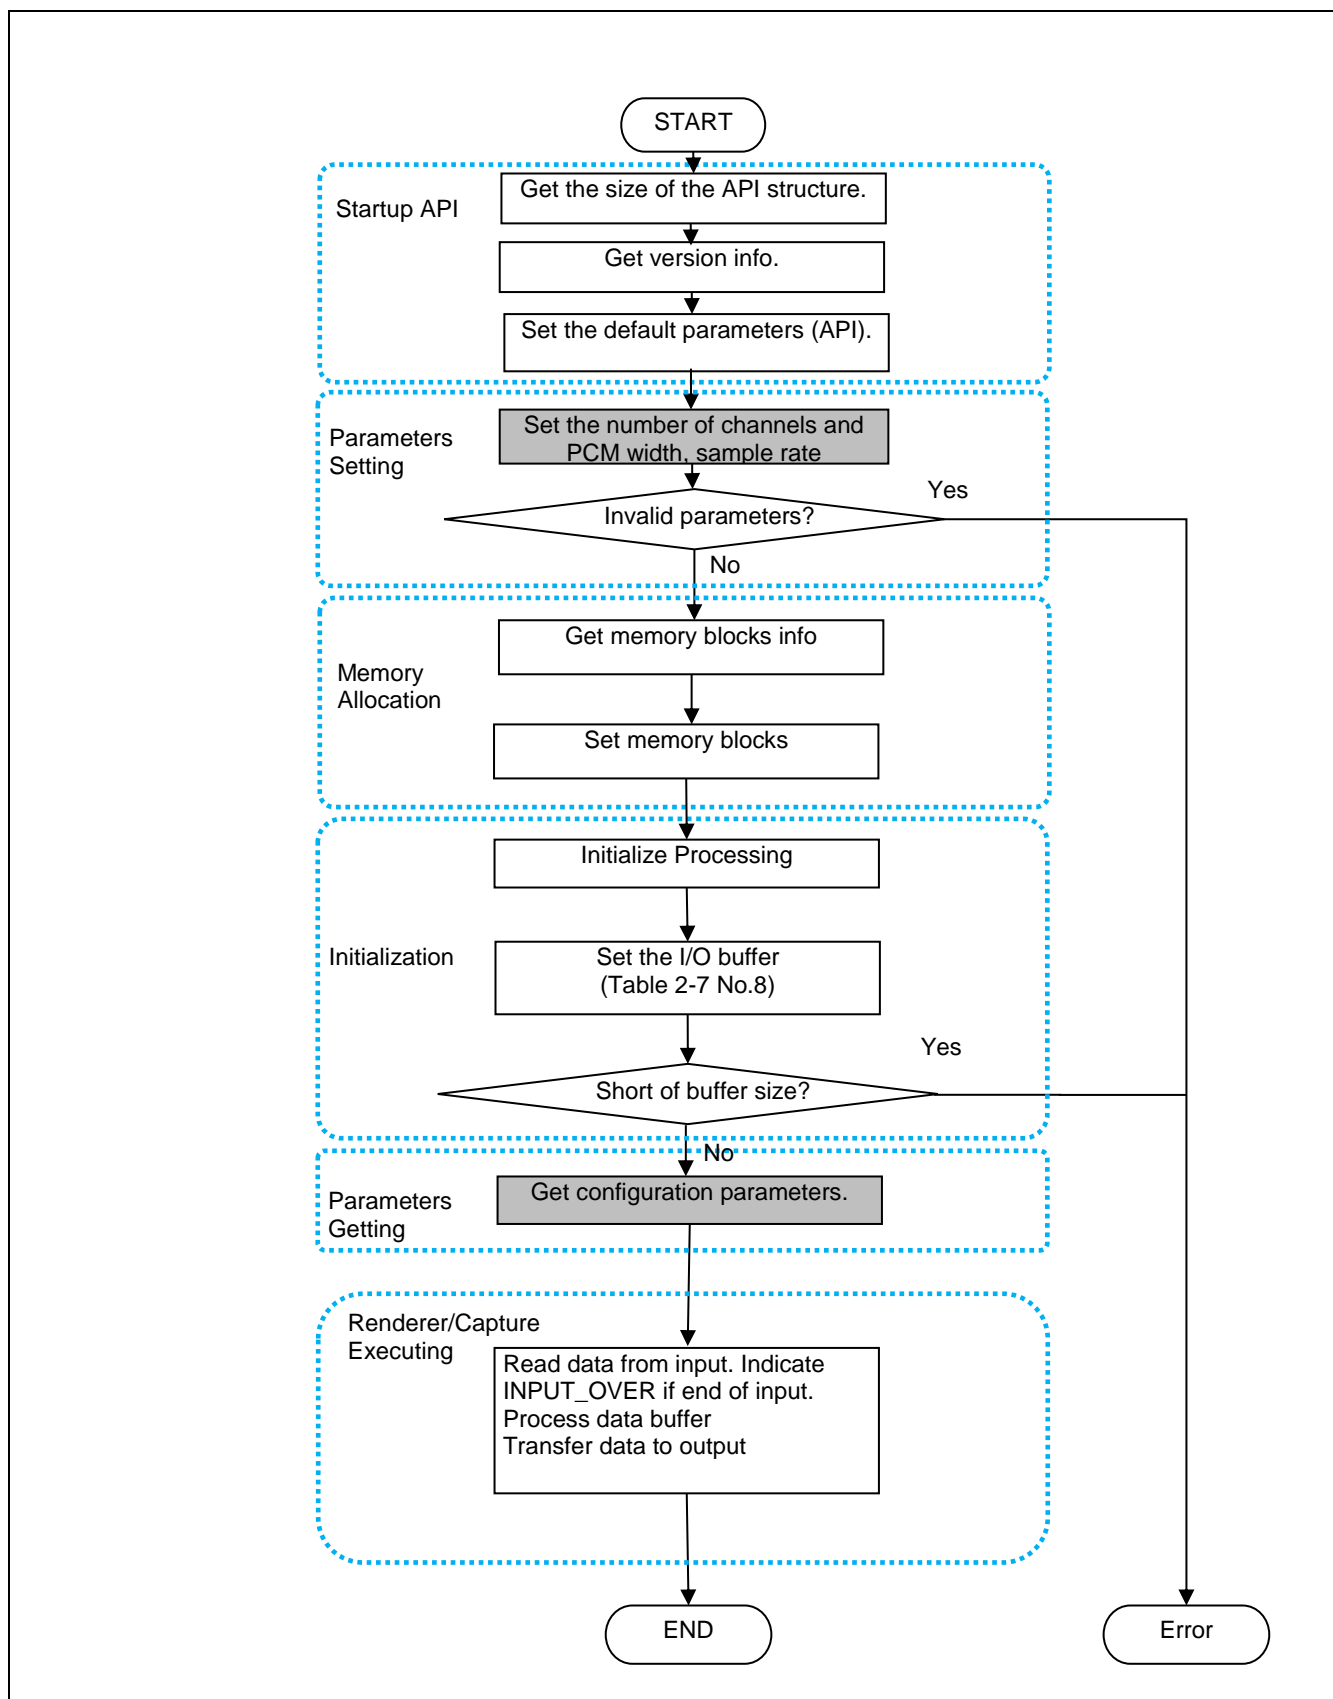


Figure 3-1 Example of the Application Processing Flow

CONFIDENTIAL

Revision History	ADSP Reference Renderer/Capture Plugin User's Manual
------------------	--

Rev.	Date	Description	
		Page	Summary
0.10	Aug. 24, 2016	-	Preliminary Edition
0.11	Feb. 09, 2017	26,36, 37, 38	Modify error check in API commands
		-	Update UM for extension
		82, 83	Update Renderer/Capture structure
0.12	May. 31, 2017	90, 91, 92, 93	Update Error Table of Renderer/Capture
		-	Update page number
1.00	Jun. 28, 2017	-	Official Release
		4, 12	Determine the T.B.D item.

ADSP Reference Renderer/Capture Plugin User's Manual

Publication Date: Jun 28, 2017 Rev. 1.00

Published by: Renesas Electronics Corporation



ルネサス エレクトロニクス株式会社

営業お問合せ窓口

<http://www.renesas.com>

営業お問合せ窓口の住所は変更になることがあります。最新情報につきましては、弊社ホームページをご覧ください。

ルネサス エレクトロニクス株式会社 〒135-0061 東京都江東区豊洲3-2-24 (豊洲フォレシア)

技術的なお問合せおよび資料のご請求は下記へどうぞ。
総合お問合せ窓口：<https://www.renesas.com/contact/>



SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

Renesas Electronics America Inc.

2801 Scott Boulevard Santa Clara, CA 95050-2549, U.S.A.
Tel: +1-408-588-6000, Fax: +1-408-588-6130

Renesas Electronics Canada Limited

9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3
Tel: +1-905-237-2004

Renesas Electronics Europe Limited

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K.
Tel: +44-1628-585-100, Fax: +44-1628-585-900

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.

Room 1709, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100191, P.R.China
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, P. R. China 200333
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited

Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong
Tel: +852-2265-6688, Fax: +852 2886-9022

Renesas Electronics Taiwan Co., Ltd.

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd.

80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949
Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd.

Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics India Pvt. Ltd.

No.777C, 100 Feet Road, HAL II Stage, Indiranagar, Bangalore, India
Tel: +91-80-67208700, Fax: +91-80-67208777

Renesas Electronics Korea Co., Ltd.

12F., 234 Teheran-ro, Gangnam-Gu, Seoul, 135-080, Korea
Tel: +82-2-558-3737, Fax: +82-2-558-5141

ADSP Reference Renderer/Capture Plugin RCG3AHPLN0101ZNO