



SHARP PC-E500 Right Side



| | | |
|-------------------------------|-----|--------|
| 1: Frame Ground | FG | — |
| 2: Send Data | TXD | OUTPUT |
| 3: Receive Data | RXD | INPUT |
| 4: Request to Send | RTS | OUTPUT |
| 5: Clear to Send | CTS | INPUT |
| 6: Data Set Ready | DSR | INPUT |
| 7: Signal Ground | GND | — |
| 8: Carrier Detect | CD | INPUT |
| 9: Call Indicator | CI | INPUT |
| 10: Supply Voltage | VCC | — |
| 11: Receive Ready | RR | OUTPUT |
| 12: Periph. ACK (CE-140P) | PAK | INPUT |
| 13: Supply Voltage | VCC | — |
| 14: Equipment Ready | DTR | OUTPUT |
| 15: Periph. Request (CE-140P) | PRQ | OUTPUT |

11-pin 2.54mm Interface

| |
|--------|
| 1:FG |
| 2:VCC |
| 3:GND |
| 4:RTS |
| 5:DTR |
| 6:RXD |
| 7:TXD |
| 8:CD |
| 9:CTS |
| 10:DSR |
| 11:CI |

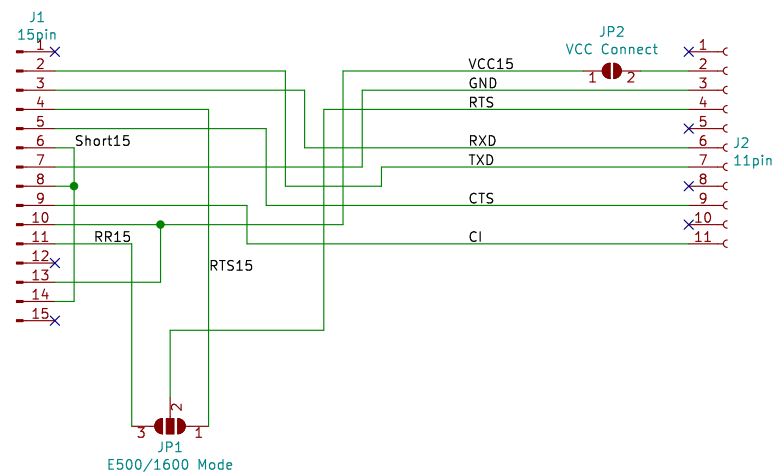

by HWRO <evilhardware(at)mail.ru>

Sheet: /
File: Sharp_11pin_to_15pin_Adapter.sch

Title: Sharp 11pin to 15pin Adapter

Size: A4 Date: 20.01.2020
KiCad E.D.A. eeschema (5.1.5)-3

Rev: v1.1
Id: 1/1