


This is the two wires to a headphone

has 3 wires, only two are connected



These two are not in the baggy, ask your TA if you want this

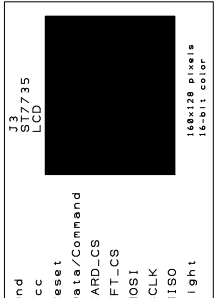

Select PD7 to use SD card

Position

EK-LM4F120XL or EK-TM4C123GXL
HYDER SHAD, MIRA SEHGAL
March 22, 2016 Spring 2016

-ND
ND
tronics.comSP-20K