



# How To Flash LAN Mac Address(MT8382)

1. Click "Flash Ethernet..."

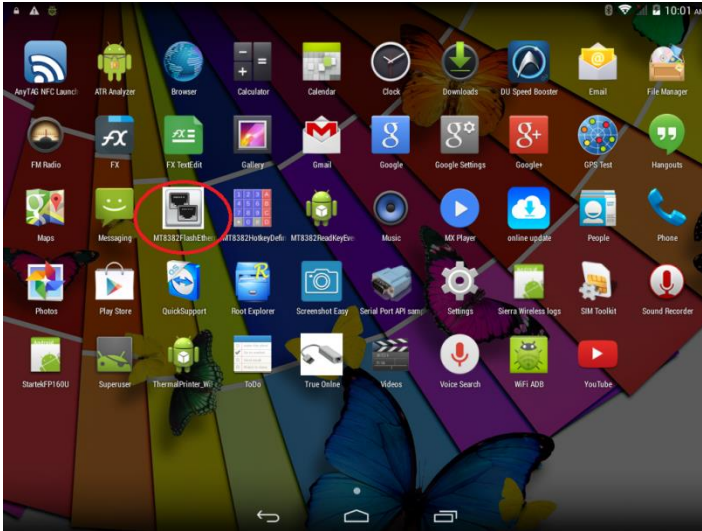


You can see current LAN Mac address

P.S My example Ethernet Mac is 00 00 01 02 00 00

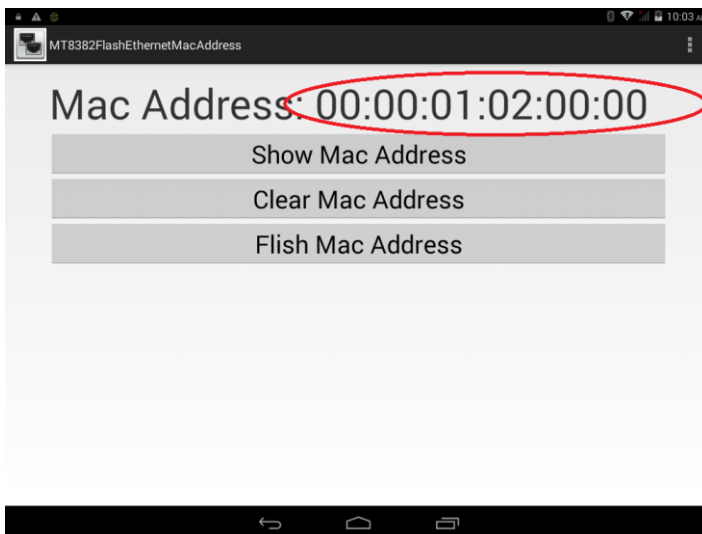


## 2. Flash Mac address


### 2.1. Click "Flash Mac Address" button

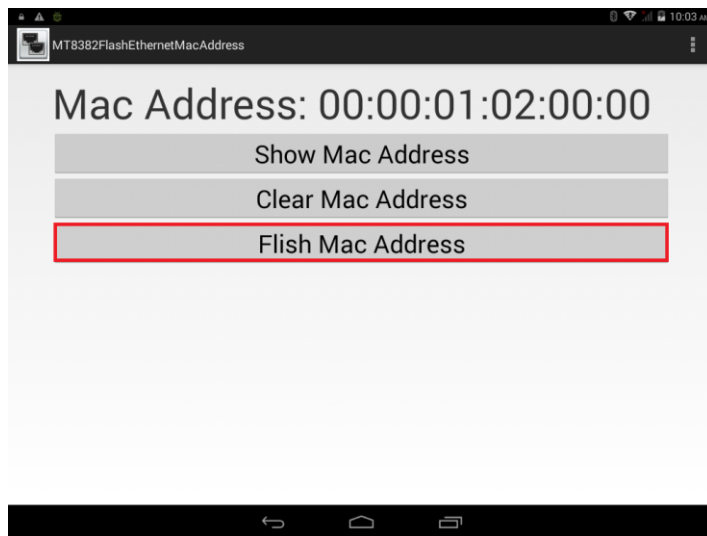


### 2.2. Input Mac address

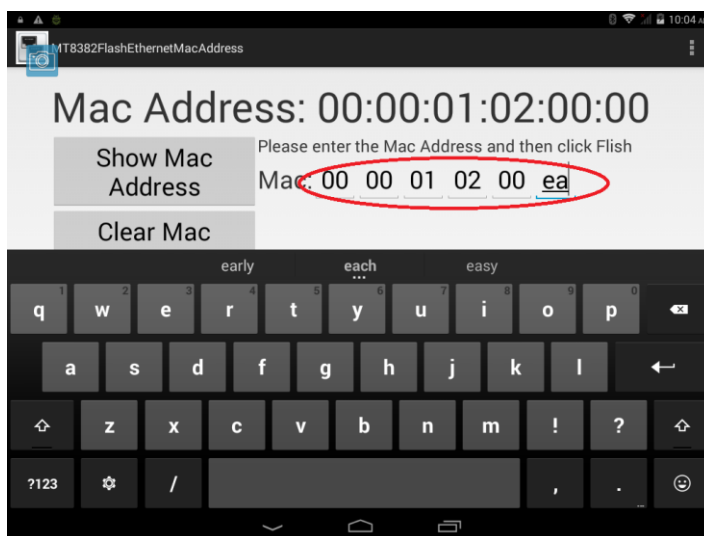

After click back off software keyboard

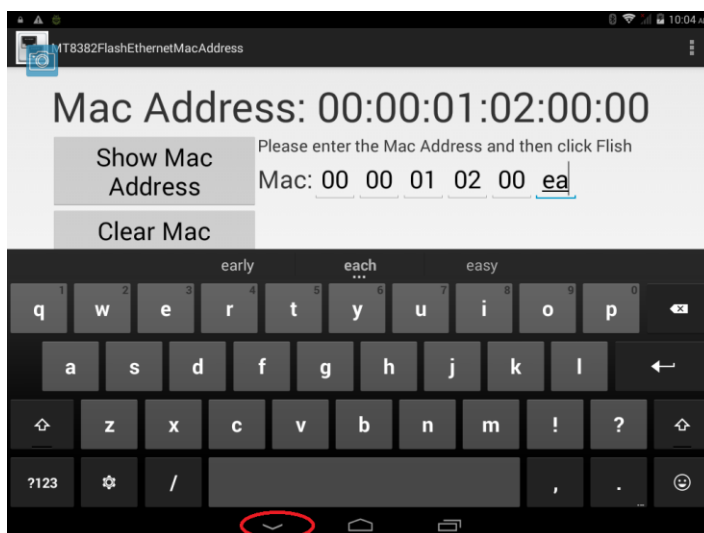

### 2.3. Click “Flash” button

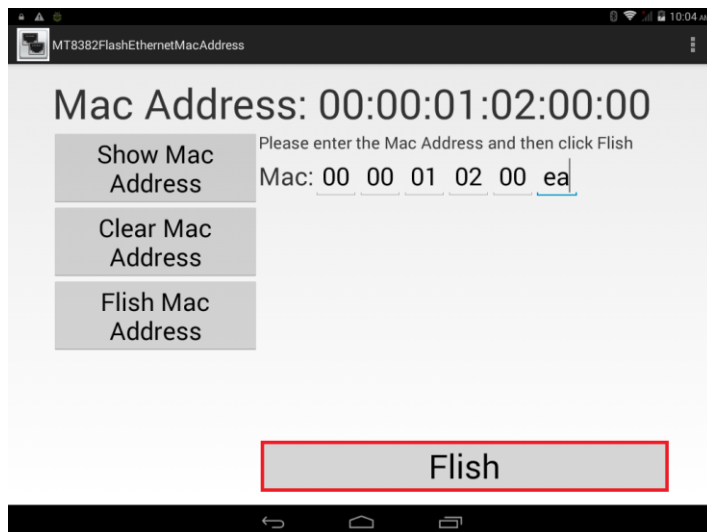

### 3. Verify

P.S Please check Mac address is correct

