

UN42 Repair Guide


OCT/30 2014

KELLY


GTSD

BLOCK DIAGRAM


www.vinafix.vn

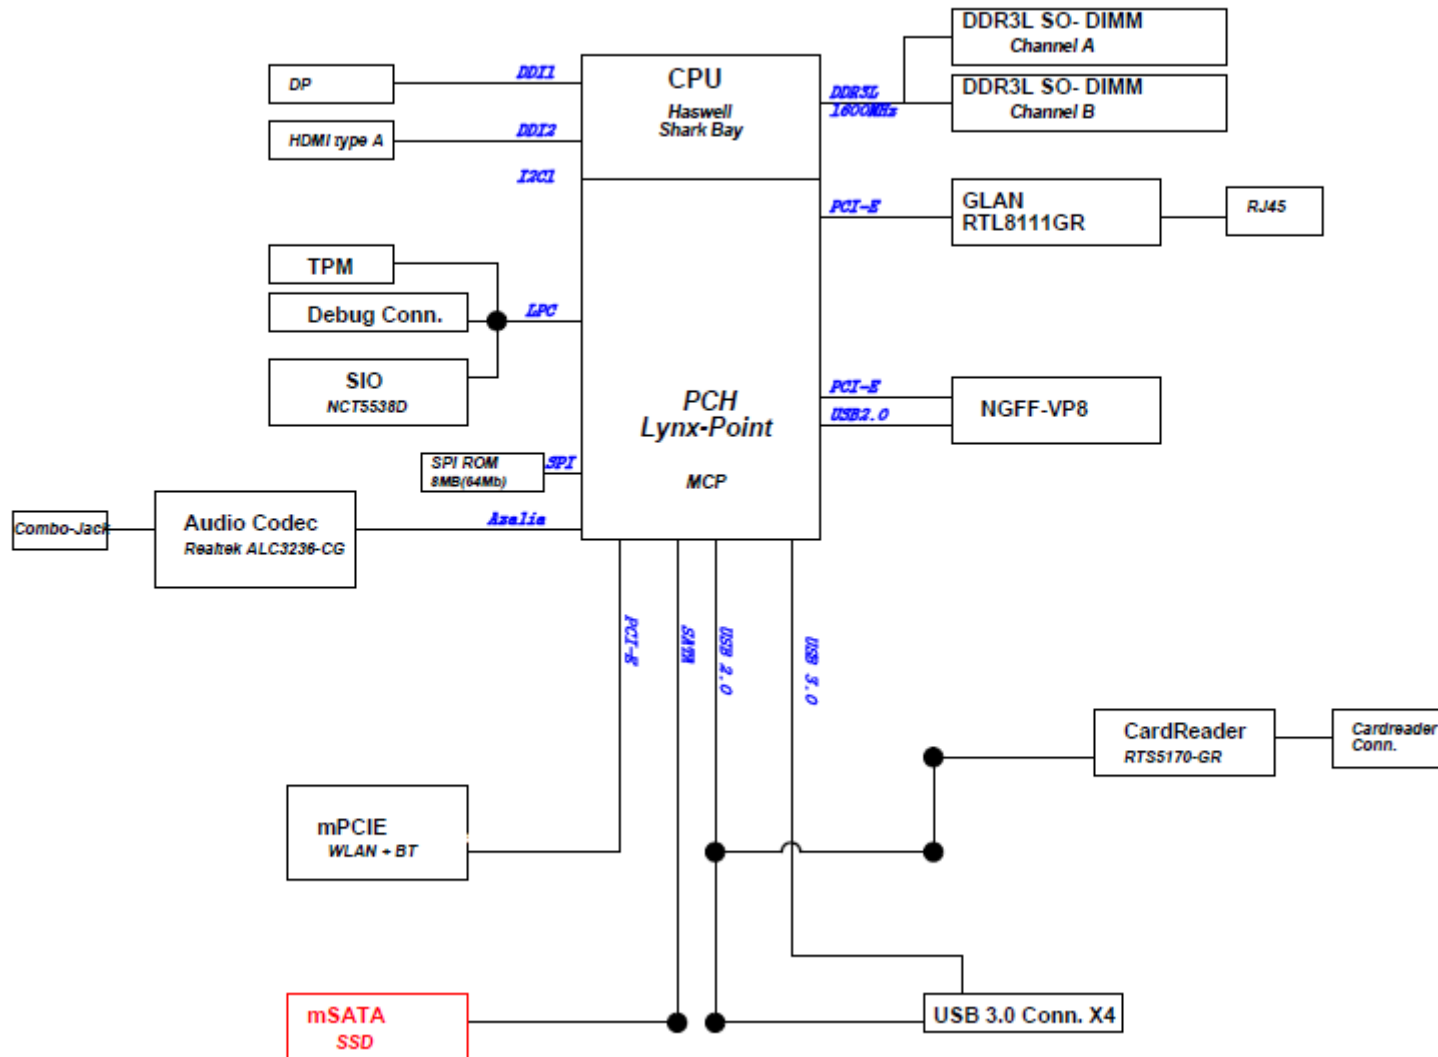

POWER FLOW

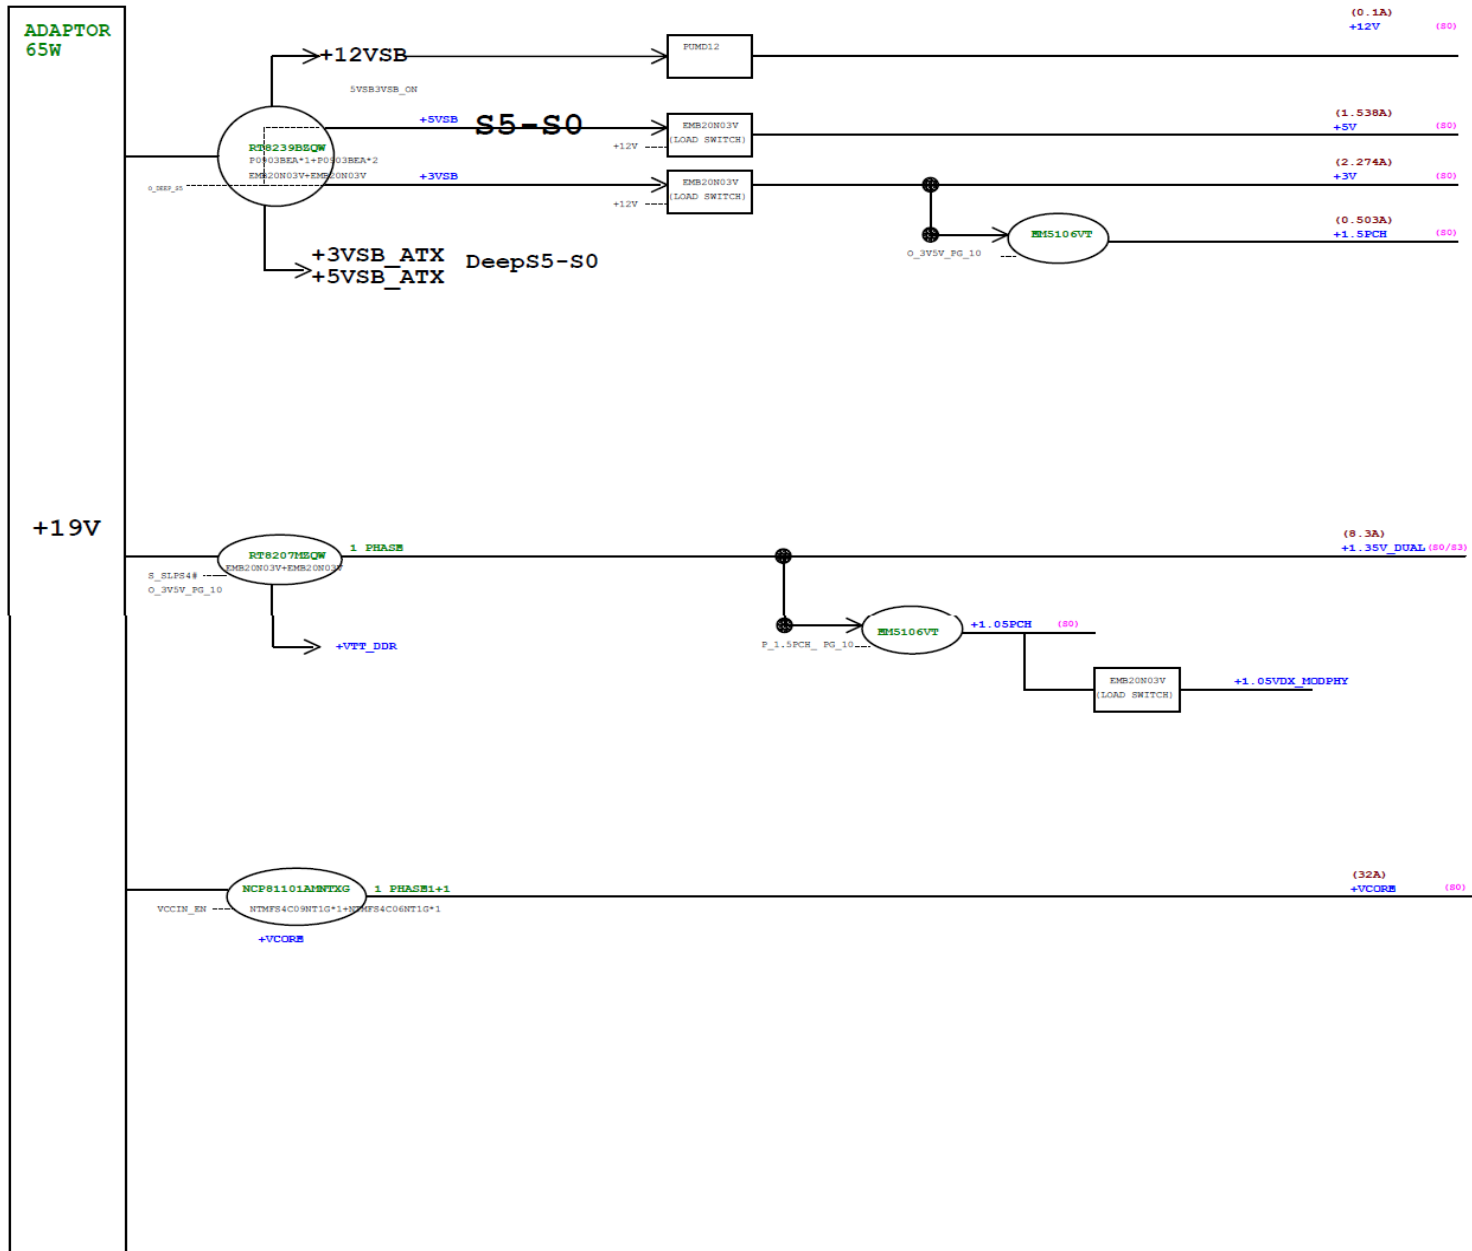


POWER ON SEQUENCE

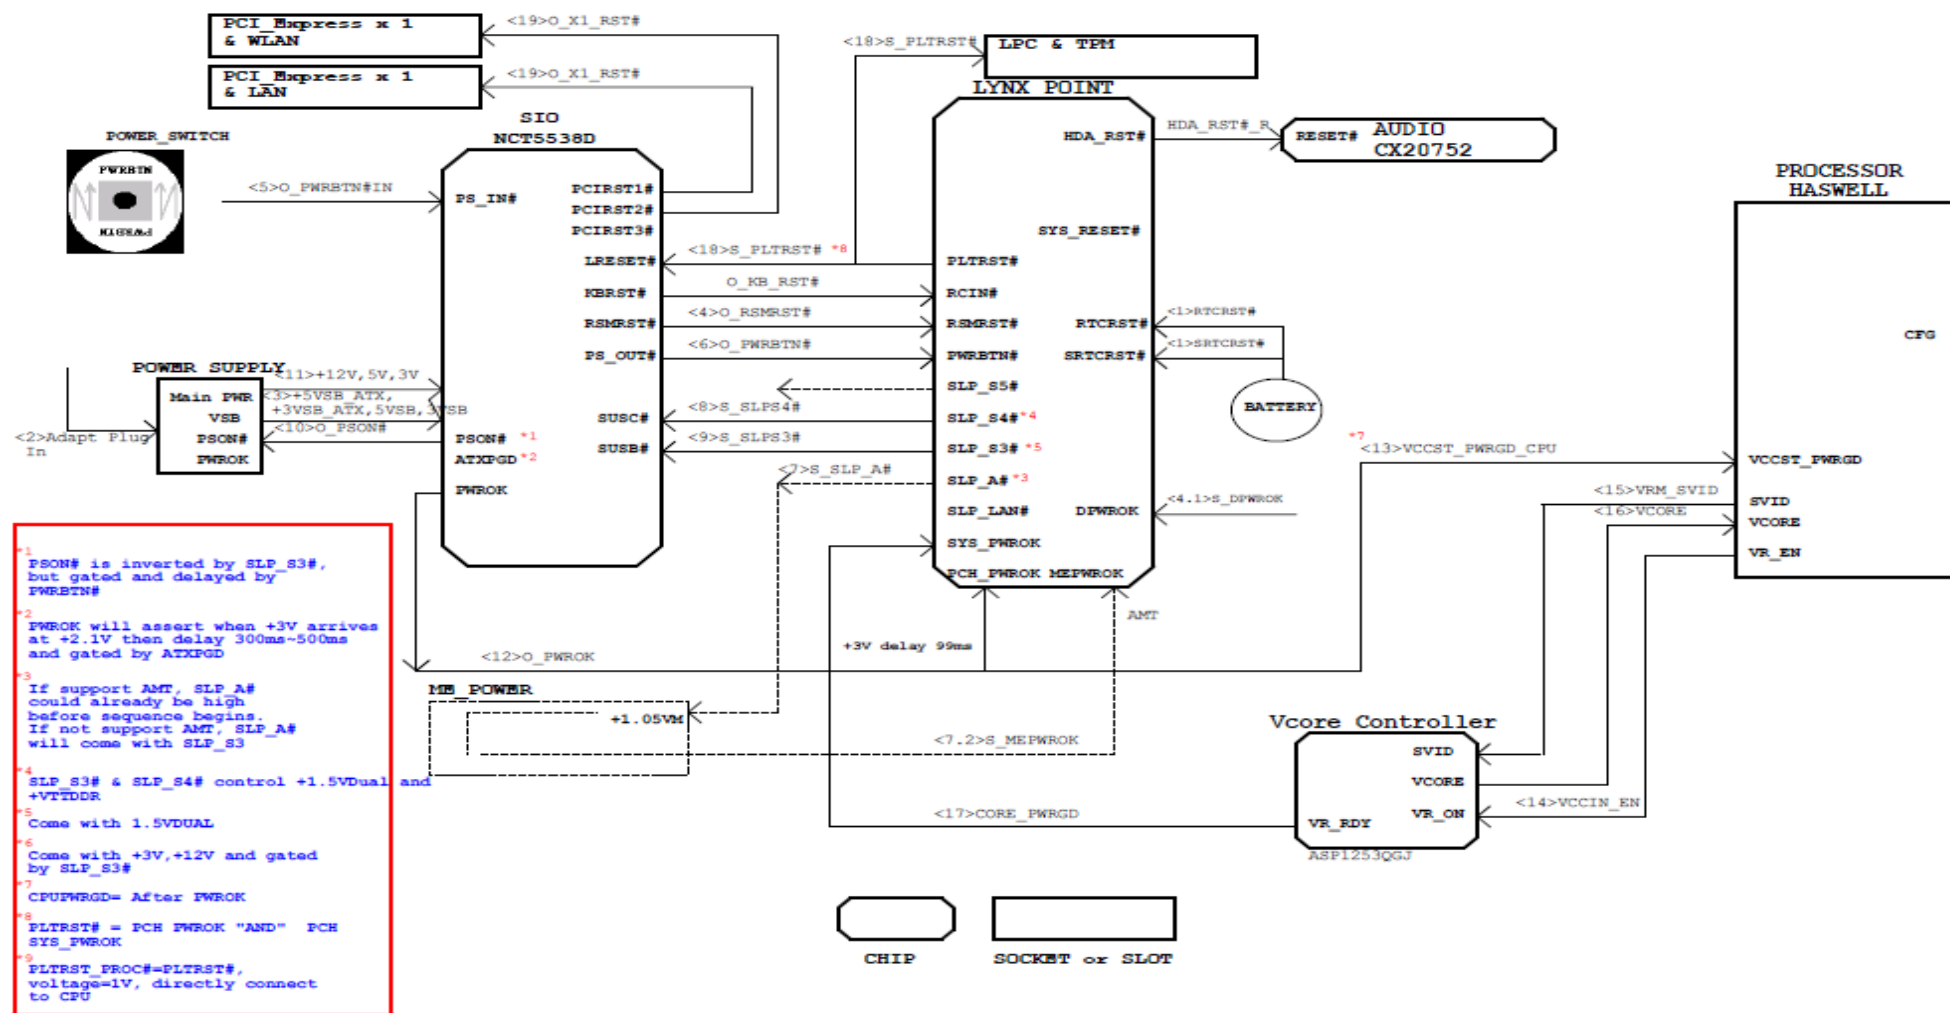


Voltage Measure Point (top side)

multi meter “VΩ mA” port touch GND


Pink number is Diode resistance to GND(without any part on MB)multimeter type DH-1240

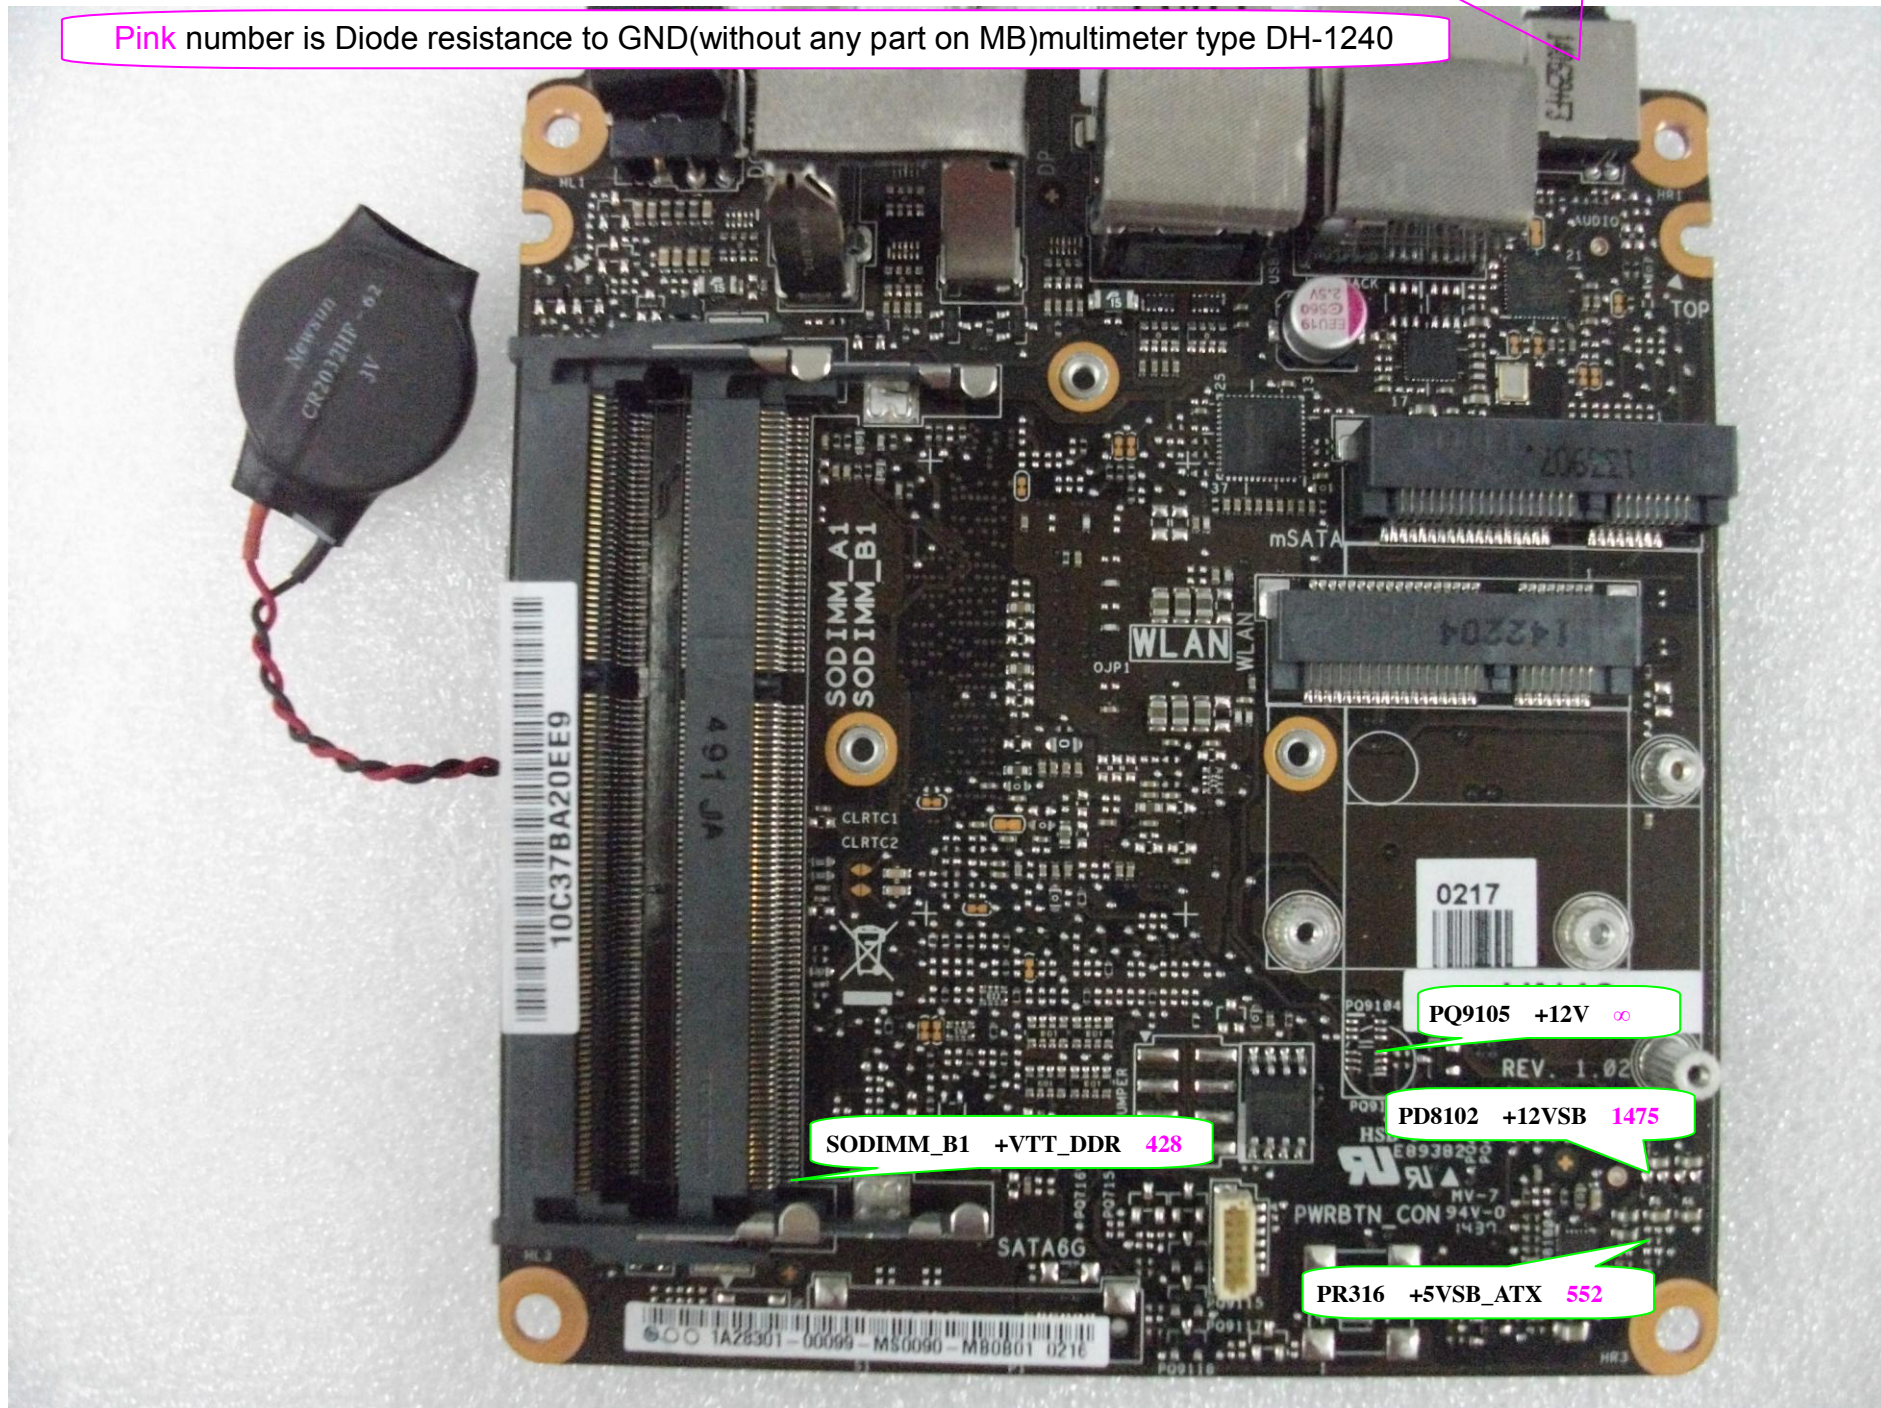

Voltage Measure Point (bottom side)

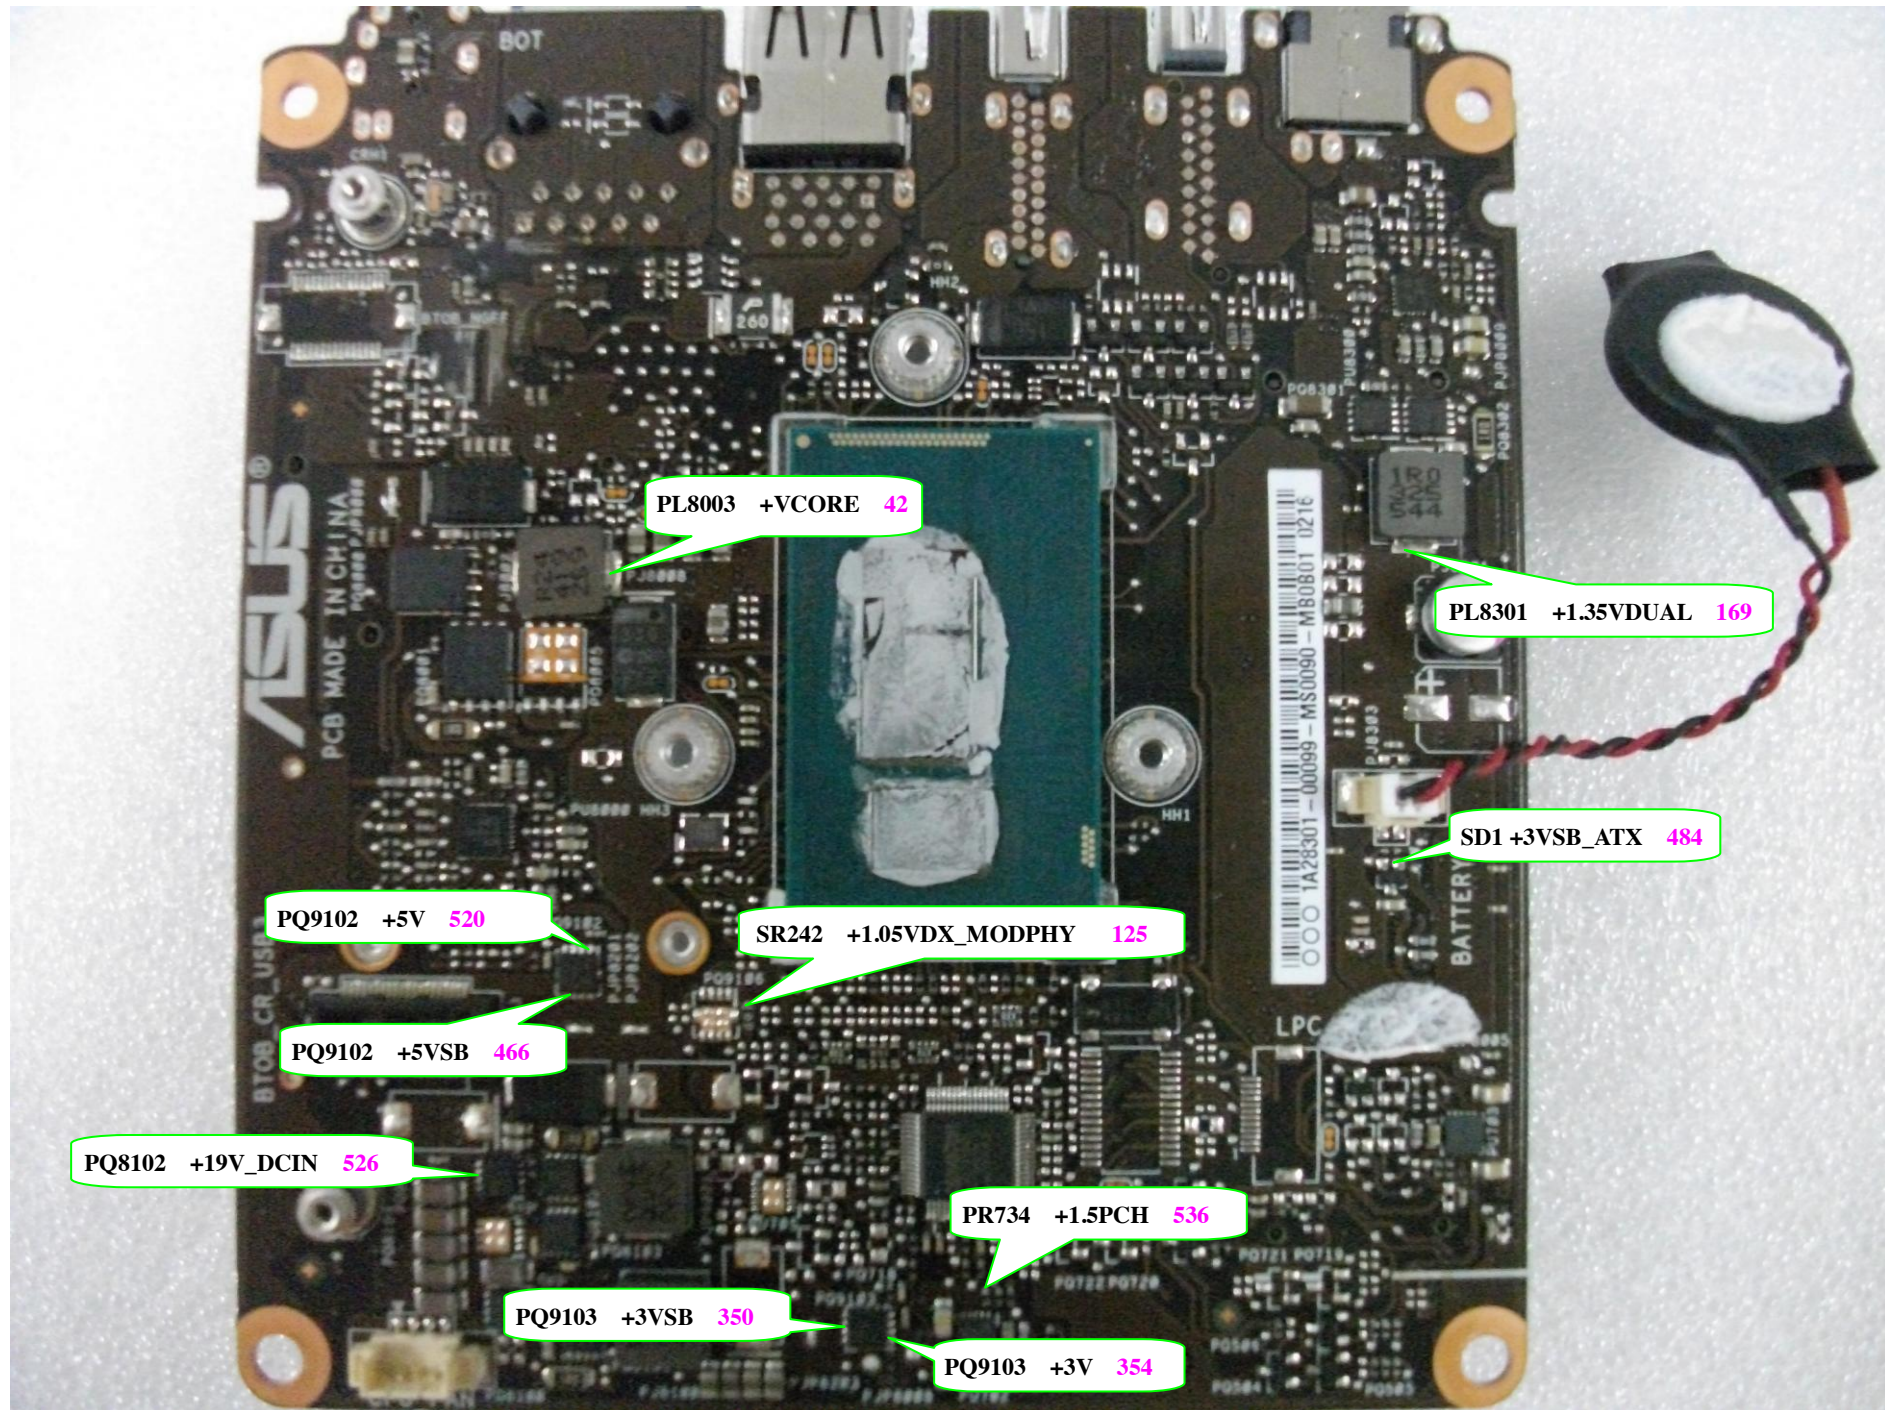

Signal Measure Point(top side)

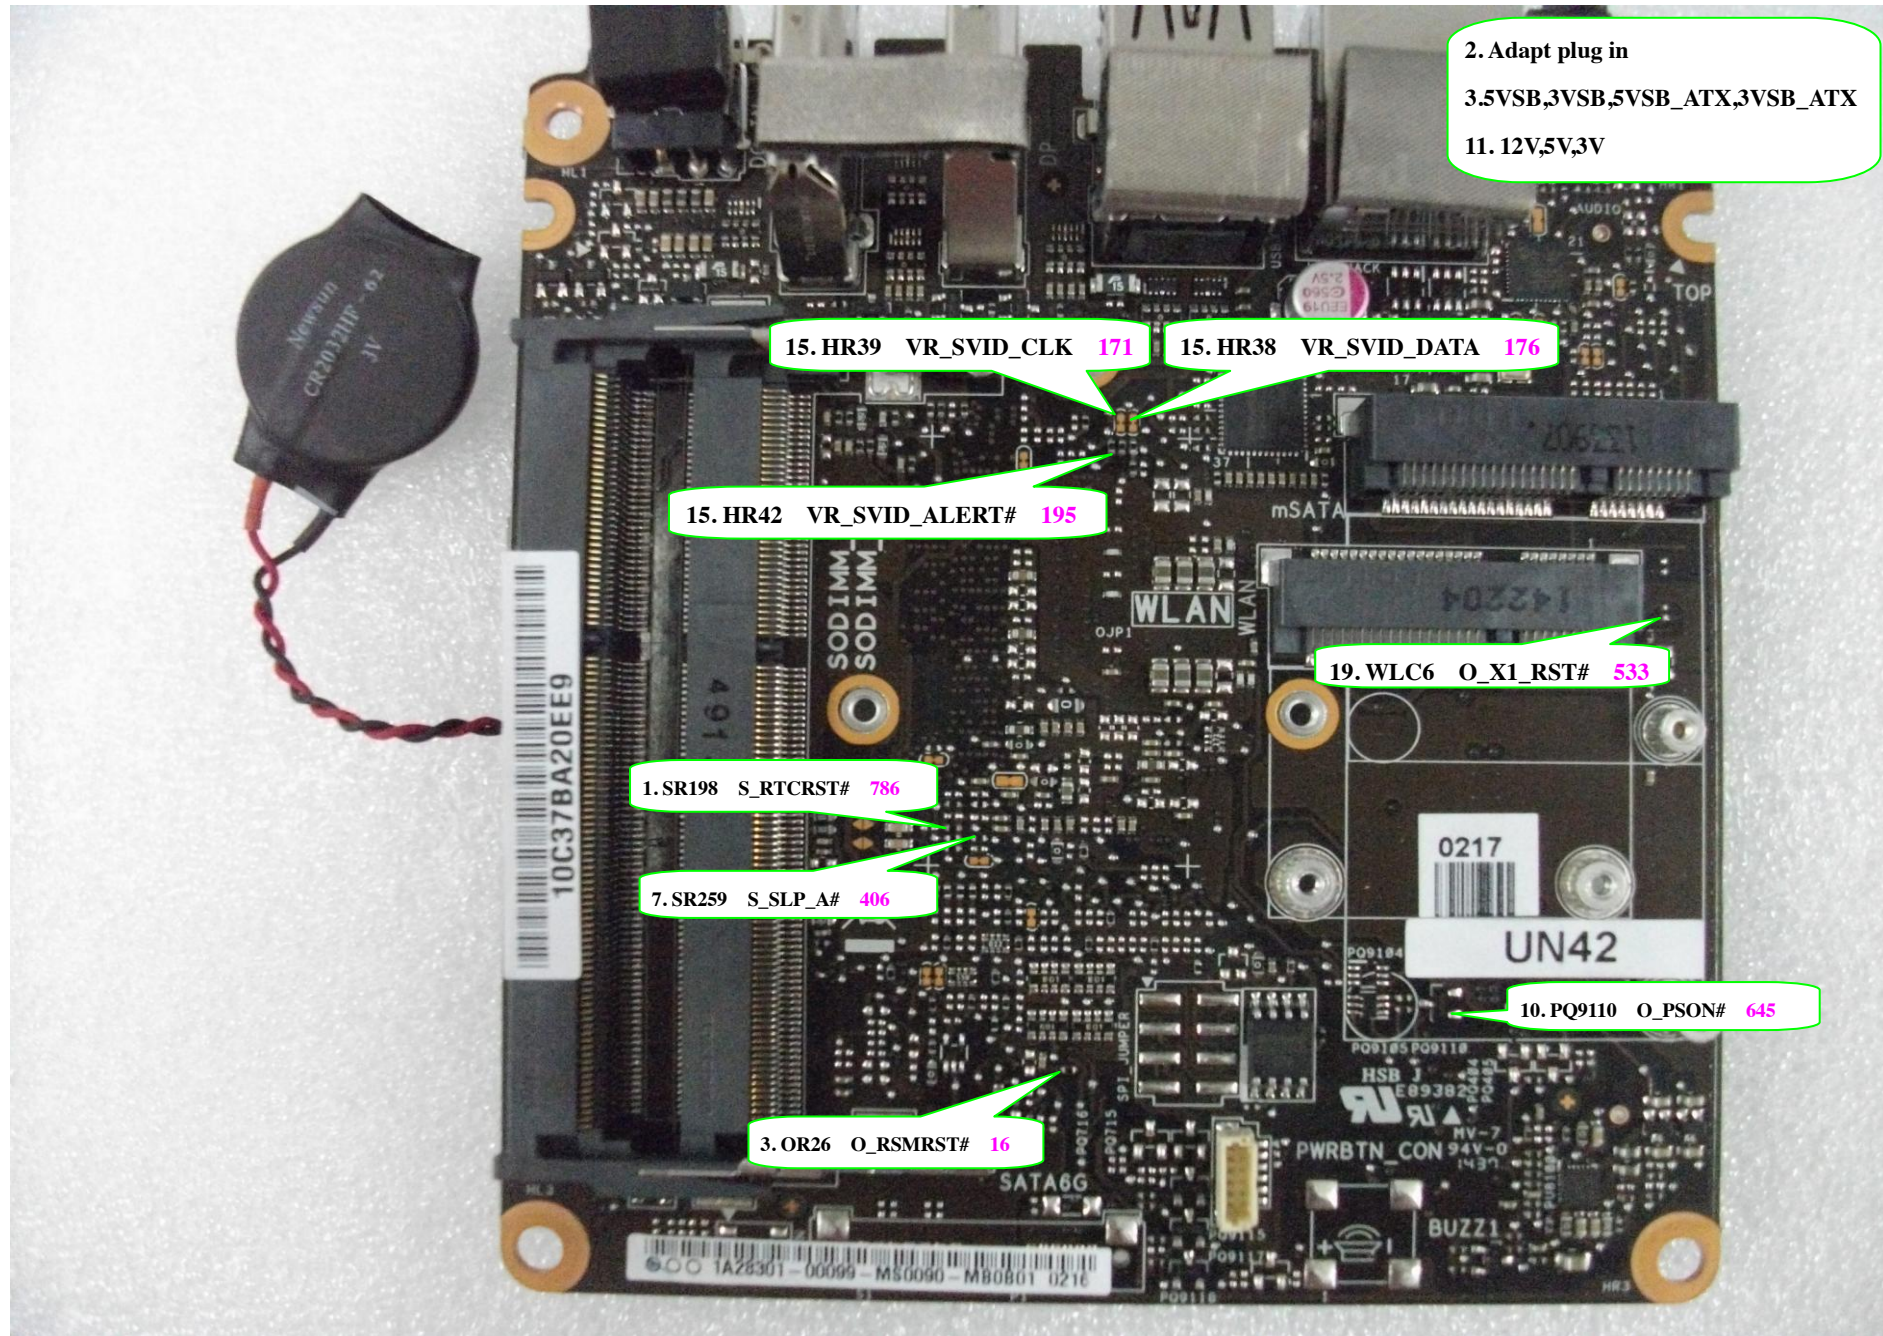

Signal Measure Point (bottom side)

