

1. Double click on the object to which you want to assign variable



2. Click on Add Variable

Select Variable for Pin:0

×

Scope: Global

OK

Cancel

Select Variable: NONE

Add Variable

Help

### 3. Adding temporary variable

Select Variable for Pin:0

Scope: Global

OK

Cancel

Select Variable: NONE

Add Variable

Help

Variable Name: GVar0

Address: %MX0

Variable Type: VAR\_TEMP


Initial Value:

Data Type: BOOL


Retention: NO

Description:


#### 4. Assigning Physical Input

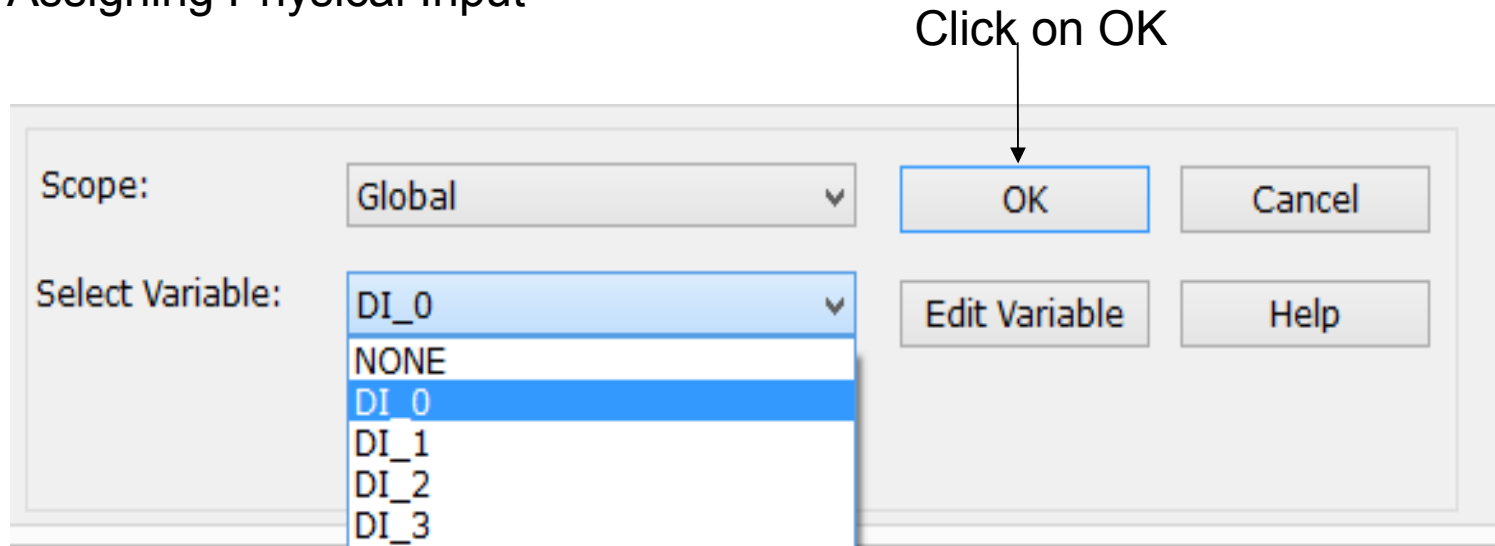


#### 5. Assigning Physical Output

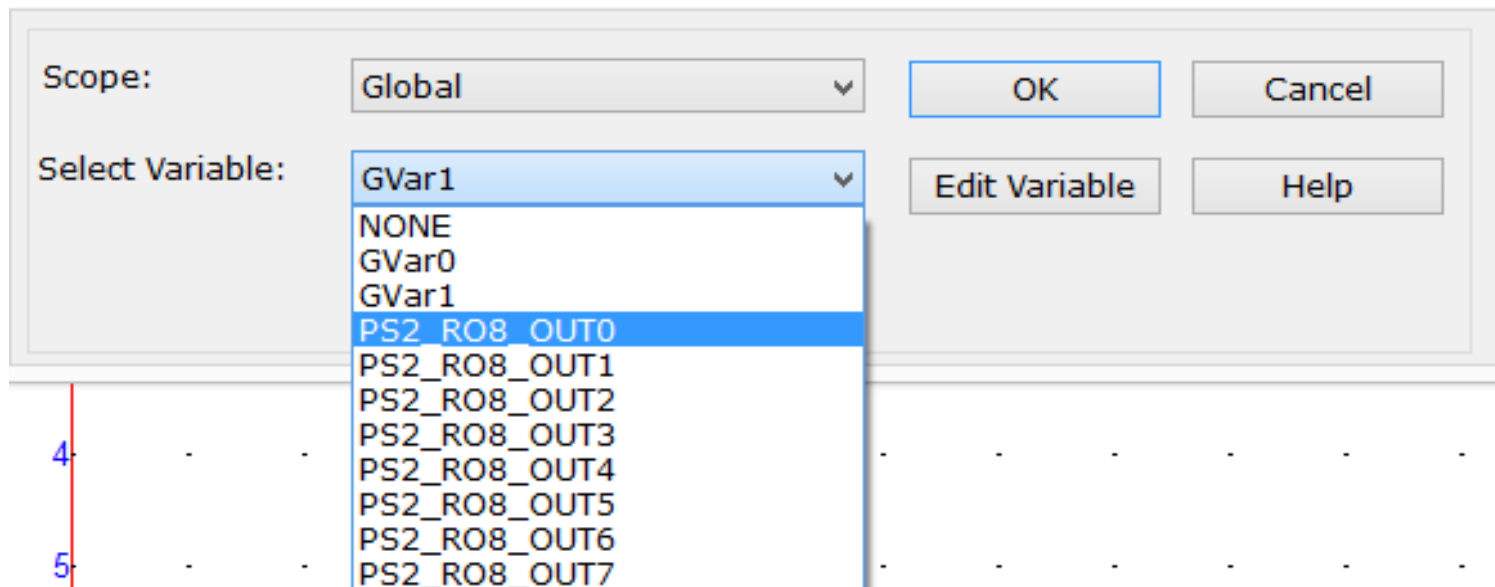

5. After adding variable.

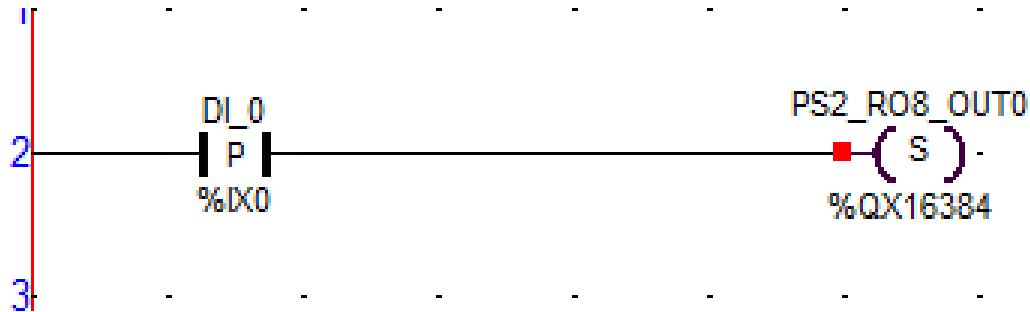

6. After simulation the ladder diagram appear as follows

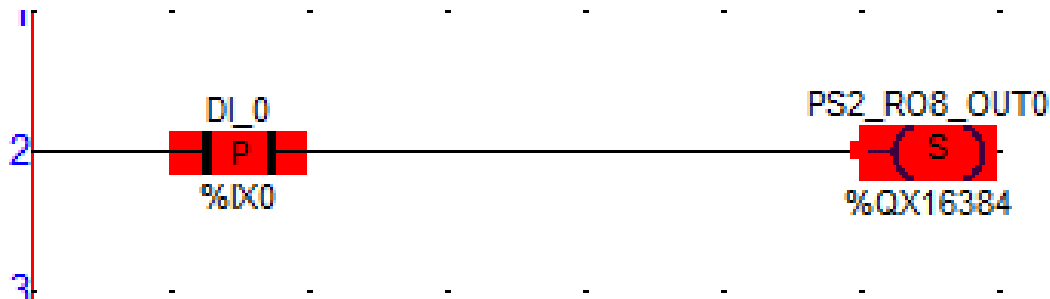

7. If double click on DI\_0 then Output will be set.

