


Pulse timer :

1. Double click on the register to which you want to assign variable

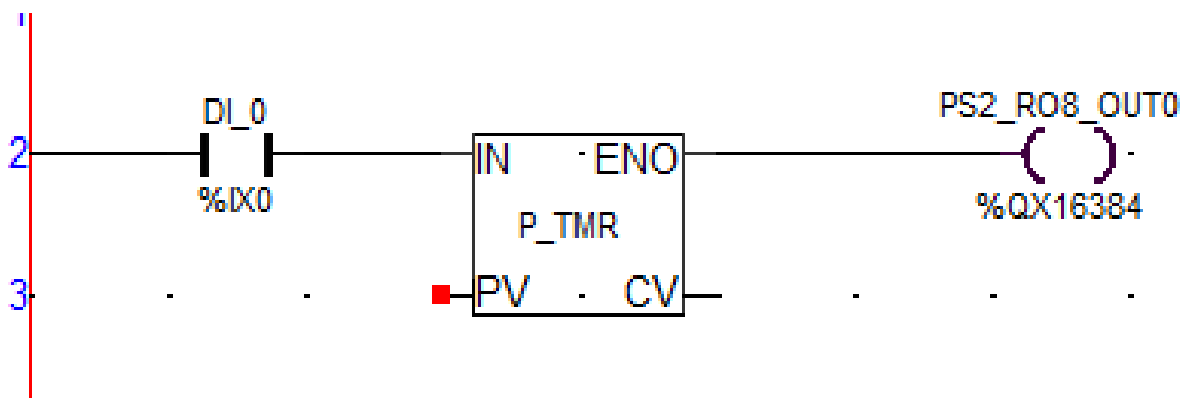

2. Click on Add Variable

Select Variable for Pin:0

Scope: Global

OK

Cancel

Select Variable: NONE

Add Variable

Help

3. Adding register

Scope: Global

Select Variable: GVar2

OK Cancel

Edit Variable Help

Variable Name: GVar2 Address: %ID0

Variable Type: VAR_INPUT Initial Value: t#2h3m4s

Pulse timer :

Data Type: TIME

Retention: NO

Description:

Variable will be initialized with time 2 hours 3 minutes and 4 seconds

For only 4 seconds initial value will be t#4s

For only 3 minutes initial value will be t#3m

For only 2 hours initial value will be t#2h

3. After Adding register

