


1. Double click on the register to which assign the variable

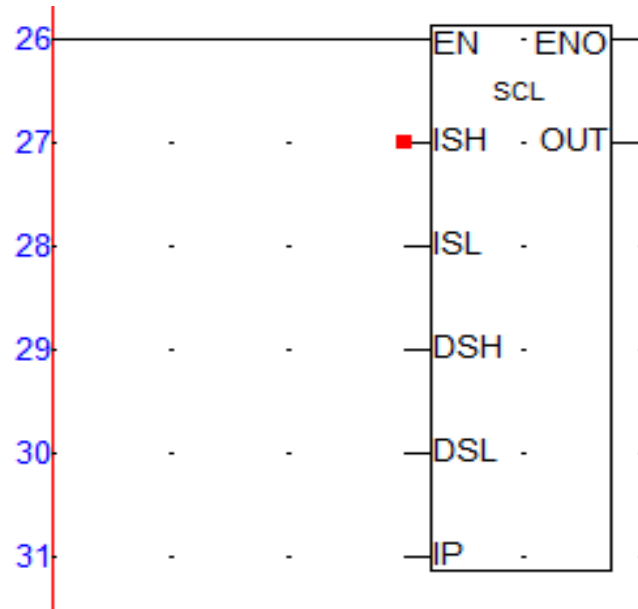

2. Click on add variable

Select Variable for Pin:1

×

Scope:

Global

▼

OK

Cancel

Select Variable:

NONE

▼

Add Variable

Help

3. Enter variable name

Select Variable for Pin:1

Scope: Global

OK

Cancel

Select Variable: Input Scale High

Edit Variable

Help

Variable Name: Input Scale High

Address: %IW17

Variable Type: VAR_INPUT


Initial Value:

Data Type: INT

Retention: NO

Description:

4. After adding register.

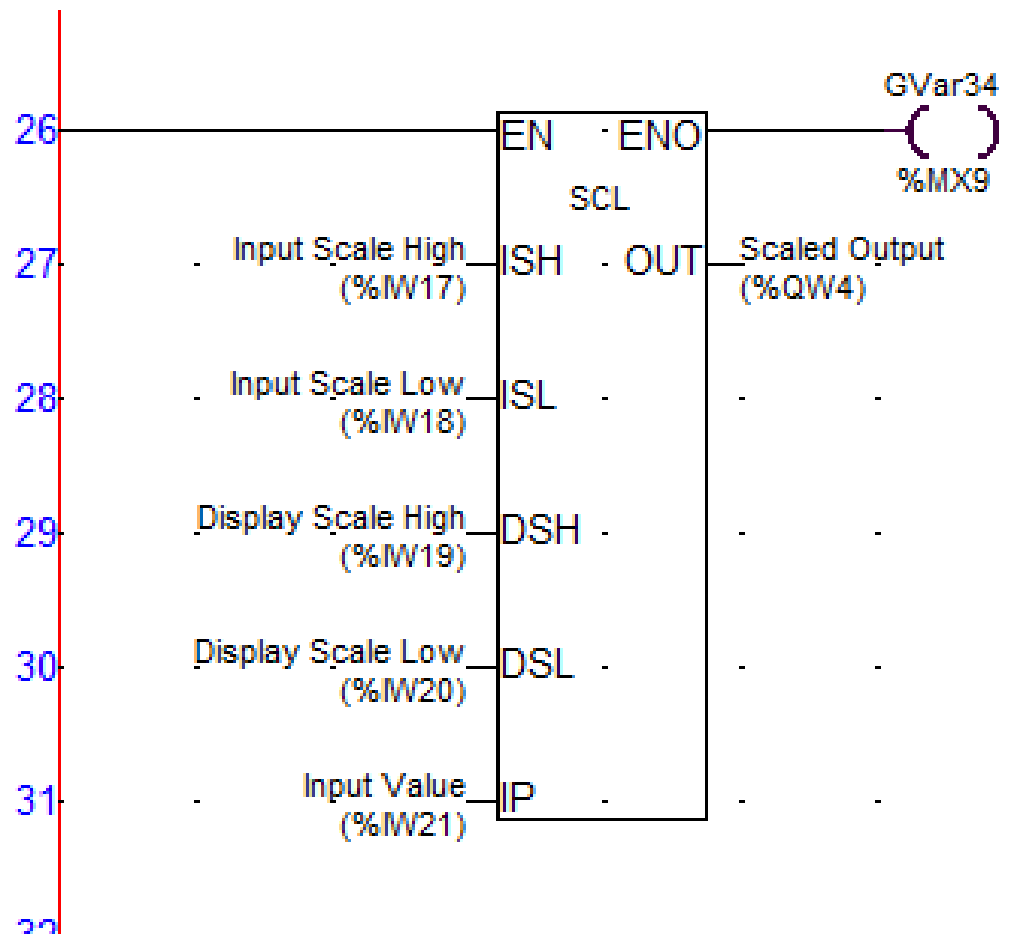

This is the example of scaling block. When the Input value is 4000 then Scale output will be 0

