

REAR AXLE LH HUB BOLT REPLACEMENT

300NR-01


HINT:

- COMPONENTS: [SEE PAGE 30-4](#)
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. REMOVE REAR TIRE

2. REMOVE REAR DISC BRAKE CALIPER ASSY LH ([SEE PAGE 30-24](#))


3. REMOVE REAR DISC ([SEE PAGE 32-46](#))

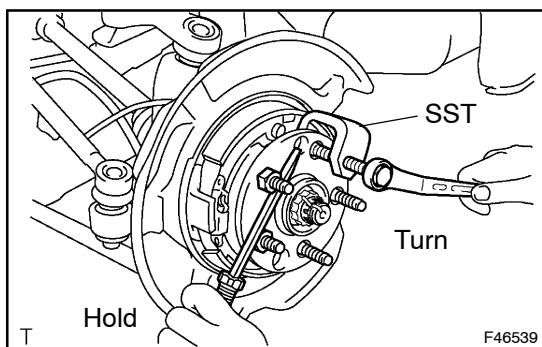

4. REMOVE REAR AXLE LH HUB BOLT

- (a) Using SST and a screwdriver or an equivalent to hold, remove the hub bolt.

SST 09628-10011

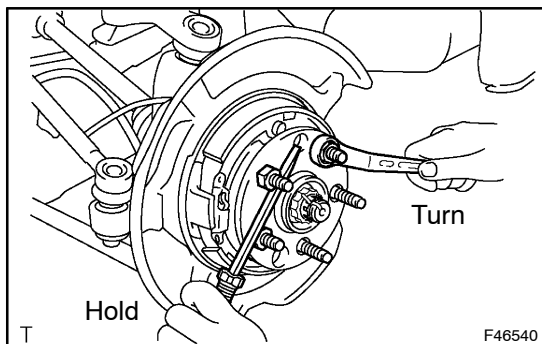

5. INSTALL REAR AXLE LH HUB BOLT

- (a) Install a washer and nut to a new bolt, as shown in the illustration.
- (b) Using a hammer handle or an equivalent to hold the hub & bearing assy, install the rear axle LH hub bolt by tightening the nut.

6. INSTALL REAR DISC ([SEE PAGE 32-46](#))

7. ADJUST PARKING BRAKE SHOE CLEARANCE ([SEE PAGE 33-33](#))

8. INSTALL REAR DISC BRAKE CALIPER ASSY LH ([SEE PAGE 30-24](#))

9. INSTALL REAR TIRE