


# VEHICLE POSITION MARK IS NOT UPDATED

## INSPECTION PROCEDURE

### 1 CHECK THE MAP DISC

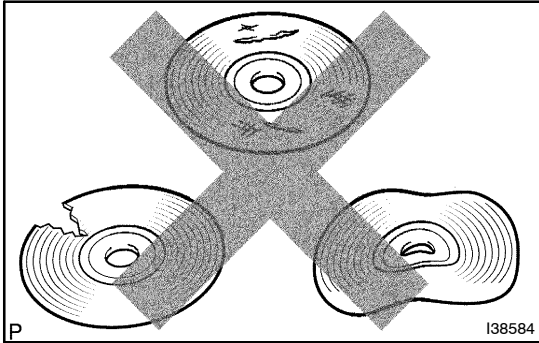

- (a) Check that the map disc is not deformed or cracked.  
**OK:** No deformations or cracks appear on the map disc.

NG

REPLACE THE MAP DISC

OK

### 2 CHECK THE MAP DISPLAY

- (a) Check if a touch scroll can be performed on the map display.

**OK:** Touch scroll can be performed.


NG

PROCEED TO NEXT CIRCUIT INSPECTION  
 SHOWN IN PROBLEM SYMPTOMS TABLE  
 (SEE PAGE 05-1771)

OK

### 3 NAVIGATION CHECK MODE (VEHICLE SENSORS)

- (a) Enter the "Navigation Check" mode (Vehicle Sensors) (see page 05-1757).

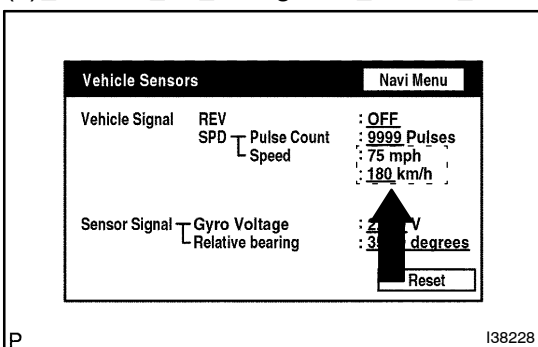

- (b) While driving, compare the "SPEED" indicator to the reading on the speedometer. Check if these readings are almost the same.

**OK:** The readings are almost the same.

NG

GO TO "SPEED SIGNAL CIRCUIT (NAVIGATION  
 ECU - COMBINATION METER ASSY)" IN THE  
 FLOW CHART (SEE PAGE 05-1859)

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE  
 (SEE PAGE 05-1771)