

## INSPECTION


1. INSPECT BLOWER MOTOR (See page DI-1864)
2. INSPECT REAR MAGNETIC VALVE (See page DI-1875)
3. INSPECT SMOKE SENSOR (See page DI-1879)
4. INSPECT EVAPORATOR

(a) Check the evaporator fins for blockage.  
If the fins are clogged, clean them with compressed air.

### NOTICE:

**Never use water to clean the evaporator.**

(b) Check the fitting for cracks or scratches.  
If necessary repair or replace.

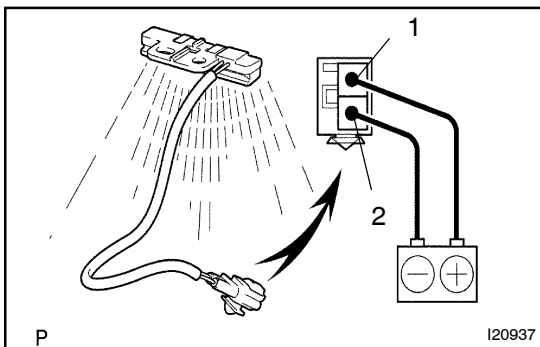

## 5. INSPECT COOLING BOX LIGHT

- (a) Connect positive (+) lead to terminal 1 and negative (-) lead to terminal 2.
- (b) Check that the cooling box light lights up.  
If cooling box light does not light up, replace the cooling box light.