

AVC-LAN CIRCUIT (STEREO COMPONENT AMPLIFIER ASSY - AUDIO AND REAR A/C CONTROL SW)


CIRCUIT DESCRIPTION

Each unit of the radio receiver system connected to AVC-LAN (communication bus) communicates by transferring the signals from each switch.



When +B short and GND short occur in this AVC-LAN, radio receiver system will not function normally as communication is discontinued.

In AVC-LAN, radio receiver assy becomes the communication master, and the radio receiver assy has enough resistance necessary for transmitting the communication.

WIRING DIAGRAM

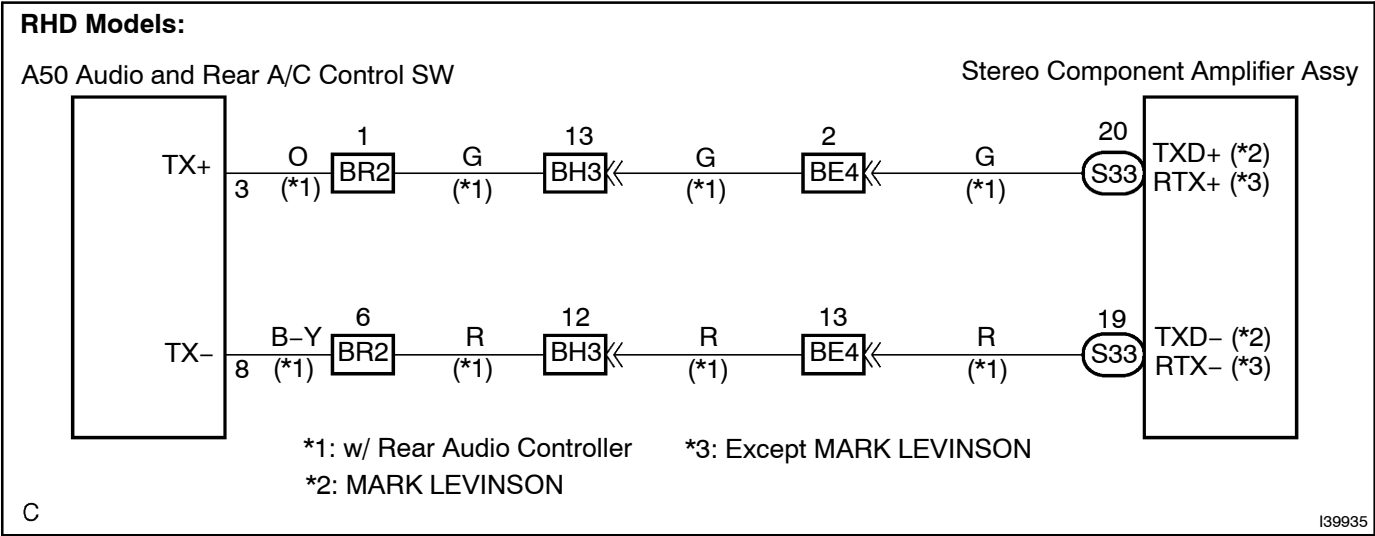

A50 Audio and Rear A/C Control SW




139936

INSPECTION PROCEDURE

1 CHECK HARNESS AND CONNECTOR (STEREO COMPONENT AMPLIFIER ASSY - AUDIO AND REAR A/C CONTROL SW)

Stereo Component Amplifier Assy:
Mark Levinson Models:

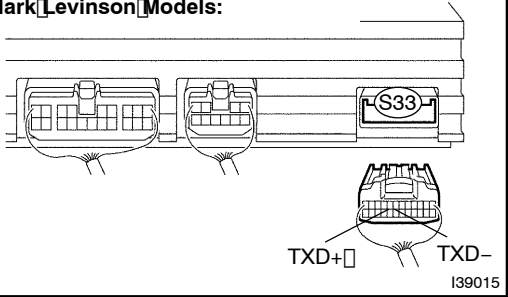

- (a) Disconnect the connector from the stereo component amplifier Assy S33 and audio and rear A/C control SW A50.
- (b) Measure the resistance according to the value(s) in the table below.


Standard:

Tester Connection	Condition	Specified Condition
TX+ - RTX+ ^{*1} , TXD+ ^{*2}	Always	Below 1 Ω
TX- - RTX- ^{*1} , TXD- ^{*2}	Always	Below 1 Ω
TX+ - Body Ground	Always	10 kΩ or higher
TX- - Body Ground	Always	10 kΩ or higher


*1: Standard Models

*2: Mark Levinson Models

Stereo Component Amplifier Assy:
Standard Models:

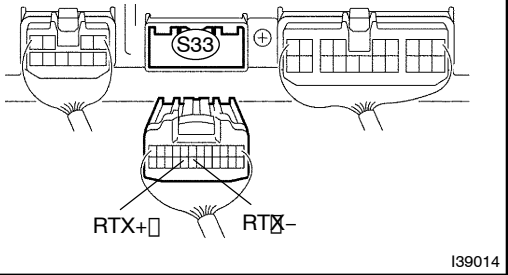

Audio and Rear A/C Control SW:

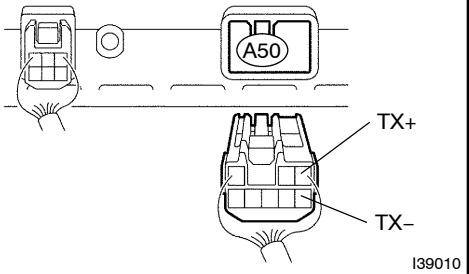

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART
(SEE PAGE 05-173)