


DTC CHECK/CLEAR

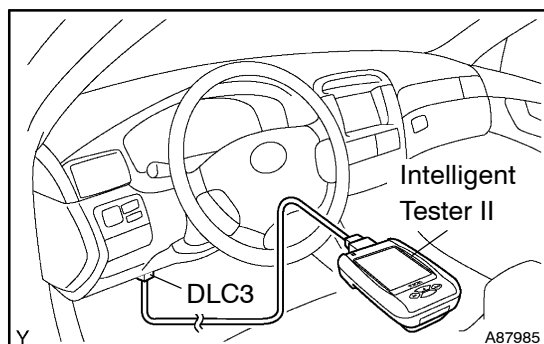

1. CHECK DTC

- (a) Connect the Intelligent tester II to the DLC3.
- (b) Turn the ignition switch ON.
- (c) Read DTCs by following the prompts on the tester screen.

HINT:

Refer to the tester operator's manual for further details.

2. CLEAR DTC

- (a) Connect the Intelligent tester II to the DLC3.
- (b) Turn the ignition switch ON.
- (c) Erase DTCs and freeze frame data with the tester.
Enter the following menus: DIAGNOSIS/ENHANCED
OBD II/DTC INFO/CLEAR CODES; and press YES.

HINT:

Refer to the tester operator's manual for further details.