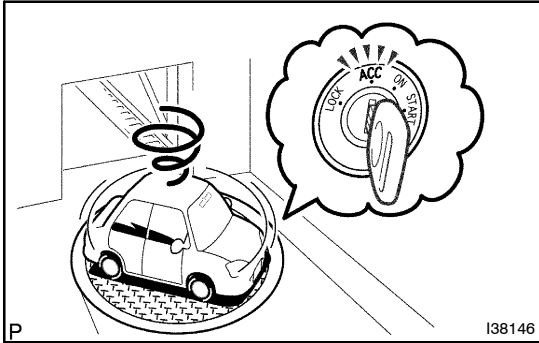


**CURSOR OR MAP ROTATES WHEN VEHICLE IS STOPPED****INSPECTION PROCEDURE****1 CHECK CONDITION**

- (a) Check with the customer if the vehicle has been turned by a turn-table at parking.

**OK: The vehicle has not been turned by a turntable.**

**HINT:**

If the ignition switch is turned to the ACC or ON position while the vehicle is being turned by a turntable, the system may store the angular velocity at this time. For this reason, the vehicle position cursor could deviate.

**NG****TURN IGNITION SWITCH TO ON POSITION  
WHEN VEHICLE IS COMPLETELY STOPPED****OK**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE  
(SEE PAGE 05-1771)**