


DIAGNOSIS SYSTEM

1. DESCRIPTION


- (a) Climate seat control system data and the Diagnostic Trouble Code (DTCs) can be read in the Data Link Connector 3 (DLC3) of the vehicle. When the system seems to be malfunctioning, use the intelligent tester II to check for malfunctions and perform repairs.

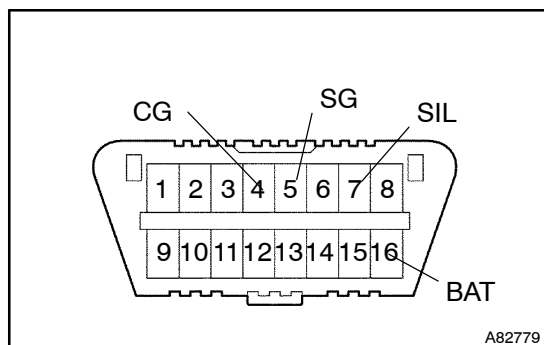

2. CHECK DLC3

The vehicle's ECU uses the ISO 15765-4 for communication protocol. The terminal arrangement of the DLC3 complies with ISO 15031-03 and matches the ISO 15765-4 format.

Symbol	Terminal No.	Name	Reference terminal	Result	Condition
SIL	7	Bus "+" line	5 – Signal ground	Pulse generation	During transmission
CG	4	Chassis ground	Body ground	1 Ω or less	Constant
SG	5	Signal ground	Body ground	1 Ω or less	Constant
BAT	16	Battery positive	Body ground	9 to 14 V	Constant

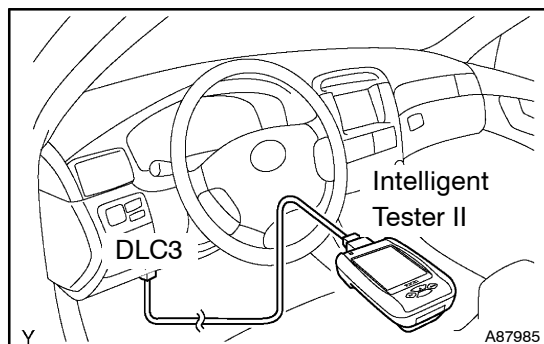

HINT:

Connect the cable of the intelligent tester II to the DLC3, turn the ignition switch ON and attempt to use the intelligent tester II. If the screen displays UNABLE TO CONNECT TO VEHICLE, a problem exists in the vehicle side or the tester side.

- If the communication is normal when the tool is connected to another vehicle, inspect the DLC3 on the original vehicle.
- If the communication is still impossible when the tool is connected to another vehicle, the problem is probably in the tool itself. Consult the Service Department listed in the tool's instruction manual.

3. CHECK BATTERY VOLTAGE

Standard: 11 to 14 V

If voltage is below 11 V, recharge the battery before proceeding.