


INSPECTION

1. INSPECT IGNITION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	–	No continuity
ACC	1 – 3	Continuity
ON	1 – 2 – 3 5 – 6	Continuity
START	1 – 2 4 – 5 – 6	Continuity


If continuity is not as specified, replace the switch.

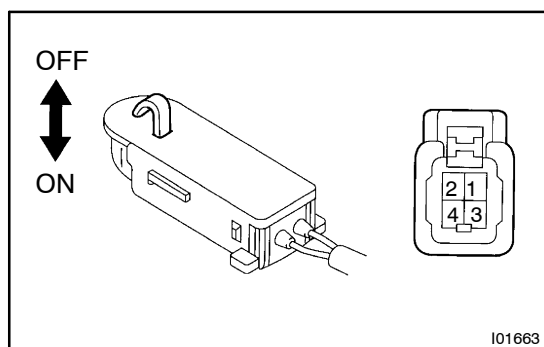

2. w/o Smart key: INSPECT KEY UNLOCK WARNING SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (Ignition key removed)	–	No continuity
ON (Ignition key set)	1 – 2	Continuity

If continuity is not as specified, replace the switch.

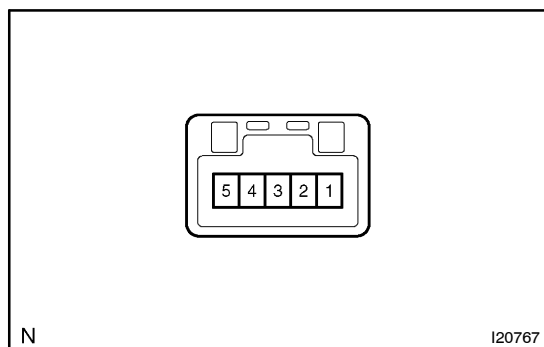

3. w/ Smart key: INSPECT ENGINE SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (Ignition key removed)	–	No continuity
ON (Ignition key insert)	2 – 4	Continuity
PUSH (Ignition key set)	3 – 4	Continuity

If continuity is not as specified, replace the switch.