


DTC CHECK/CLEAR

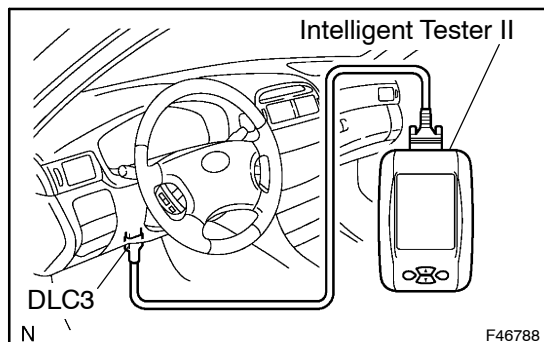

1. DTC CHECK

- (a) Connect the intelligent tester II to the DLC3.
- (b) Turn the ignition switch to the ON position.
- (c) Read the DTCs on the tester screen.

2. DTC CLEAR

- (a) Connect the intelligent tester II to the DLC3.
- (b) Turn the ignition switch to the ON position.
- (c) Clear the DTCs following the prompts on the tester screen.

HINT:

Intelligent tester II has a "Snapshot" function which records the monitored data.

Refer to the intelligent tester II operator's manual for further details.