


DTC CHECK/CLEAR

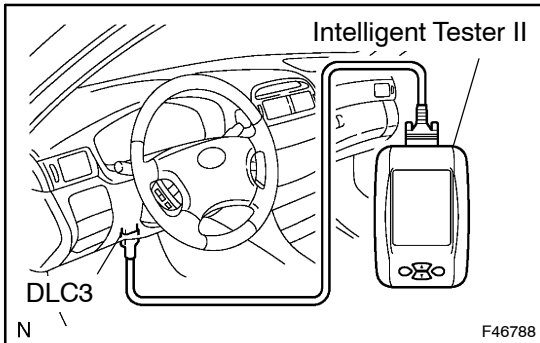

1. DTC CHECK

- (a) Connect the intelligent tester II to the DLC3.
- (b) Turn the ignition switch to the ON position.
- (c) Read the DTCs by following the prompts on the tester screen.

2. DTC CLEAR

- (a) Connect the intelligent tester II to the DLC3.
- (b) Turn the ignition switch to the ON position.
- (c) Clear the DTCs following the prompts on the tester screen.

HINT:

Refer to the intelligent tester II operator's manual for further details.