


## DTC CHECK/CLEAR

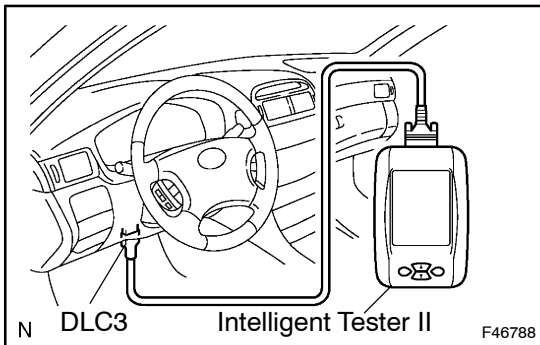

### 1. DTC CHECK

#### (a) Check DTCs.

- (1) Connect the intelligent tester II to the DLC3.
- (2) Turn the ignition switch to the ON position.
- (3) Read the DTCs by following the prompts on the tester screen.

#### HINT:

Refer to the intelligent tester II operator's manual for further details.

#### (b) Clear the DTCs using the intelligent tester II.

#### HINT:

After repairing the malfunctions, clear the DTCs.

- (1) Connect the intelligent tester II to the DLC3.
- (2) Turn the ignition switch to the ON position.
- (3) Erase the DTCs following the prompts on the tester screen.

#### HINT:

Refer to the intelligent tester II operator's manual for further details.