


INSPECTION

1. INSPECT FUEL LID OPENER SWITCH CONTINUITY

- Check that continuity exists between terminals with the switch ON.
- Check that no continuity exists between terminals with the switch OFF.

If continuity is not as specified, replace the switch assembly.

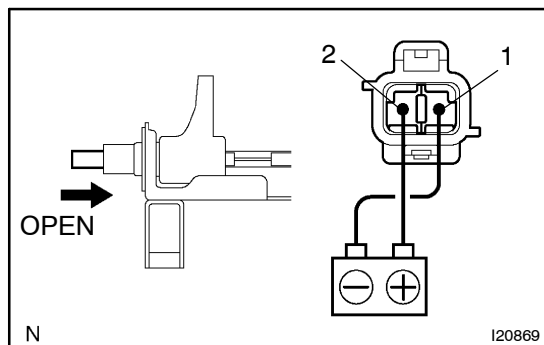

2. INSPECT FUEL LID OPENER MOTOR OPERATION

- Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1.
- Check that the motor operates in the open direction.

If operation is not as specified, replace the motor.