
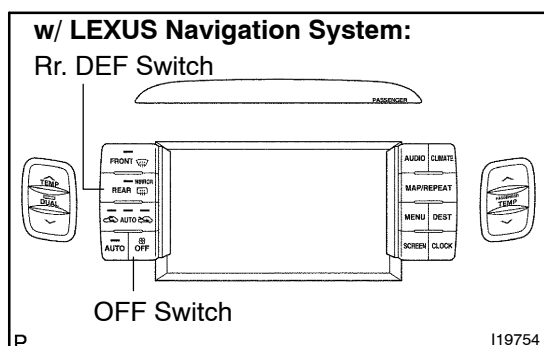
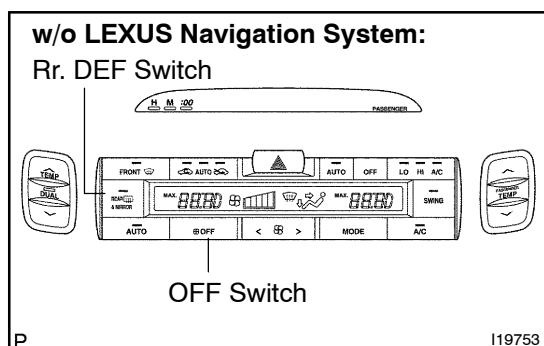
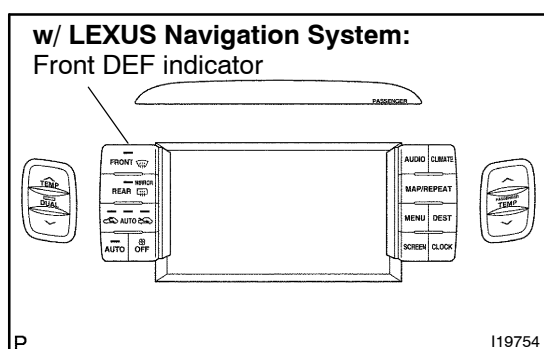


INITIALIZATION

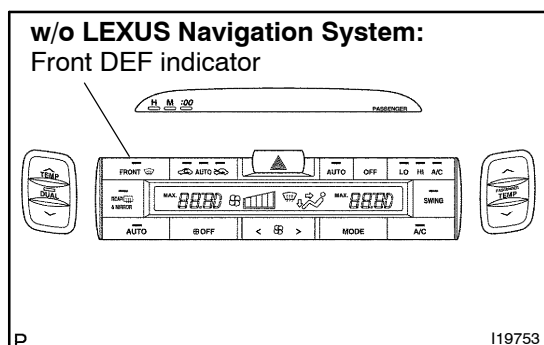

1. STEP MOTORS INITIALIZING FUNCTION

Step motor initializing procedure (Automatic initializing)

- (1) When the battery is reconnected and the ignition switch is turned to the ON position for the first time, the initializing function of the step motors is activated. In this case, the "FRONT DEF" indicator blinks.
- (2) If mode indication is different from the actual air outlet in actuator check, turn the ignition switch to the ON or START position while pressing the "Rr DEF" and "OFF" switches simultaneously. Step motor initialization occurs and the "DEF" indicator blinks.