


O/D DIRECT CLUTCH SPEED SENSOR

ON-VEHICLE REPAIR

ATOXW-04

1. REMOVE FRONT EXHAUST PIPE (See page EM-123)

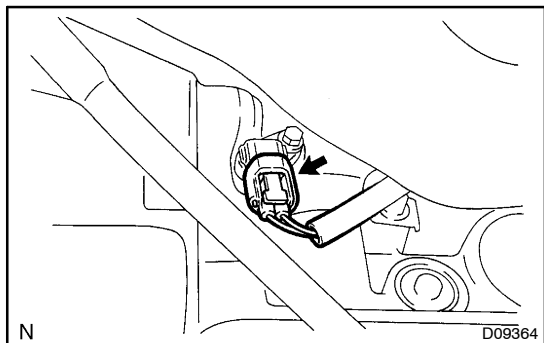

2. DISCONNECT O/D DIRECT CLUTCH SPEED SENSOR CONNECTOR
3. REMOVE O/D DIRECT CLUTCH SPEED SENSOR
 - (a) Remove the bolt and O/D direct clutch speed sensor.
 - (b) Remove the O-ring from the O/D direct clutch speed sensor.
4. INSTALL O/D DIRECT CLUTCH SPEED SENSOR
 - (a) Coat a new O-ring with ATF and install it to the O/D direct clutch speed sensor.
 - (b) Install the O/D direct clutch speed sensor to the transmission case and torque the bolt.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
5. CONNECT O/D DIRECT CLUTCH SPEED SENSOR CONNECTOR
6. INSTALL FRONT EXHAUST PIPE (See page EM-123)