


Rear Fog Light Circuit

CIRCUIT DESCRIPTION

Receiving the rear fog light switch signal from the luggage room J/B ECU makes the rear fog light come on.

WIRING DIAGRAM

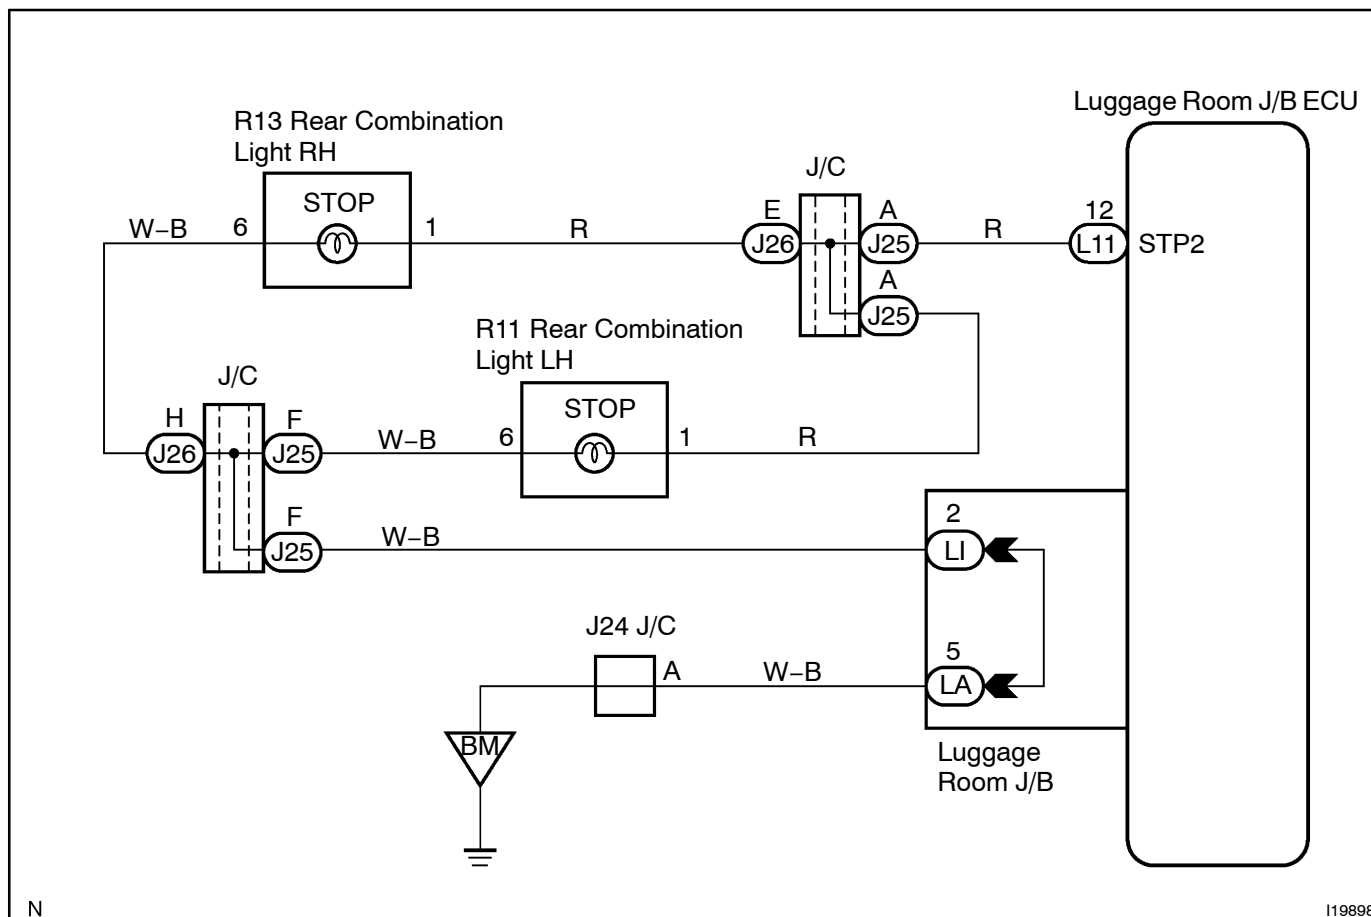

N

I19898

INSPECTION PROCEDURE

1	Check rear fog light using LEXUS hand-held tester.
---	--

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the rear fog light using ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptom table ([See page DI-1119](#)).

NG

2	Check rear fog light bulb.
---	----------------------------

NG

Replace the failure light bulb.

OK

3	Check wireharness and connector between rear fog light and luggage room J/B ECU, battery and rear fog light (See page N-35).
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1119](#)).