

REASSEMBLY


INSTALL NEW SPEED SENSOR

- (a) Clean the contacting surface of the axle hub and a new speed sensor.

NOTICE:

Do not allow any foreign matter sticking to the sensor rotor.

- (b) Place the speed sensor on the axle hub so that the connector is set at the bottom under the on-vehicle condition.

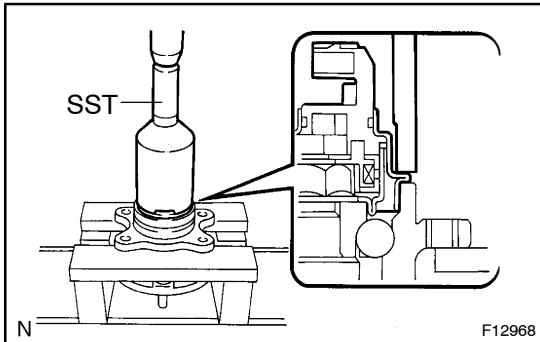

- (c) Using SST and a press, install a new speed sensor to the axle hub.

SST 09214-76011

NOTICE:

- **Do not tap the speed sensor with a hammer directly.**
- **Check that there should be no foreign matter on the speed sensor detection portion.**
- **Press in the speed sensor straightly and slowly.**