


CIGARETTE LIGHTER ASSY REAR REPLACEMENT

67140-01


HINT:

- COMPONENTS: [SEE PAGE 71-1](#).
 - Installation is in the reverse order of removal.
1. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER [SEE PAGE 71-6](#)
 2. REMOVE CONSOLE PANEL SUB-ASSY UPPER [SEE PAGE 71-6](#)
 3. REMOVE INSTRUMENT PANEL CUP HOLDER ASSY [SEE PAGE 71-6](#)
 4. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSY [SEE PAGE 71-6](#)
 5. REMOVE CONSOLE BOX CARPET [SEE PAGE 71-6](#)
 6. REMOVE REAR CONSOLE ARMREST ASSY [SEE PAGE 71-6](#)

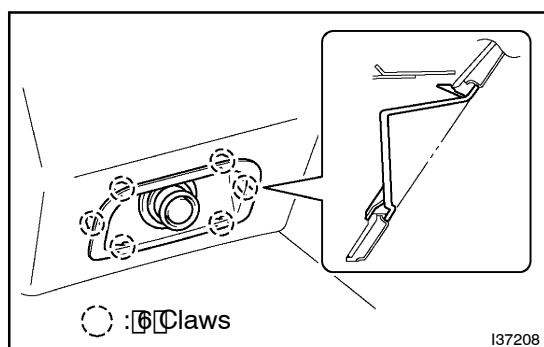


7. REMOVE CONSOLE BOX PLATE

- (a) Disconnect the connector.
- (b) Disengage the 6 claws and remove the console box plate.

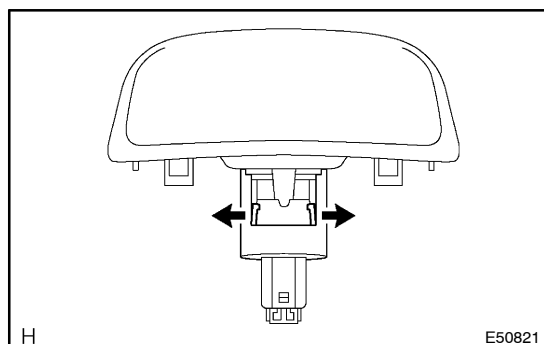

8. REMOVE CIGARETTE LIGHTER COVER REAR

- (a) Disengage the 2 claws and remove the cigarette lighter cover rear.

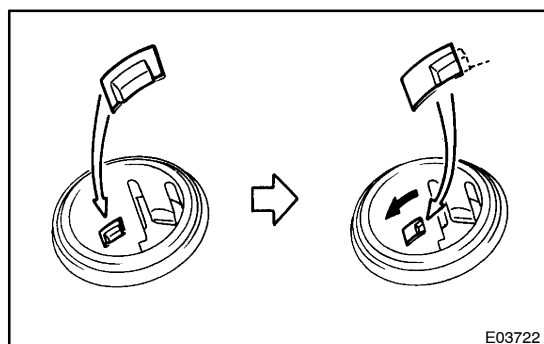

9. REMOVE CIGARETTE LIGHTER ASSY REAR

- (a) Turn the socket counterclockwise as shown in the illustration.
- (b) Disengage the claw between the socket and the cigarette lighter bezel stay, and push out the socket.
- (c) Align the socket with the notch on the cigarette lighter bezel stay, and remove the cigarette lighter assy.

10. REMOVE CIGARETTE LIGHTER BEZEL STAY REAR

11. REMOVE CIGAR LIGHTER HOLE BEZEL

12. INSTALL CIGARETTE LIGHTER ASSY

- (a) Align the socket with the notch on the cigarette lighter bezel stay, push in the cigarette lighter assy as hard as possible to install it.