


REPLACEMENT

HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. REMOVE FRONT WHEELS

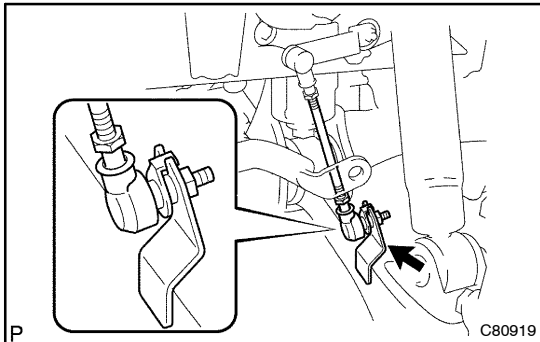


2. REMOVE HEIGHT CONTROL SENSOR SUB-ASSY FRONT LH

- (a) Disconnect the connector.
- (b) Remove the nut and disconnect the height control sensor link.

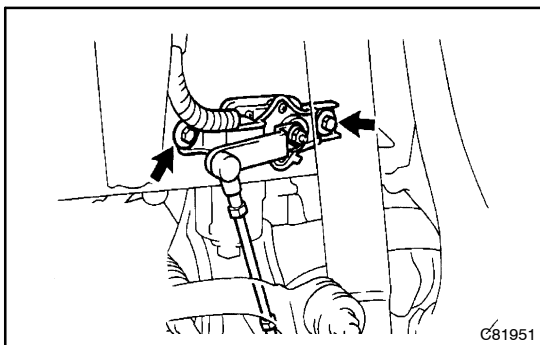


- (c) Remove the 2 bolts and height control sensor sub-assy front LH.

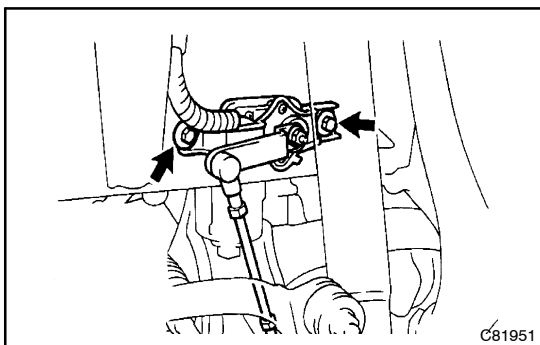

3. INSTALL HEIGHT CONTROL SENSOR SUB-ASSY FRONT LH

- (a) Install the height control sensor sub-assy front LH with 2 bolts.

Torque: 7.8 N·m (80 kgf·cm, 69 in·lbf)

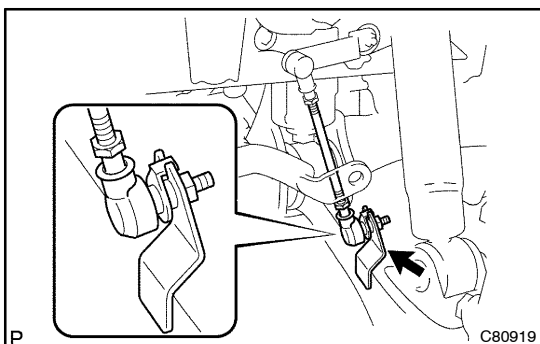

- (b) Connect the height control sensor link with a nut.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
- (c) Connect the connector.

4. INSTALL FRONT WHEELS**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)****5. ADJUST VEHICLE HEIGHT (SEE PAGE 25-4)**