


HEIGHT CONTROL SENSOR SUB-ASSY REAR LH REPLACEMENT


65111-01

1. REMOVE REAR WHEEL

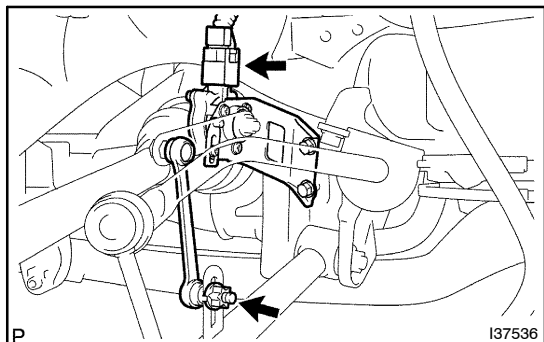


2. REMOVE HEIGHT CONTROL SENSOR SUB-ASSY REAR LH

- Disconnect the connector.
- Remove the nut and disconnect the height control sensor link.

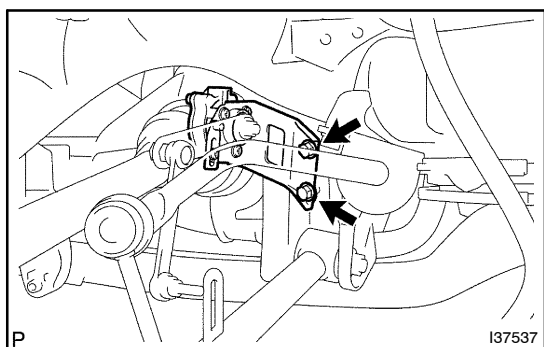


- Remove the 2 nuts and the height control sensor sub-assy rear LH.

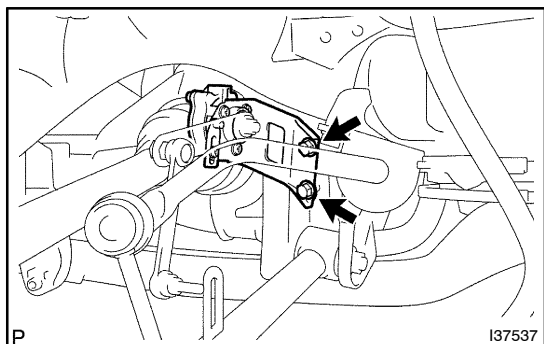

3. INSTALL HEIGHT CONTROL SENSOR SUB-ASSY REAR LH

- Install the height control sensor sub-assy rear LH with the 2 nuts.

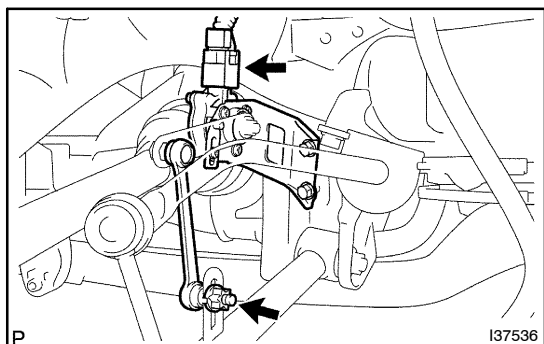

- Install the height control sensor link with the nut.
Torque: 5.4 N·m (55 kgf·cm, 48 in. lbf)
- Connect the connector.

4. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

5. HEADLIGHT AIM ONLY (SEE PAGE 65-12)