

REPLACEMENT

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

1. **PRECAUTION (SEE PAGE 60-1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)**
3. **REMOVE ROOF HEADLINING ASSY (SEE PAGE 76-52)**
4. **REMOVE CURTAIN SHIELD AIR BAG ASSY LH**

- (a) Disconnect the connector from the curtain shield airbag assy LH.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- (b) Remove the 8 bolts and the curtain shield airbag assy LH.

HINT:

Remove the bolts from the front side of the vehicle in order.

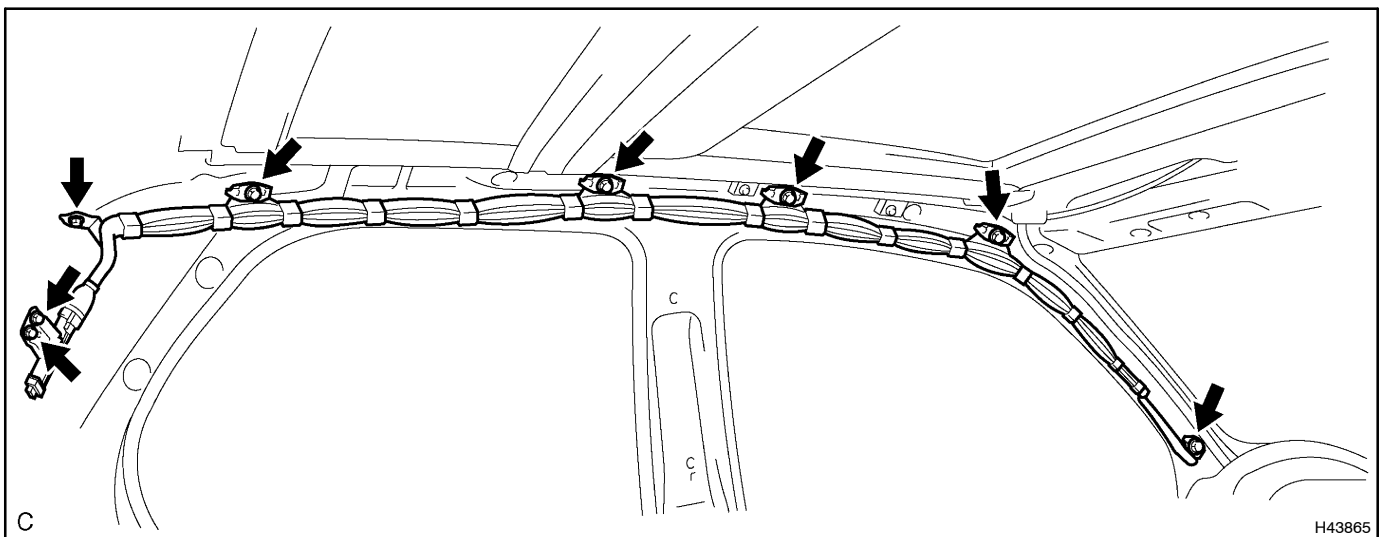

H43865

5. INSPECT CURTAIN SHIELD AIR BAG ASSY LH (SEE PAGE 60-15)

6. INSTALL CURTAIN SHIELD AIR BAG ASSY LH

(a) Install the curtain shield air bag assy LH with the 8 bolts.


HINT:

Install the bolts from the rear side of the vehicle in order.

Torque:

Bolt A: 11 N·m (112 kgf·cm, 8 ft·lbf)

Bolt B: 14 N·m (143 kgf·cm, 10 ft·lbf)

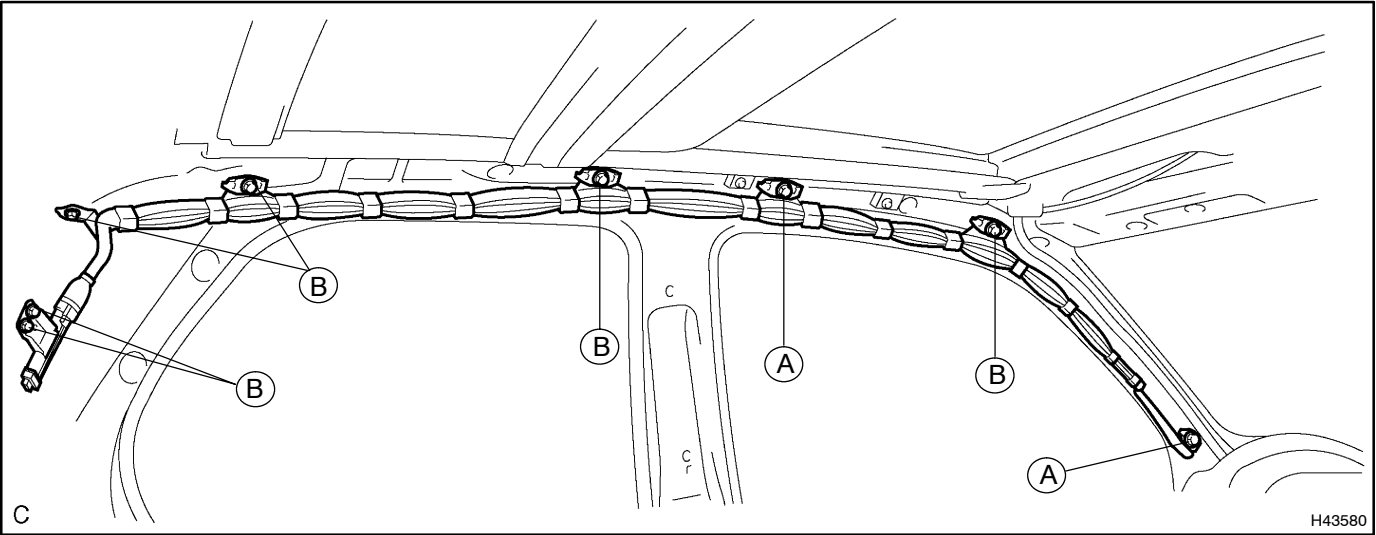

(b) Connect the connector to the curtain shield air bag assy LH.

NOTICE:

When handling the air bag connector, take care not to damage the air bag wire harness.

7. INSTALL ROOF HEADLINING ASSY (SEE PAGE 76-52)

8. CONNECT BATTERY NEGATIVE TERMINAL

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Page
Power Window Control System	01-20
Front Power Seat Control System	01-20
Back Guide Monitor System	01-20

9. INSPECT SRS WARNING LIGHT (SEE PAGE 05-954)