


DISPLAY DOES NOT DIM (NIGHT SCREEN) WITH TAIL SWITCH ON

INSPECTION PROCEDURE

1 CHECK IMAGE QUALITY SETTING

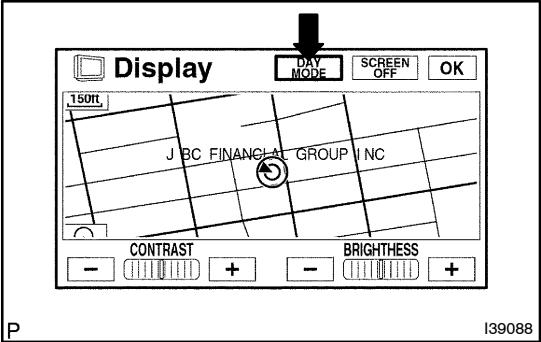


- (a) Enter the option screen by pressing the "OPTION" switch.
- (b) Enter the display adjustment screen by pressing the "DISPLAY" switch.
- (c) Turn the light control switch to TAIL position.
- (d) Check if "DAY MODE" on the display adjustment is ON.
OK: "DAY MODE" is ON.

OK TURN FORCED "DAY MODE" SETTING OFF

NG

2 DISPLAY CHECK MODE (VEHICLE SIGNAL CHECK MODE)

- (a) Enter the "Display Check" mode (Vehicle Signal Check Mode) (see page 05-1755).
- (b) Turn the light control switch TAIL, HEAD or OFF position.

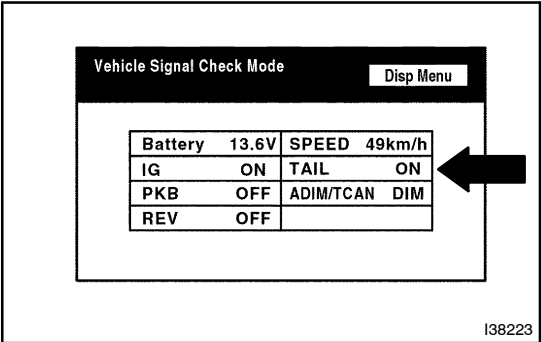

Standard:

TAIL switch	Display
TAIL or ON	ON
OFF	OFF

HINT:
The display is updated once per second. As a result, it is normal for the display to lag behind the actual change in the switch.

OK REPLACE MULTI-DISPLAY (SEE PAGE 67-8)

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1771)