


# POWER OUTLET SOCKET ASSY CTR

## REPLACEMENT

6714Q-01

### HINT:

- COMPONENTS: [SEE PAGE 71-1](#).
  - Installation is in the reverse order of removal.
1. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSY CENTER [SEE PAGE 71-6](#)
  2. REMOVE INSTRUMENT PANEL CUP HOLDER ASSY [SEE PAGE 71-6](#)
  3. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSY [SEE PAGE 71-6](#)
  4. REMOVE CONSOLE BOX CARPET [SEE PAGE 71-6](#)
  5. REMOVE REAR CONSOLE ARMREST ASSY [SEE PAGE 71-6](#)

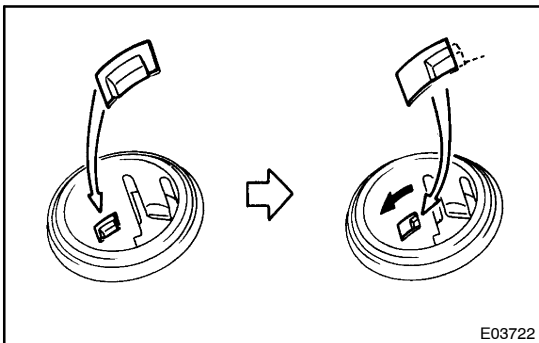

### 6. REMOVE POWER OUTLET SOCKET ASSY CTR

- (a) Turn the socket counterclockwise as shown in the illustration.
- (b) Disengage the claw between the socket and the socket cover, and push out the socket.
- (c) Align the socket with the notch on the socket cover, and remove the socket assy.

### 7. INSTALL POWER OUTLET SOCKET ASSY CTR

- (a) Align the socket with the notch on the socket cover, push in the socket assy as hard as possible to install it.