


## DTC CHECK/CLEAR

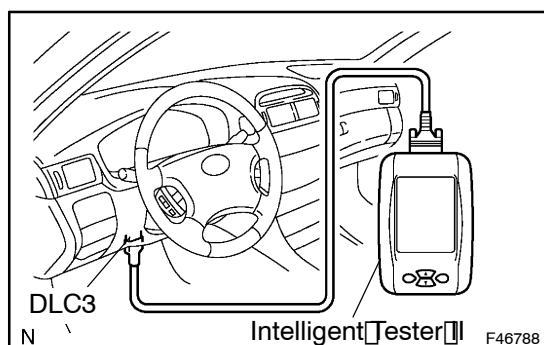

### 1. CHECK FOR DTCs

- (a) Prepare the Intelligent Tester II.
- (b) Connect the Intelligent Tester II to the DLC3 at the lower part of the instrument panel.
- (c) Turn the ignition switch to the ON position and turn the Intelligent Tester II on.
- (d) Use the Intelligent Tester II to check for DTCs, and note or print the result (see the operator's manual for operating instructions).
- (e) [See page 05-740](#) to confirm the details of the DTCs.

### 2. CLEAR DTCs

- (a) Operate the intelligent tester II to clear the DTCs (see the operator's manual for operating instructions).