


REPLACEMENT


HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

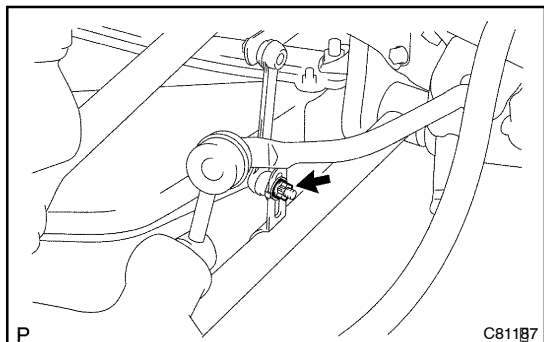


1. REMOVE HEIGHT CONTROL SENSOR SUB-ASSY REAR LH

- Disconnect the connector.
- Place matchmarks on the height control sensor link and bracket.
- Remove the nut and disconnect the height control sensor link.

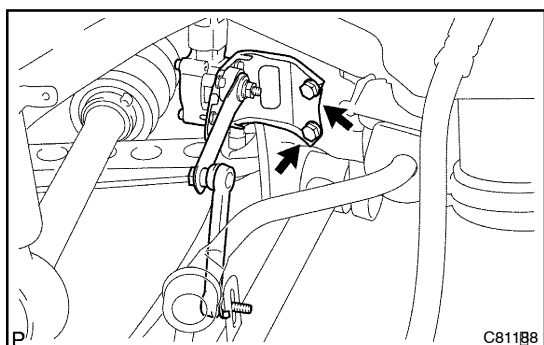


- Remove the 2 bolts and height control sensor sub-assy rear LH.

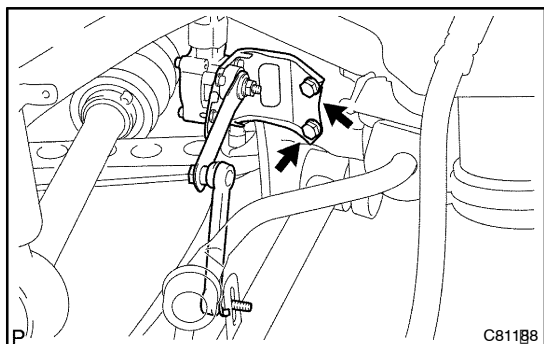

2. INSTALL HEIGHT CONTROL SENSOR SUB-ASSY REAR LH

- Install the height control sensor sub-assy rear LH with 2 bolts.

Torque: 7.8 N·m (80 kgf·cm, 69 in.·lbf)

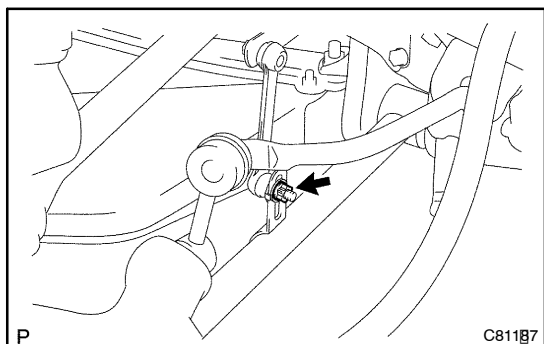

- Align the matchmarks on the height control sensor link and bracket.
- Install the nut.
- Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)**
- Connect the connector.

3. ADJUST VEHICLE HEIGHT (SEE PAGE 25-4)