

## REMOVAL

### 1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.


Charge system with refrigerant and inspect for leakage of refrigerant.

**Specified amount**

**Single A/C:** 650 ± 50 g (22.93 ± 1.76 oz.)

**Dual A/C:** 900 ± 50 g (31.74 ± 1.76 oz.)

### 2. REMOVE INSTRUMENT PANEL AND REINFORCEMENT (See page BO-131)

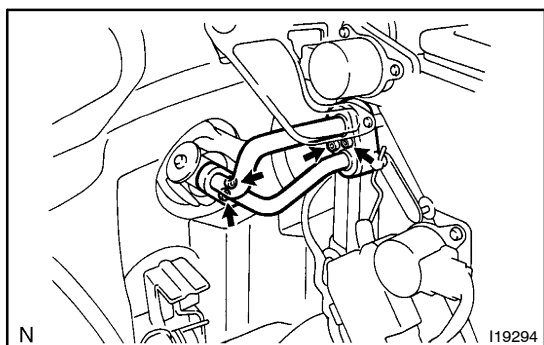

### 3. REMOVE EXPANSION VALVE

(a) Pry out the packings.

HINT:

At the time of installation, please refer to the following item.

Do not reuse the packing.

(b) Using SST, remove the 4 bolts and separate the expansion valve and tube and accessory.

SST 07110-61050

**Torque: 4.1 N·m (42 kgf·cm, 36 in·lbf)**

**NOTICE:**

**Cap the open fittings immediately to keep moisture or dirt out of the system.**

HINT:

At the time of installation, please refer to the following item.

Lubricate 6 new O-rings with compressor oil and install them to the tube and valve.