
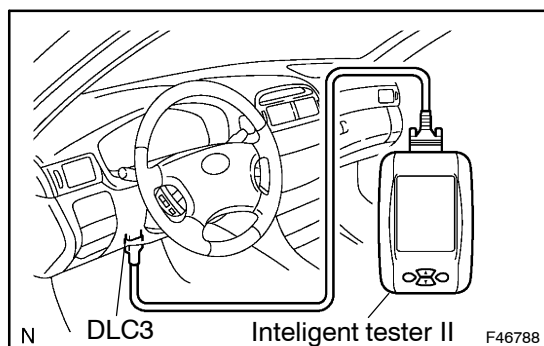
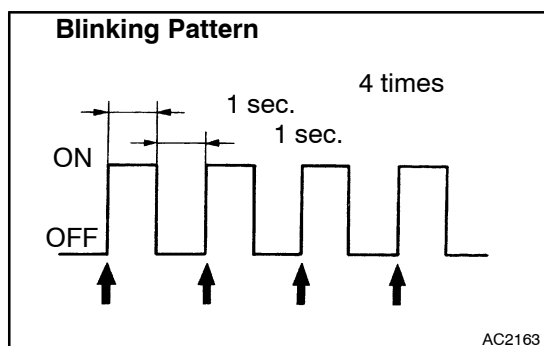
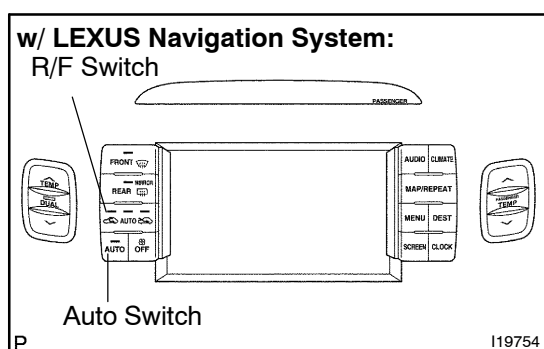


DTC CHECK/CLEAR

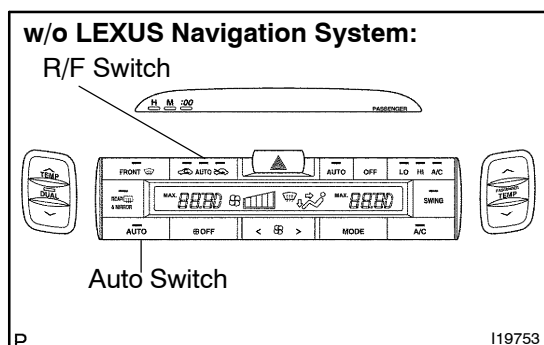

1. INDICATOR CHECK

- (a) Turn the ignition switch to the ON position while pressing the A/C control AUTO switch and R/F (Recirculation/Fresh) switch simultaneously.

- (b) Check that the all indicators come on and go off 4 times in succession at 1 second intervals.

HINT:

- After the indicator check is completed, the system enters the DTC mode automatically.
- Press the "OFF" switch to cancel the indicator check.

2. DTC CHECK USING INTELLIGENT TESTER II

- (a) Connect the intelligent tester II to the DLC3.
- (b) Read the DTC following the prompts on the tester screen. Please refer to the intelligent tester II operator's manual for further details.
- (c) Clear the DTCs.

HINT:

After repairing the malfunctions, clear the DTC.

- (1) Connect the intelligent tester II to the DLC3.
- (2) Turn the ignition switch to the ON position.
- (3) Erase the DTCs following the prompts on the tester screen.

HINT:

Refer to the intelligent tester II operator's manual for further details.