


REMOVAL

1. **DISCONNECT CONNECTOR**
2. **REMOVE REAR WHEEL**

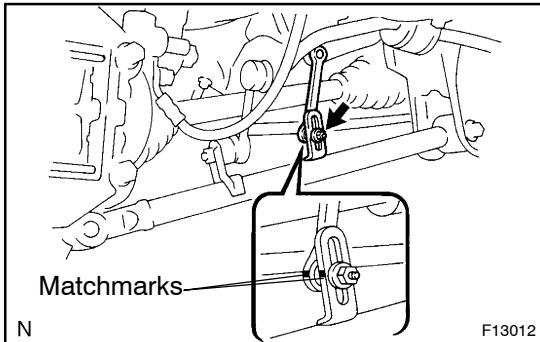

3. **DISCONNECT HEIGHT CONTROL SENSOR LINK**
 - (a) Place matchmarks on the height control sensor link and bracket.
 - (b) Remove the nut and disconnect the sensor link.
4. **REMOVE REAR HEIGHT CONTROL SENSOR**

Remove the 2 bolts and rear height control sensor.