


DTC CHECK/CLEAR

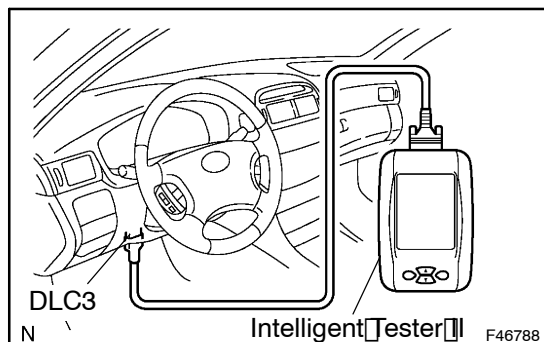

1. CHECK DTCs

- (a) Prepare the Intelligent Tester II.
- (b) Connect the Intelligent Tester II to the DLC3 at the lower part of the instrument panel.
- (c) Turn the ignition switch to the ON position and turn the Intelligent Tester II on.
- (d) Use the Intelligent Tester II to check the DTCs and the freeze frame data, and note or print the results. (Refer to the operator's manual for operating instructions.)
- (e) [See page 05-2237](#) to confirm the details of the DTCs.

2. CLEAR DTCs

- (a) The following procedures clear the DTCs and freeze frame data.
 - (1) When using the intelligent tester II:

Operate the intelligent tester II. (Refer to the operator's manual for operating instructions.)
 - (2) When not using the intelligent tester II:

Disconnect the battery terminals.