


ADJUSTMENT


1. PULL UP COVER

- (a) Before making adjustments, pull up the cover.
- (b) Employ the same manner described above to the other side.

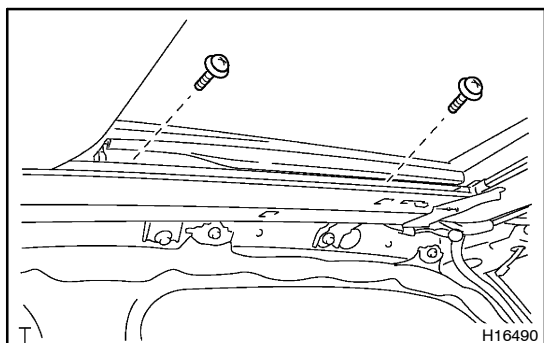


2. TO ADJUST FORWARD OR REARWARD

- (a) Loosen the sliding roof glass installation screws.

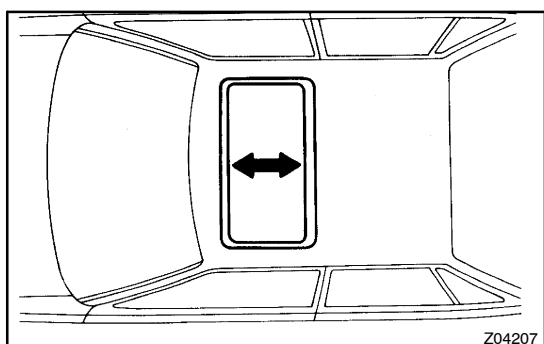

- (b) Adjust the sliding roof glass forward and rearward.

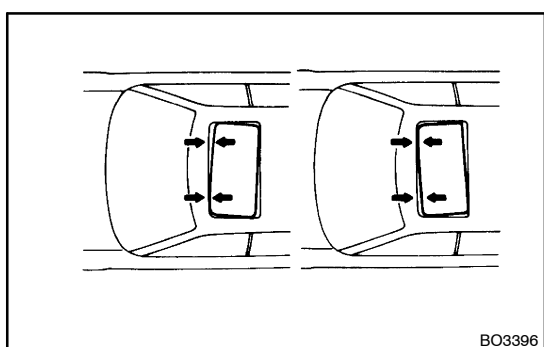


3. TO ADJUST CLEARANCE

(Difference in left and right clearance)

- (a) When the front or rear alignment is not correct, remove the drive gear and sliding roof glass, then adjust the drive rail.

NOTICE:

Remove the drive gear with sliding roof fully closed.

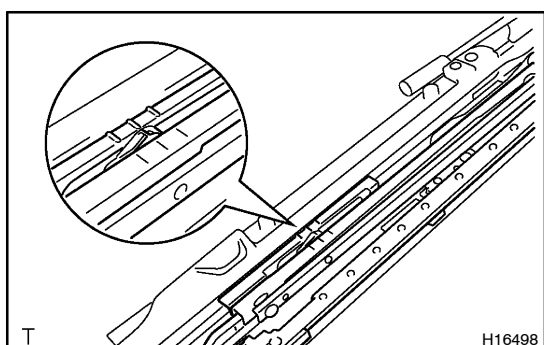

- (b) Adjust by sliding the cable forward or rearward to align the 2 marks as shown in the illustration.
- (c) Install the drive gear and sliding roof glass.