


# HEIGHT CONTROL SENSOR SUB-ASSY FRONT LH REPLACEMENT


6511H-01

## 1. REMOVE FRONT WHEEL

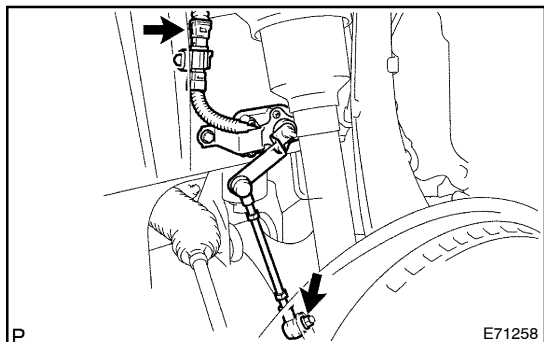


## 2. REMOVE HEIGHT CONTROL SENSOR SUB-ASSY FRONT LH

- Disconnect the connector.
- Remove the nut and disconnect the height control sensor link.

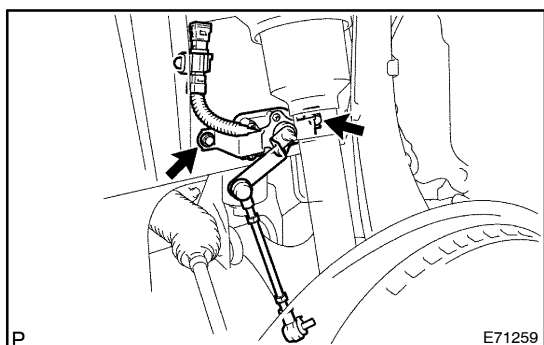


- Remove the 2 bolts and the height control sensor sub-assy front LH.

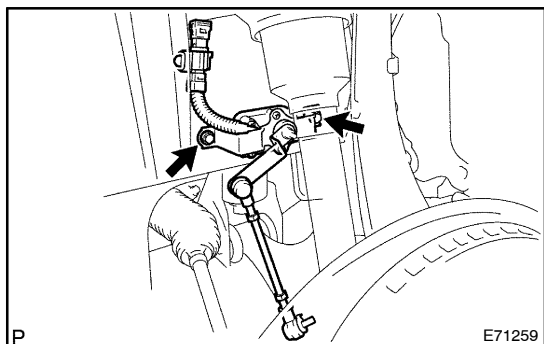

## 3. INSTALL HEIGHT CONTROL SENSOR SUB-ASSY FRONT LH

- Install the height control sensor sub-assy LH with the 2 bolts.

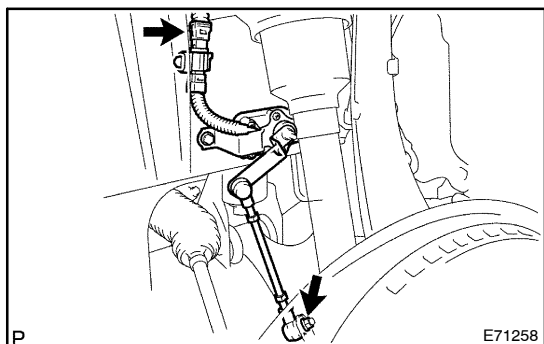

- Install the height control sensor link with the nut.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in. lbf)**
- Connect the connector.

## 4. INSTALL FRONT WHEEL

**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**

## 5. HEADLIGHT AIM ONLY (SEE PAGE 65-12)