


EFI MAIN RELAY INSPECTION

F10YC-01

1. REMOVE EFI MAIN RELAY (Marking: EFI)

LOCATION: In the engine compartment relay box.

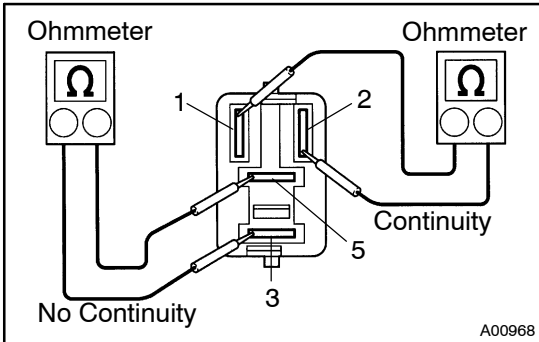


2. INSPECT EFI MAIN RELAY CONTINUITY

- Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

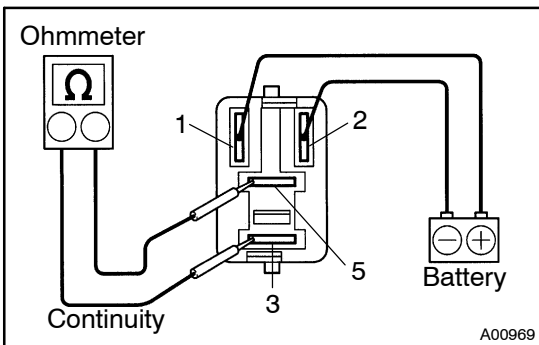

3. INSPECT EFI MAIN RELAY OPERATION

- Apply battery voltage across terminals 1 and 2.
- Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

4. REINSTALL EFI MAIN RELAY