


# TERMINALS OF ECU

## 1. AIRBAG SENSOR ASSY CENTER

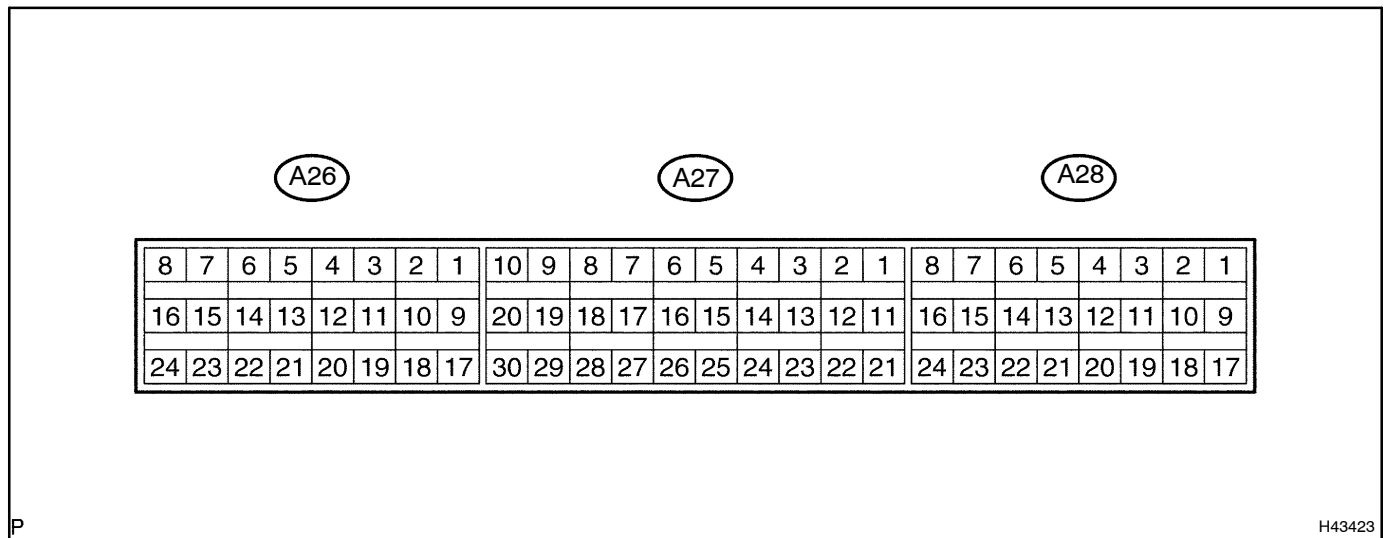

Terminal No.	Terminal Symbol	Destination
A26-1	SFL+	Front seat airbag assy LH (Side squib LH)
A26-2	SFL-	Front seat airbag assy LH (Side squib LH)
A26-3	ICL-	Curtain shield airbag assy LH (Curtain shield squib LH)
A26-4	ICL+	Curtain shield airbag assy LH (Curtain shield squib LH)
A26-5	PL+	Front seat outer belt assy LH (Front P/T squib LH)
A26-6	PL-	Front seat outer belt assy LH (Front P/T squib LH)
A26-7	PLR-	Rear seat 3 point type outer belt assy (Rear P/T squib LH)
A26-8	PLR+	Rear seat 3 point type outer belt assy (Rear P/T squib LH)
A26-9	LSP+ (*1) FSL+ (*2)	Seat position airbag sensor (*1) Occupant detection sensor (*2)
A26-10	LBE+	Front seat inner belt assy LH
A26-13	SSL+	Side airbag sensor assy LH
A26-17	LSP- (*1) FSL- (*2)	Seat position airbag sensor (*1) Occupant detection sensor (*2)
A26-19	VUPL	Side airbag sensor assy LH
A26-20	VUCL	Airbag sensor rear LH
A26-21	ESL	Side airbag sensor assy LH
A26-22	ESCL	Airbag sensor rear LH
A26-23	SSL-	Side airbag sensor assy LH
A27-1	P2+	Front passenger airbag assy (P squib, Dual stage - 2nd step)
A27-2	P2-	Front passenger airbag assy (P squib, Dual stage - 2nd step)
A27-3	P-	Front passenger airbag assy (P squib)
A27-4	P+	Front passenger airbag assy (P squib)
A27-5	D+	Horn button assy (D squib)
A27-6	D-	Horn button assy (D squib)
A27-7	D2-	Horn button assy (D squib, Dual stage - 2nd step)
A27-8	D2+	Horn button assy (D squib, Dual stage - 2nd step)
A27-9	DK+	Instrument panel airbag assy lower No.1 (Knee airbag (D side) squib) (*1) Instrument panel airbag assy lower No.2 (Knee airbag (D side) squib) (*2)

## DIAGNOSTICS - SUPPLEMENTAL RESTRAINT SYSTEM

Terminal No.	Terminal Symbol	Destination
A27-10	DK-	Instrument panel airbag assy lower No.1 (Knee airbag (D side) squib) (*1) Instrument panel airbag assy lower No.2 (Knee airbag (D side) squib) (*2)
A27-13	MPX1	Combination meter assy (SRS warning light)
A27-16	SIL	DLC3
A27-18	GSW	Theft deterrent ECU (Door lock control receiver)
A27-19	PK+	Instrument panel airbag assy lower No.2 (Knee airbag (P side) squib) (*1) Instrument panel airbag assy lower No.1 (Knee airbag (P side) squib) (*2)
A27-20	PK-	Instrument panel airbag assy lower No.2 (Knee airbag (D side) squib) (*1) Instrument panel airbag assy lower No.1 (Knee airbag (P side) squib) (*2)
A27-21	IG2	Ignition switch
A27-22	MPX2	Passenger side J/B ECU
A27-25	E1	Ground
A27-26	E2	Ground
A27-27	-SR	Airbag sensor front RH
A27-28	-SL	Airbag sensor front LH
A27-29	+SR	Airbag sensor front RH
A27-30	+SL	Airbag sensor front LH
A28-1	PRR+	Rear seat 3 point type outer belt assy (Rear P/T squib RH)
A28-2	PRR-	Rear seat 3 point type outer belt assy (Rear P/T squib RH)
A28-3	PR-	Front seat outer belt assy RH (Front P/T squib RH)
A28-4	PR+	Front seat outer belt assy RH (Front P/T squib RH)
A28-5	ICR+	Curtain shield airbag assy RH (Curtain shield squib RH)
A28-6	ICR-	Curtain shield airbag assy RH (Curtain shield squib RH)
A28-7	SFR-	Front seat airbag assy RH (Side Squib RH)
A28-8	SFR+	Front seat airbag assy RH (Side Squib RH)
A28-12	SSR+	Side airbag sensor assy RH
A28-15	RBE+	Front seat inner belt assy RH
A28-16	FSR+ (*1) RSP+ (*2)	Occupant detection sensor (*1) Seat position airbag sensor (*2)
A28-18	SSR-	Side airbag sensor assy RH
A28-19	ESCR	Airbag sensor rear RH
A28-20	ESR	Side airbag sensor assy RH
A28-21	VUCR	Airbag sensor rear RH
A28-22	VUPR	Side airbag sensor assy RH
A28-24	FSR- (*1) RSP- (*2)	Occupant detection sensor (*1) Seat position airbag sensor (*2)

\*1: LHD

\*2: RHD