


DUCT SENSOR INSPECTION

1. **Driver side:**
REMOVE COMBINATION METER (See page [BO-131](#))
2. **Passenger side:**
REMOVE FINISH PANEL ASSEMBLY
(See page [BO-131](#))

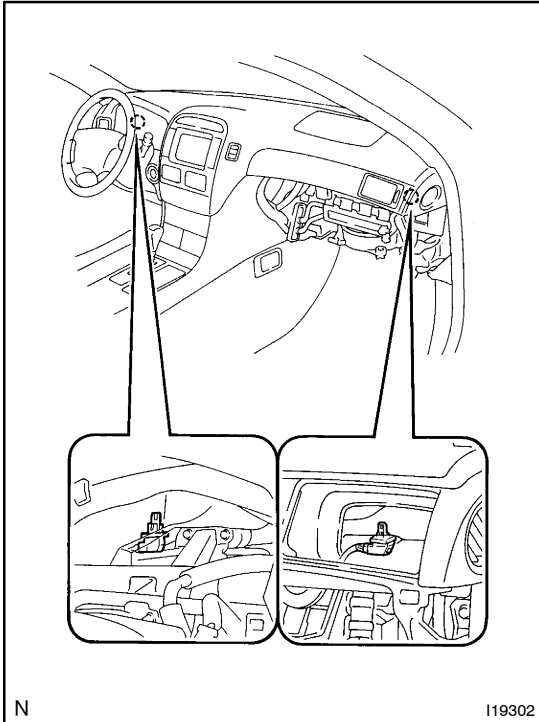

3. **REMOVE SENSOR**
 - (a) Disconnect the 2 connectors.
 - (b) Remove the 2 sensors.
4. **Driver side:**
INSPECT DUCT SENSOR CIRCUIT
(See page [DI-1784](#))
5. **Passenger side:**
INSPECT DUCT SENSOR CIRCUIT
(See page [DI-1787](#))
6. **INSTALL SENSOR**
7. **Driver side:**
INSTALL COMBINATION METER
8. **Passenger side:**
INSTALL FINISH PANEL ASSEMBLY