


# NAVIGATION ECU REPLACEMENT

67141-01


## HINT:

- COMPONENTS: [SEE PAGE 75-44](#)
  - LOCATION: [SEE PAGE 67-2](#).
  - Installation is in the reverse order of removal.
1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT ([SEE PAGE 75-47](#))
  2. REMOVE DECK TRIM SIDE BOARD RH ([SEE PAGE 75-47](#))
  3. REMOVE REAR FLOOR FINISH PLATE ([SEE PAGE 75-47](#))
  4. SEPARATE LUGGAGE COMPARTMENT TRIM COVER FRONT ([SEE PAGE 75-47](#))
  5. REMOVE LUGGAGE COMPARTMENT TRIM COVER ASSY RH ([SEE PAGE 75-47](#))

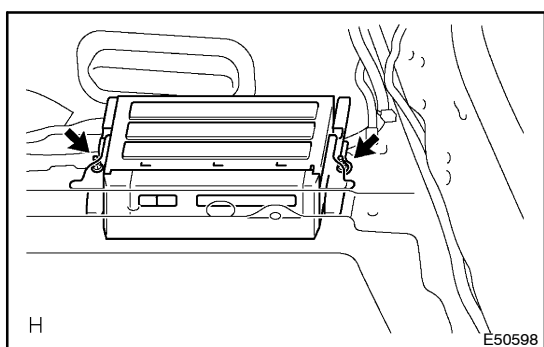


## 6. REMOVE NAVIGATION ECU W/BACKET


- (a) Disconnect the connector.
- (b) Remove the 2 nuts and navigation ECU with bracket.

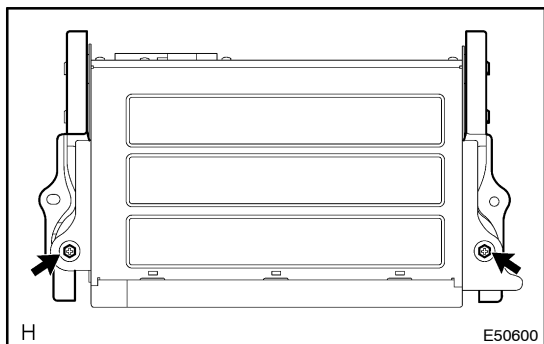

## 7. REMOVE NAVIGATION ECU

- (a) Remove the 2 screws.
- (b) Remove the navigation ECU with bracket along the guide as shown in the illustration.

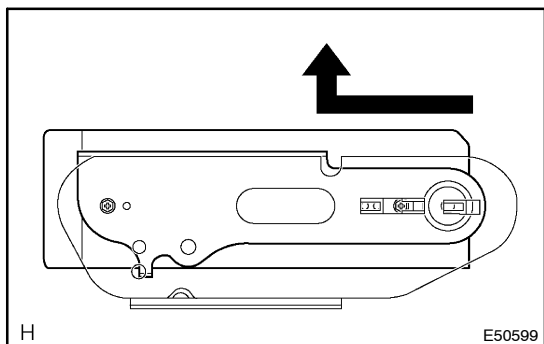

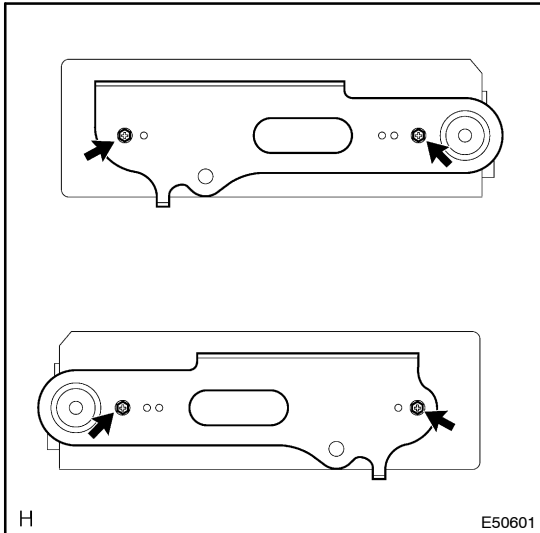

(c) Remove the 4 screws and 2 brackets.

HINT:

After the replacement, perform the screen noise automatic adjustment when screen noise occurs ([see page 05-1806](#)).