


## DIAGNOSIS SYSTEM

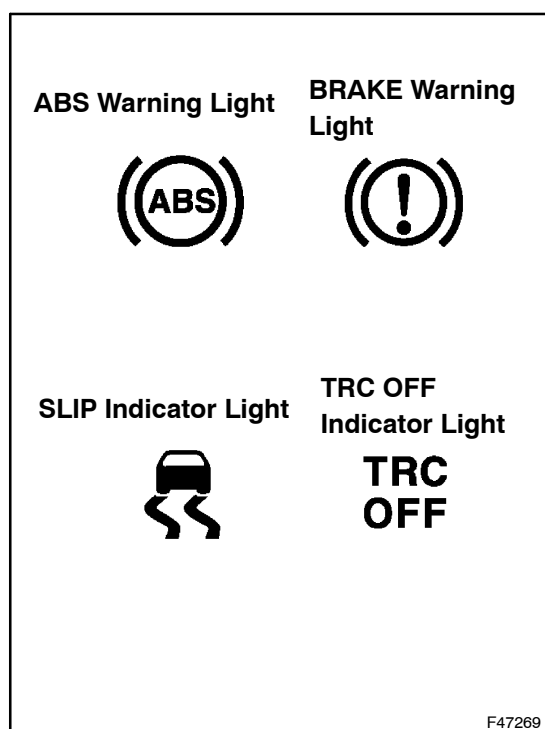

### 1. DIAGNOSIS

- (a) If the skid control ECU detects a malfunction, the ABS, BRAKE, VSC warning (Multi-information display) and TRC OFF indicator light will come on in accordance with the trouble area to warn the driver.

The table below indicates which lights come on when there is a malfunction in a particular function.

Item / Trouble Area	ABS	EBD	(Brake Assist)	TRC	VSC
ABS Warning Light	○	○	○	–	–
Brake Warning Light	–	○	–	–	–
TRC OFF Indicator Light	○	○	○	○	○
VSC Warning (Multi Information Display)	○	○	○	○	○

○: Light ON

–: Light OFF

- The DTCs are simultaneously stored in memory. The DTCs can be read by connecting the intelligent tester II.
- This system has a sensor signal check function (Test Mode).  
The DTC can be read by connecting the SST between terminals TS and CG of DLC3 and observing the blinking of the ABS warning light and VSC information, or by connecting the intelligent tester II.