


## INSPECTION

### 1. PRETENSIONER IS NOT ACTIVATED

(a) Perform a diagnostic system check (See page DI-484).

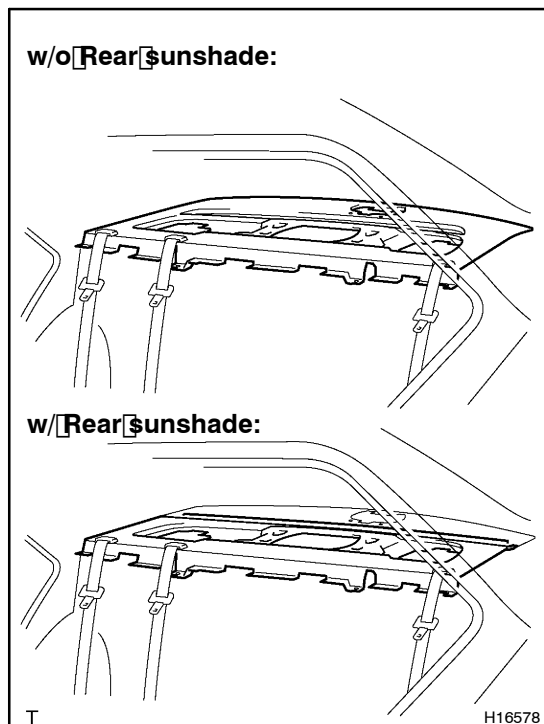


(b) Perform a visual check which includes the following items with the rear seat outer belt removed from the vehicle.

- Check for cuts and cracks in, or marked discoloration on the package tray trim panel.
- Check for cuts and cracks in wire harness, and for chipping in connectors.



- Check for deformation of the package tray panel.

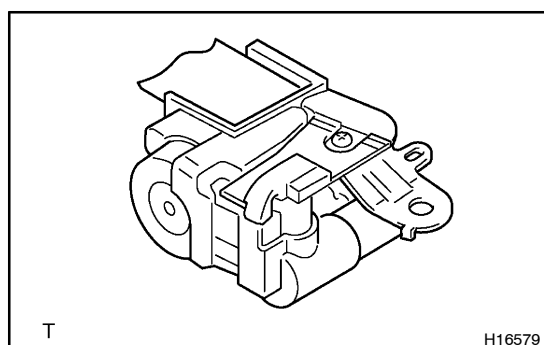

- Check for cuts and minute cracks in wire harness or marked discoloration on the rear seat outer belt.


### CAUTION:

For removal and installation of the rear seat outer belt, see page BO-204 and BO-215.

Be sure to follow the correct procedure.

### 2. PRETENSIONER IS ACTIVATED

(a) Perform a diagnostic system check (See page DI-484).

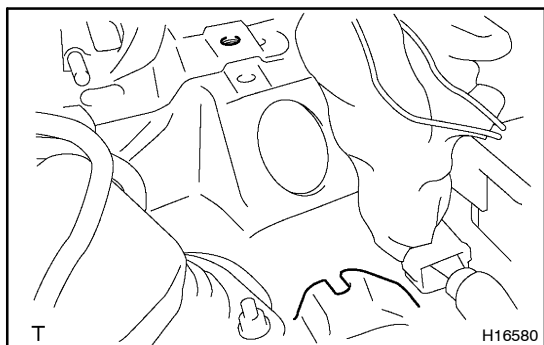

- (b) Perform a visual check which includes the following items with the rear seat outer belt removed from the vehicle.
- Check for deformation of the package tray panel.
  - Check for damage on the connector and wire harness.