


ABS & TRACTION ACTUATOR ASSY ON-VEHICLE INSPECTION

320WY-02

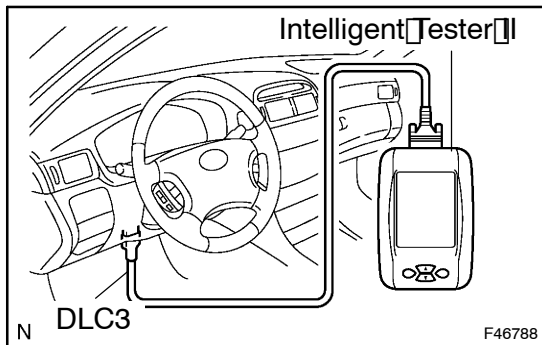

1. CONNECT INTELLIGENT TESTER II:

- Connect the Intelligent Tester II to the DLC3.
- Start the engine and run at idle.
- Select the ACTIVE TEST mode on the Intelligent Tester II.

HINT:

Please refer to the Intelligent Tester II operator's manual for further details.

2. INSPECT ACTUATOR MOTOR OPERATION

- With the motor relay on, check the actuator motor operation noise.
- Turn the motor relay off.
- Depress the brake pedal and hold it for approximately 15 seconds. Check that the brake pedal cannot be depressed.
- With the motor relay on, check that the pedal does not pulsate. If the pedal pulsates, replace the motor relay ([see page 05-429](#)).

NOTICE:

Do not keep a motor relay on for more than 5 seconds continuously. When operating it continuously, set an interval of more than 20 seconds.

- Turn the motor relay off and release the brake pedal.

3. INSPECT RIGHT FRONT WHEEL OPERATION

NOTICE:

Do not turn on a solenoid in a manner different than described below.

- With the brake pedal depressed, perform the following operations.
- Turn the SFRH and SFRR solenoids on simultaneously, and check that the pedal cannot be depressed.

NOTICE:

Do not keep a solenoid turned on for more than 10 seconds continuously. When operating it continuously, set an interval of more than 20 seconds.

- Turn the SFRH and SFRR solenoids off simultaneously, and check that the pedal can be depressed. If the pedal cannot be depressed, replace the ABS & TRACTION ACTUATOR ASSY.
- Turn the motor relay on, and check that the pedal returns.

NOTICE:

Do not keep a motor relay turned on for more than 5 seconds continuously. When operating it continuously, set an interval of more than 20 seconds.

- Turn the motor relay off and release the brake pedal.

4. INSPECT OTHER WHEEL OPERATION

- Using the same procedure, check the solenoids of the other wheels.

HINT:

Left front wheel: SFLH, SFLR

Right rear wheel: SRRH, SRRR

Left rear wheel: SRLH, SRLR

5. CLEAR DTC ([SEE PAGE 05-399](#))