


REMOVAL


1. REMOVE SEAT CUSHION ASSEMBLY

- (a) Pull the front portion of the seat cushion assembly and remove it.
- (b) w/ Seat heater:
Disconnect the connector.

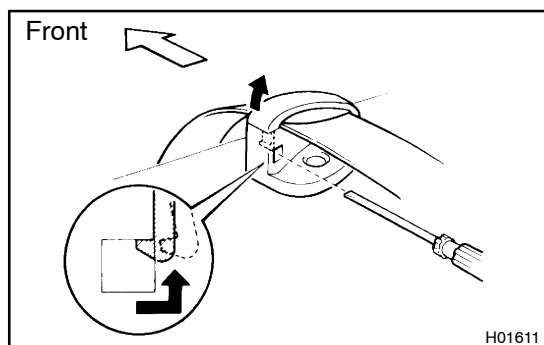

2. REMOVE SEATBACK ASSEMBLY

- (a) Using a screwdriver, remove the rear seat belt from the belt guide as shown in the illustration.
- (b) Employ the same manner described to the other sides.
- (c) Remove the LH and RH headrests.

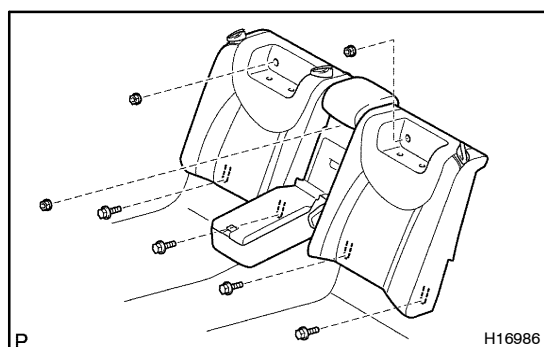

- (d) Remove the 4 bolts, 3 nuts then raise the seatback assembly upward to remove the seatback assembly.
- (e) w/ Seat heater:
Disconnect the connector.