


REPLACEMENT

HINT:

Installation is in the reverse order of removal.

1. **PRECAUTION** (SEE PAGE 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL** (SEE PAGE 60-1)
3. **REMOVE INSTRUMENT CLUSTER FINISH PANEL CENTER LOWER** (SEE PAGE 71-6)
4. **REMOVE INSTRUMENT CLUSTER FINISH PANEL END** (SEE PAGE 71-6)
5. **REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.1** (SEE PAGE 71-6)
6. **REMOVE COIN BOX ASSY** (SEE PAGE 71-6)
7. **REMOVE OUTER MIRROR SWITCH ASSY** (SEE PAGE 71-6)
8. **REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY NO.1** (SEE PAGE 71-6)

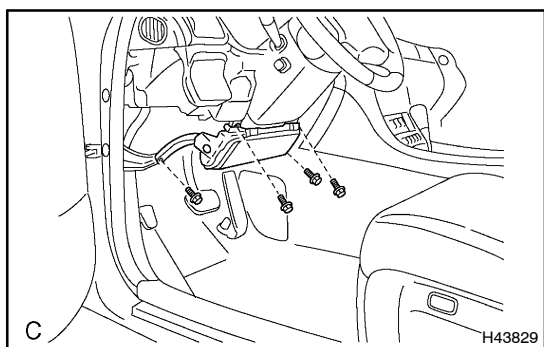

9. REMOVE INSTRUMENT PANEL AIR BAG ASSY LOWER NO.1

- (a) Disconnect the connector from the instrument panel air bag assy lower No.1.

NOTICE:

When handling the air bag connector, take care not to damage the air bag wire harness.

- (b) Remove the 4 bolts and the instrument panel air bag assy lower No.1.

10. INSPECT INSTRUMENT PANEL AIR BAG ASSY LOWER NO.1 (SEE PAGE 60-16)

11. INSTALL INSTRUMENT PANEL AIR BAG ASSY LOWER NO.1

- (a) Install the instrument panel air bag assy lower No.1 with the 4 bolts.

Torque: 10 N·m (102 kgf·cm, 7 ft. lbf)

- (b) Connect the connector to the instrument panel air bag assy lower No.1.

NOTICE:

When handling the air bag connector, take care not to damage the air bag wire harness.

12. CONNECT BATTERY NEGATIVE TERMINAL

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Page
Power Window Control System	01-20
Front Power Seat Control System	01-20
Back Guide Monitor System	01-20

13. INSPECT SRS WARNING LIGHT (SEE PAGE 05-954)