


POWER WINDOW CONTROL SYSTEM

LOCATION

BE0CA-04

Power Window Master Switch

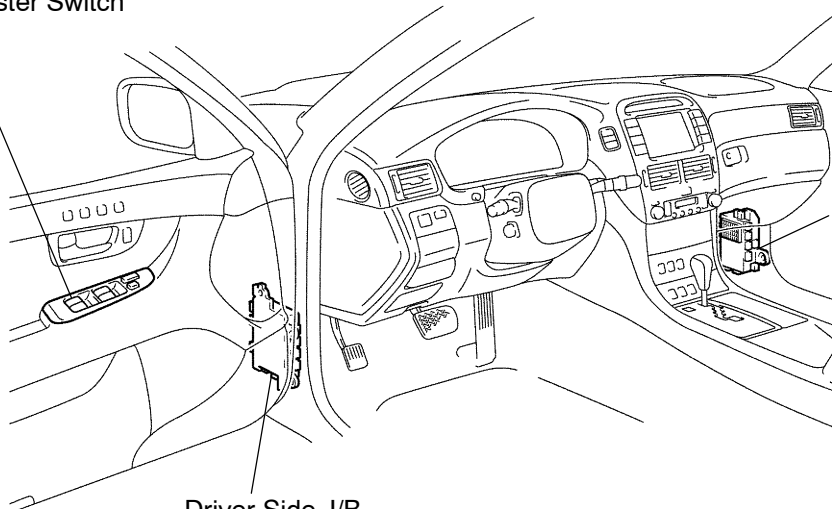


Driver Side J/B

- D-DOOR Fuse
- MPX-IG Fuse

Passenger Side J/B

- P-DOOR Fuse
- MPX-IG Fuse

Power Window Switch

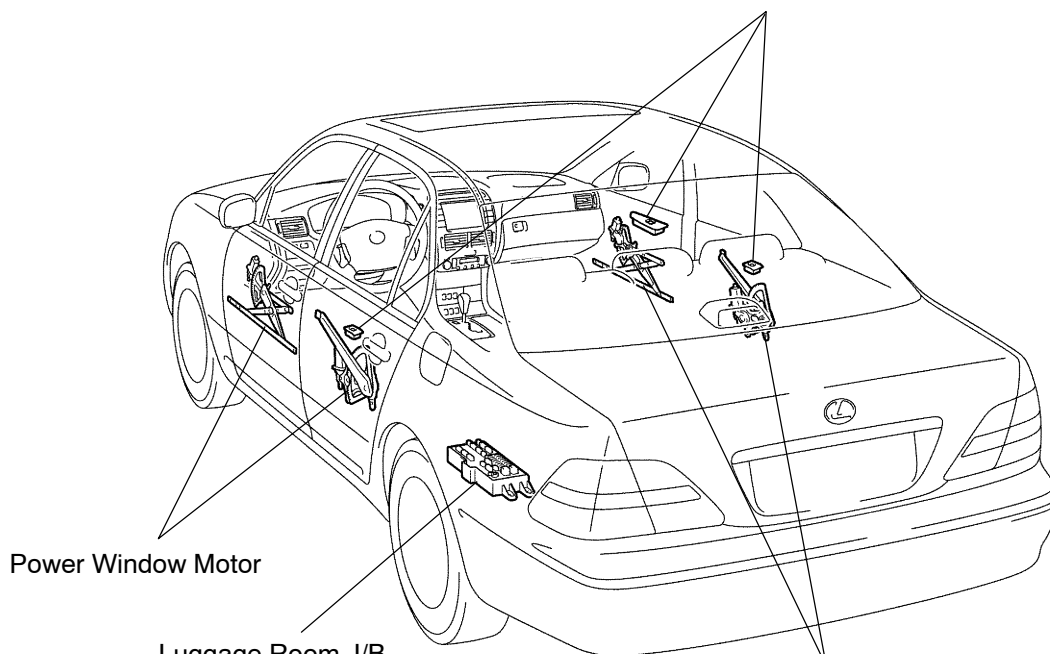

Power Window Motor

Luggage Room J/B

- RR DOOR Fuse
- RL DOOR Fuse
- Body ECU No. 4

Power Window Motor