


POWER SOURCE CIRCUIT (STEREO COMPONENT TUNER)

CIRCUIT DESCRIPTION


This circuit provides the power to the stereo component tuner.

WIRING DIAGRAM

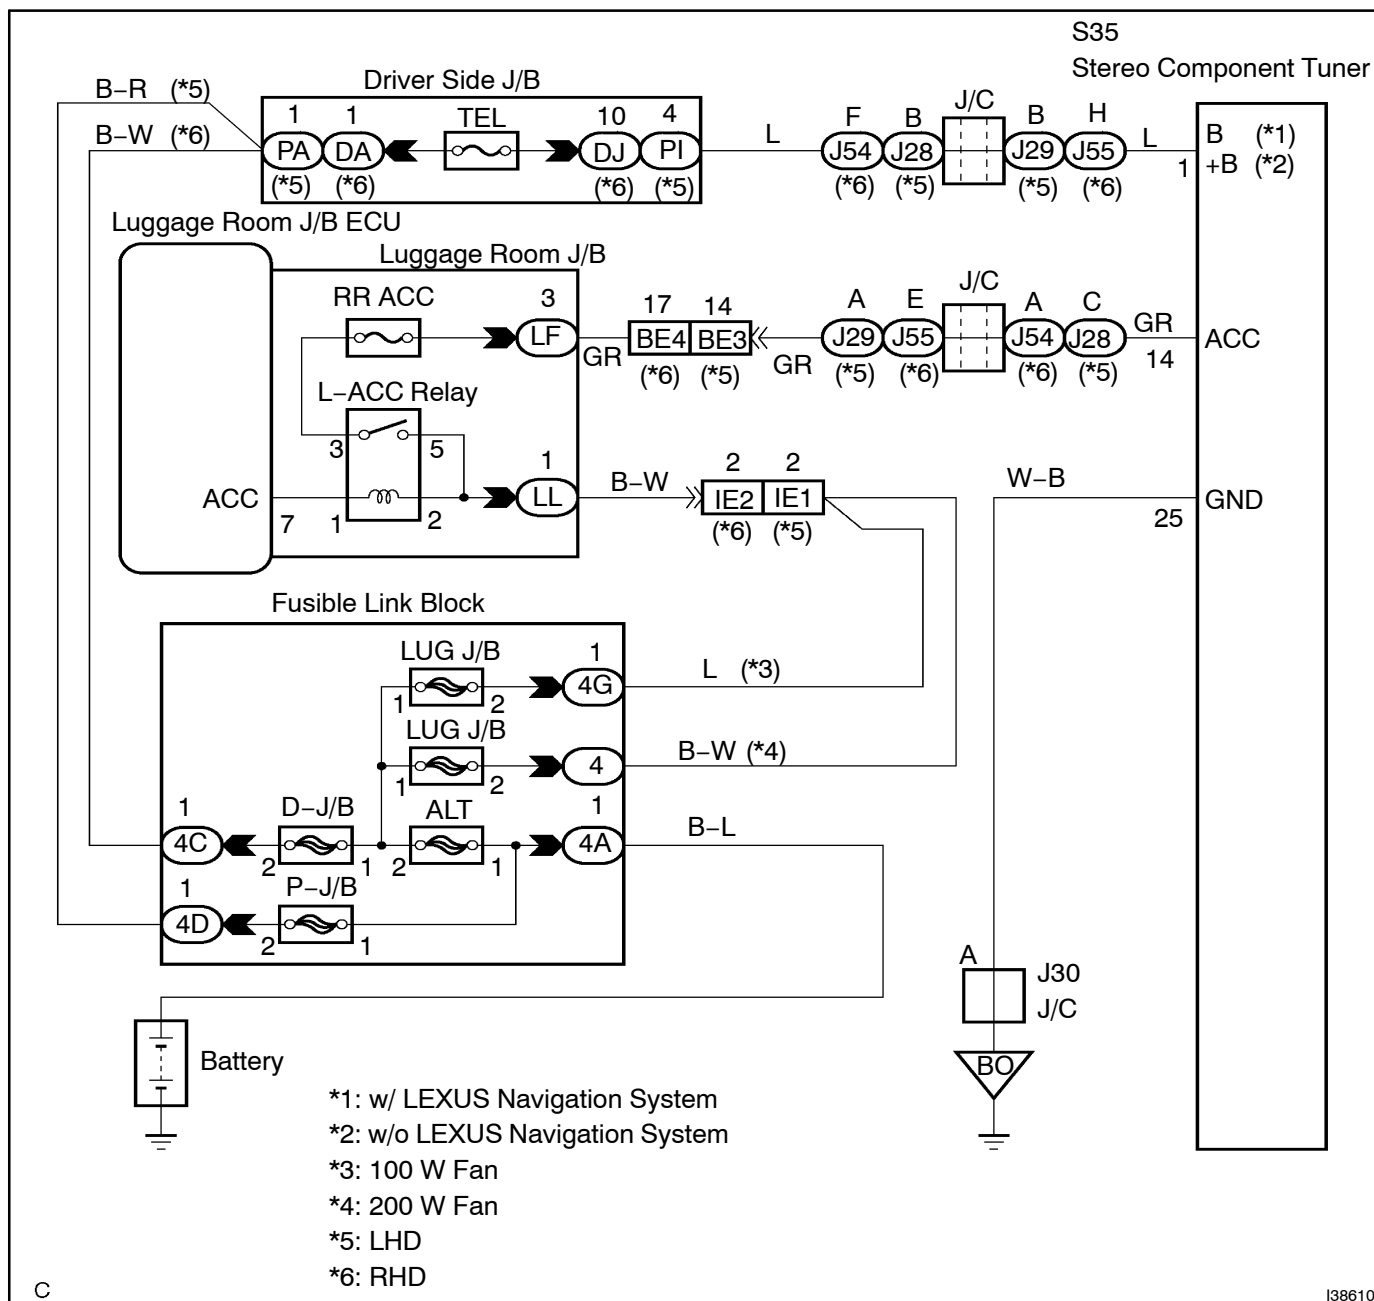

INSPECTION PROCEDURE

1 INSPECT STEREO COMPONENT TUNER (B, ACC, GND)

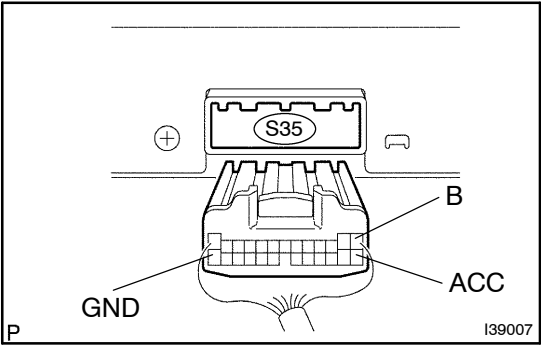

- (a) Disconnect the stereo component tuner connector S35.
- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
GND - Body ground	Always	Below 1 Ω

- (c) Measure the voltage according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
B ¹ , +B ^{*2} - GND	Always	10 to 14 V
ACC - GND	Ignition SW ACC	10 to 14 V

*1: w/ LEXUS Navigation System

*2: w/o LEXUS Navigation System

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE OR DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05-1660 OR 05-1673)