


LOCATION

Fusible Link Block


- LUG J/B Fuse
- ALT Fuse

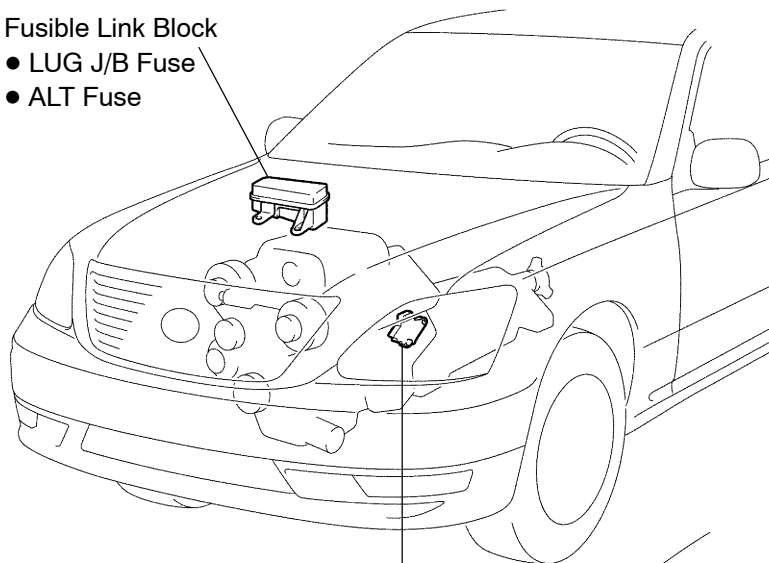

Neutral Start Switch

Multi-display


Combination Meter

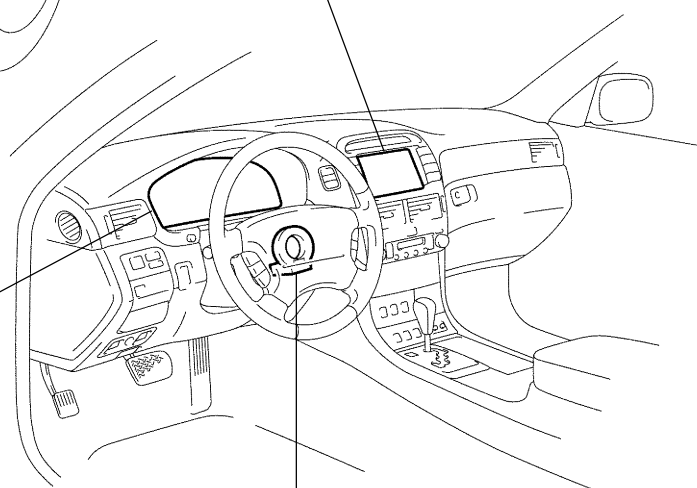

Steering Angle Sensor

Luggage Room J/B

- RR ECU-B Fuse
- RR ACC Fuse
- RR IG Fuse
- L-ACC Relay
- L-IG1 Relay

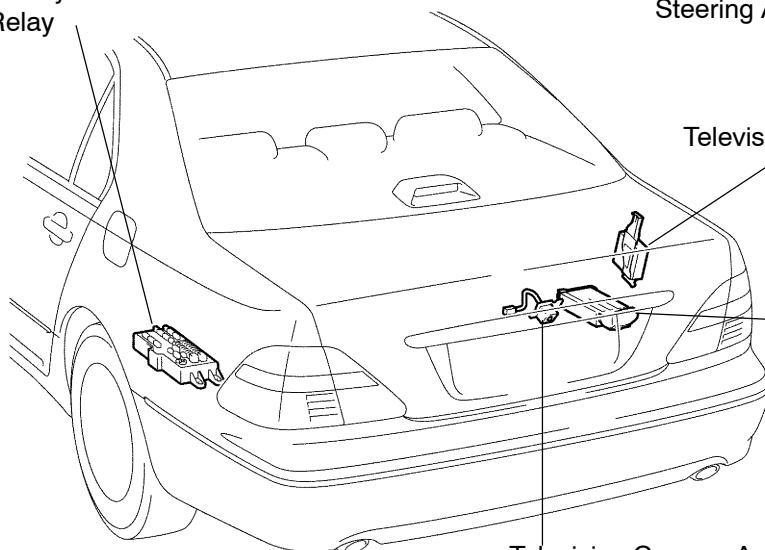

Television Camera ECU

Navigation ECU

Television Camera Assy